

Installation Guide **Included Installation Instructions**



Network Camera | For professional use only |

Model No. WV-S4576L Outdoor use WV-S4576LM Outdoor use

WV-S4556L Outdoor use


WV-S4556LM Outdoor use



About the user manuals

Product documentation is composed of the following documents.

- Installation Guide (this document): Provides information about "Precautions", "Precautions for installation" and the installation method.
- Basic Information (in the following manual website): Provides information about
- "Precautions for use" and "Detail specifications".
 Operating Instructions (in the following manual website): Explains how to perfothe settings and how to operate this camera.

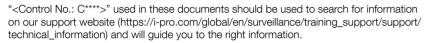

- Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.
- SDXC/ SDHC/ SD memory card is described as SD memory card.
- The external appearance and other parts shown in this manual may differ from the actual product within the scope that will not interfere with normal use due to improvement of the product.

For U.S. and Canada:

i-PRO Americas Inc.

https://www.i-pro.com/

For Europe and other countries:

i-PRO Co., Ltd. Fukuoka, Japan https://www.i-pro.com/

i-PRO EMEA B.V. UK Branch 1010 Cambourne Business Park, Cambridgeshire CB23 6DP

Authorised Representative in EU: i-PRO EMEA B.V. Laarderhoogtweg 25, 1101 EB Amsterdam, Netherlands

* PGQX2489YA*

expressly approved by the party responsible for com-

pliance could void the user's authority to operate the

WV-S4556L/WV-S4556LM

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference,

and (2) this device must accept any interference

received, including interference that may cause

Supplier's Declaration of conformity

Model No.: WV-S4576L/WV-S4576LM

8550 Fallbrook Drive, Suite 200 Houston,

Support Contact: 1-800-513-5417



© i-PRO Co., Ltd. 2022

Cs0921-1042 Printed in China

Disposal of Old Equipment and Batteries

Only for European Union and countries with recycling systems

These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to

applicable collection points in accordance with your national legislation. By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local authority. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

equipment.

Trade name: i-PRO

Responsible Party:

i-PRO Americas Inc.

undesired operation.

Texas 77064

For U.S.A.

Note for the battery symbol (bottom symbol)

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

For U.S.A.

NOTE: This equipment has been tested and found to FCC CAUTION: Changes or modifications not comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harm-

ful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

For U.S.A.

The model number and serial number of this product may be found on the surface of the unit. You should note the model number and serial number of this unit in the space provided and retain this book as a permanent record of your purchase to aid identification in the event of theft. Model No.

Serial No.

For Canada CAN ICES-3(A)/NMB-3(A)

Méthode d'installation	Vis de fixa- tion recom- mandée	La capacité de traction mini- male requise			
Quand la caméra vidéo est directement installée au plafond ou sur le mur.	M4 x 16 mm {5/8 pouces} / 4 él.*	196 N {44 lbf}			

* La longueur de la vis est un exemple lors de l'installation de la caméra au plafond ou sur un mur robuste d'une épaisseur de 20 mm {25/32 pouces}

Caution:

- The DC power supply connected to the camera must be in the same building.
- The network camera is only intended for a connection to an ethernet or PoE network without routing to the outside plant
- This product has no power switch. Be sure to install disconnect devices such as a circuit breaker to shut down the main power of power supplying equipment
- to this product. Only connect 12 V DC Class 2 power supply (UL 1310/CSA 223) or limited power source (IEC/EN/UL/ CSA 60950-1,IEC/EN/UL/CSA 62368-1 Annex Q) or
- IEC/EN/UL/CSA 62368-1 PS2. Before attempting to connect or operate this product, please read these instructions carefully.

• This product is not suitable for use in locations where

- children are likely to be present
- Do not install this product in locations where ordinary persons can easily reach.
- This product is a professional equipment. • For information about screws and other parts required for installation, refer to the corresponding
- Direct current symbol

section of this document.

Notice:

Precautions

Do not insert any foreign objects.

Fire or electrical shock may be caused if water or any foreign objects, such as metal objects, enter inside the unit. Turn the power off immediately and contact qualified service personnel for service.

■ Do not use this product in an inflammable atmosphere.

Failure to observe this may cause an explosion resulting in injury.

■ Avoid installing this product in the locations where salt damage occurs or corrosive gas is produced. Otherwise, the mounting portions will deteriorate and injury or accidents due to a fall of the product may occur.

■ Do not strike or give a strong shock to this product.

Failure to observe this may cause injury or fire. ■ Keep SD memory cards away from infants and children.

Otherwise, they may swallow the cards by mistake.

In this case, consult a doctor immediately.

■ Do not hang down from this product or use this product as a pedestal.

Failure to observe this may cause injury or accidents. ■ Do not damage the power cable

Do not damage, fabricate, twist, stretch, bundle, or forcibly bend the power cable. Do not place heavy objects on it,

and keep it away from heat sources. Use of a damaged power cable may cause electric shock, short circuit, or fire.

Consult the dealer for repair.

■ Do not install this product on a place that is greatly influenced by wind. Installation on a place where the wind speed is 60 m/s {approx. 134 mph} or more may cause a fall of the product

resulting in injury or accidents. ■ Do not sprinkle more water, exceeding the performance limit of waterproof with a high pressure

cleaning machine, etc.

Fire or electrical shock may be caused by immersion.

- Do not attempt to disassemble or modify this product. Failure to observe this may cause fire or electric shock. Consult the dealer for the repair or inspections.
- Do not install or clean the camera, or touch this product, the power cable or the connected cables during thunder storms Failure to observe this may cause electric shock.

Refer installation work to the dealer.

Installation work requires technique and experience. Failure to observe this may cause fire, electric shock, injury, or damage to the product. Be sure to consult the dealer

\blacksquare Stop the operation immediately when something is wrong with this product.

When smoke goes up from the product, the smell of smoke comes from the product, or the exterior of the product has deteriorated, continued use will cause a fire or fall of the product resulting in injury, or damage to the product. In this case, turn the power off immediately and contact qualified service personnel for service.

■ Select an installation area that can support the total weight.

Selecting an inappropriate installation surface may cause this product to fall down or topple over, resulting in injury or accidents. Installation work shall be started after sufficient reinforcement. ■ Periodic inspections shall be conducted.

Consult the dealer for the inspections.

■ The exclusively designed mount bracket shall be used. Failure to observe this may cause a drop resulting in injury or accidents.

Use the exclusively designed mount bracket for installation

■ The screws and bolts must be tightened to the specified torque.

Failure to observe this may cause a drop resulting in injury or accidents. ■ Turn the power off when do wiring of this product.

Failure to observe this may cause electric shock. In addition, short circuit or wrong wiring may cause fire.

Rust on the metal parts or screws may cause a fall of the product resulting in injury or accidents.

■ Install this product in a location high enough to avoid people and objects from bumping the product. Failure to observe this may cause injury

■ Do not install this product in locations subject to vibration.

Loosening of mounting screws or bolts may cause a fall of the product resulting in injury or accidents.

■ Correctly perform all wiring.

Short circuits in the wiring or incorrect wiring may cause fire or electrical shock.

■ Install the product securely on a wall or a ceiling in accordance with the installation instructions. Failure to observe this may cause injury or accidents.

■ Do not rub the edges of metal parts with your hand. Failure to observe this may cause injury.

■ Do not touch the metal part of the bottom side of the product.

ne product is in use. Direct skin contact with high temperature parts of the product may cause burns.

Turn the power off when cleaning this product.

Failure to observe this may cause injury

About notations

The following notations are used when describing the functions limited for specified models. The functions without the notations are supported by all models.

S4576L) The functions with this notation are available when using the model WV-S4576L (9-megapixel model).

(\$4576LM) The functions with this notation are available when using the model WV-S4576LM (9-megapixel model). S4556L The functions with this notation are available when using the model WV-S4556L (5-megapixel model).

\$4556LM The functions with this notation are available when using the model WV-S4556LM (5-megapixel model).

Open Source Software

- This product contains open source software licensed under GPL (GNU General Public License), LGPL (GNU
- Lesser General Public License), etc. · Customers can duplicate, distribute and modify the source code of the software under license of GPL and/or LGPL.
- For details concerning licensing and source code of open source software, click "Click here for OSS information" on "Support" page of the setup menu of this product and read the displayed content.
- Please note that we shall not respond to any inquiries regarding the contents of the source code.

Copyright

Except for open source software licensed under GPL/LGPL and so on, distributing, copying, disassembling, reverse compiling and reverse engineering of the software provided with this product are all expressly prohibited. In addition, exporting any software provided with this product violating export laws is prohibited.

Trademarks and registered trademarks

- Microsoft, Windows, Windows Media, Internet Explorer, Microsoft Edge, and ActiveX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries
- Intel and Intel Core are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries
- Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe in the United States and/or
- SDXC Logo is a trademark of SD-3C, LLC.
- iPad and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.
- Android and Google Chrome are trademark of Google LLC.
- Firefox is a trademark of the Mozilla Foundation in the US and other countries
- The word "QR Code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.
- All other trademarks identified herein are the property of their respective owners.

Precautions for installation

i-PRO Co., Ltd. assumes no responsibility for injuries or property damage resulting from failures arising out of improper installation or operation inconsistent with this documentation.

■ In order to prevent injury, the product must be securely mounted to a ceiling or wall according to Installation Guide

■ Installation area for this product Select an appropriate place for the installation area (such as a strong wall or ceiling) in your particular environment.

- Make sure that the installation area is strong enough to hold this product, such as a concrete ceiling.
- Do not mount the product on a plaster board or a wooden section because they are too weak. If the product is unavoidably mounted on such a section, the section shall be sufficiently reinforced.
- Install the product in areas that do not receive direct sunlight.

■ Do not place this product in the following places

- Locations where a chemical agent is used such as a swimming pool
- Locations subject to moisture or oil smoke such as a kitchen · Locations that have a specific environment that is subject to an inflammable atmosphere or solvents

Install the camera in the foundation area of the architecture or where sufficient strength is assured.

- Locations where a radiation, an X-ray, a strong radio wave or a strong magnetic field is generated • Locations near coasts directly subjected to sea breezes, or locations subject to corrosive gases such as from hot
- Locations where the temperature is not within the specified range
- Locations subject to vibrations, such as on vehicles, marine vessels, or above product lines (This product is not designed for on-vehicle use.)
- Locations subject to condensation as the result of severe changes in temperature
- Locations near rubber products (packing, rubber feet, etc.) ■ Screw tightening

■ About installing in low temperature environments

Do not use an impact driver. Use of an impact driver may damage the screws or cause tightening excessively.

When this product is installed and operated in low temperatures below -20 °C (-4 °F), it may not be able to be used normally. If you wait and the camera still does not start up, start using it once the temperature in the environment it is operated in goes above -20 °C (-4 °F). As the camera warms up, snow or frost accumulated on the dome cover will melt. However, it may not be defrosted from the dome cover depending on the ambient temperature or weather

■ About reflection of light from outside or IR light

A ghost may appear on the screen depending on the incident angle of external light. In the case of using the IR light, installation of a camera near a wall may cause reflection of infrared rays resulting in a part of the screen or the entire screen turning whitish

• Refer to our support website <Control No.: C0109> for image examples and measures to take.

■ Take notice of humidity

springs, volcanic regions, etc

Install this product when the humidity is low. If installation is performed when it is raining or in very humid conditions, the inside may be affected by humidity, causing mist-over inside the dome cover. ■ Protection from lightning

When cables are used outdoors, there is a chance that they may be affected by lightning. In such a case, install a lightning arrestor close to the camera, and make the length of the network cable between the camera and lightning

arrestor as short as possible to prevent the camera from being affected by lightning. ■ When noise disturbance may happen Noise may appear in video or audio near a strong electric field from a TV or radio antenna, motors and transformers. or a strong electric field/magnetic field from a power line (lamp line) of AC100 V or more. Conduct the power

distribution work to keep 1 m (3.28 feet) away from them or conduct the electric conduit work using metal pipes.

(Be sure to make ground connection of the metal pipes.)

Make sure to remove this product if it will no longer be used. ■ This product has no power switch.

When turning off the power, disconnect the power supply from the 12 V DC power supply or the PoE device. ■ About the battery

A battery is installed inside the camera. Do not leave the battery exposed in environments of excessive heat as a result of sunlight or fire.

■ Equipment classification and power source indication label

Specifications* *For further information, refer to the Basic Information.

Refer to the indication label on the bottom side of this unit for the equipment classification, power source, and other information.

Troubleshooting

Before requesting service, refer to "Troubleshooting" of Basic Information and Operating Instructions. Then, confirm

Power source *1:	DC 12 V	
	S4576L S4556L PoE (IEEE802.3af compliant)	
	S4576LM S4556LM PoE (IEEE802.3af compliant) (Alternative A)	
Power consumption *1:	\$4576L \$4576LM	
	DC 12 V: 1.1 A/Approx. 13.2 W PoE DC 48 V: 270 mA/Approx. 12.95 W (Class 0 device)	
	\$4556L \$4556LM	
	DC 12 V: 1.03 A/Approx. 12.4 W	
	PoE DC 48 V: 260 mA/Approx. 12.5 W (Class 0 device)	
Operating environment		
Ambient operating temperature:	-40 °C to +60 °C *2 {-40 °F to +140 °F}	
	(Power On range: -20 °C to +60 °C (-4 °F to +140 °F))	
Ambient operating humidity:	10 % to 100 % (no condensation)	

Storage environment Storage temperature: -30 °C to +60 °C {-22 °F to +140 °F} Storage humidity: | 10 % to 95 % (no condensation) VBS: 1.0 V [p-p]/75 Ω, composite, ø3.5 mm mini jack (Audio output terminal) Monitor output * An NTSC or PAL signal can be outputted from camera (for adjustment): (use software to select NTSC or PAL signal). EXT I/O terminals: (Alarm input 1/ Black & white input/ Auto time adjustment input): x1 ALARM IN2 (Alarm input 2/ ALARM OUT) : ALARM IN3 (Alarm input 3/ AUX OUT) : ø3.5 mm stereo mini jack Audio input: For microphone input: Recommended applicable microphone: Plug-in power type -48 dB±3 dB (0 dB=1 V/Pa, 1 kHz)) (Sensitivity of microphone: Approx. $2 k\Omega$ (unbalanced) Input impedance: $2.5 V \pm 0.5 V$ Supply voltage: For line input: Input level: Approx. -10 dBV Audio output *3 ø3.5 mm stereo mini jack (Audio output is monaural.) Output impedance: Approx. 600 Ω (unbalanced) Output level: -20 dBV IP66 (IEC 60529), Type 4X (UL50E) Waterproof *4 NEMA 4X compliant Shock resistance: 50 J (IEC 60068-2-75 compliant), IK10 (IEC 62262) Wind resistance: Up to 40 m/s {approx. 89 mph} Dimensions: When using base bracket: S4576L S4556L | ø164 mm \times 96.3 mm (H) {ø6-15/32 inches \times 3-25/32 inches (H)} Dome radius 35 mm {1-3/8 inches} When using attachment plate only: ø154 mm × 60.3 mm (H) {ø6-1/16 inches × 2-3/8 inches (H)} Dome radius 35 mm {1-3/8 inches} Mass: When using base bracket: S4576L S4556L Approx. 1.3 kg {2.87 lbs} When using attachment plate only: \$4576L) \$4576LM) Approx. 880 g {1.94 lbs} \$4556L \$4556LM Approx. 870 g {1.92 lbs} Finish: Aluminum die cast, i-PRO white Main body: **Outer fixing screws:** Stainless steel (Corrosion-resistant treatment) Dome cover: Polycarbonate resin, Clear Others: Tamper-resistant enclosure*5 EN50155 (railroad standard) S4576LM S4556LM ECE-R10 (E approval) *1 Refer to our support website <Control No.: C0106> for further information about Power source and Power

consumption informatio

*2 When using with the IR LED light constantly lit, the upper limit of the operating temperature range is +50 °C

*3 The audio output can be switched to the monitor output. Refer to the Operating Instructions on the our support web site for descriptions of how to switch the output.

*5 Component that has a structure on which the screws that are accessible after installation cannot be screwed

*4 Only when installation work is properly performed according to the Installation Guide and appropriate waterproof treatment is performed

Optional accessories*1 S4576L S4556L

or unscrewed using an ordinary screwdriver.

Ceiling mount bracket WV-Q105A* <i-PRO white brackets> WV-QWL500-W

WV-QCL501-W

WV-QWL501-W

WV-QAT500-W

Mount bracket: WV-QSR501-W

Wall Mount Bracket:

\$4576L \$4556L

Waterproof tape.

4P alarm cable.

2P power cable

1 sheet

1 pc.

. 1 pc. . 1 pc.

*1 Refer to our support website <Control No.: C0501, C0112> for other optional accessories that can be *2 This product can only be installed indoors when WV-Q105A is used to install it on the ceiling

1 for spare)

Standard accessories .. 1 pc. Code label*1 Installation Guide (this document)... IMPORTANT SAFETY INSTRUCTIONS.... 1 pc *1 This label may be required for network management. Use caution not to lose this label. The following parts are used during installation procedures. Bit (Hex wrench, screw Base bracket S4576L S4556L size 6.35 mm {1/4 inches} T20) Attachment plate 1 pc. Template A (for the attachment plate).. ..1 sheet Fixing screws for attachment plat Template B (for the base bracket)

Other items that are needed (not included)

Fixing screw

\$4576L \$4556L

\$4576L \$4556L

RJ45 waterproof connector cover

Seiling mount bracket

Attachment Pipe Bracket:


Wall Mount Bracket

Installation method		Recommended screw*1	Minimum pull-out strength*2
Gangbox/ Junction box : Mount the box using	e camera on the two-gangbox/ junction the attachment plate	M4 x 16 mm *3	
	e camera onto the ceiling or wall using the sket S4576L S4556L	1 200.	
When mounting the camera using the optional bracket		Refer to the Insteach bracket	stallation Guide for

*1 Select screws according to the material of the location that the camera will be mounted to. In this case, wood screws and nails should not be used. *2 For information about the minimum pull-out strength, refer to our support website <Control No.: C0120>. *3 The screw length is an example when installing the camera on a robust ceiling or wall with a thickness of

20 mm {25/32 inches} or more. • RJ45plug, Ethernet cable (category 5e or better, straight, all 4 pairs (8 pins))

• As necessary, audio input cable, audio output cable, alarm I/O cables, power supply cable

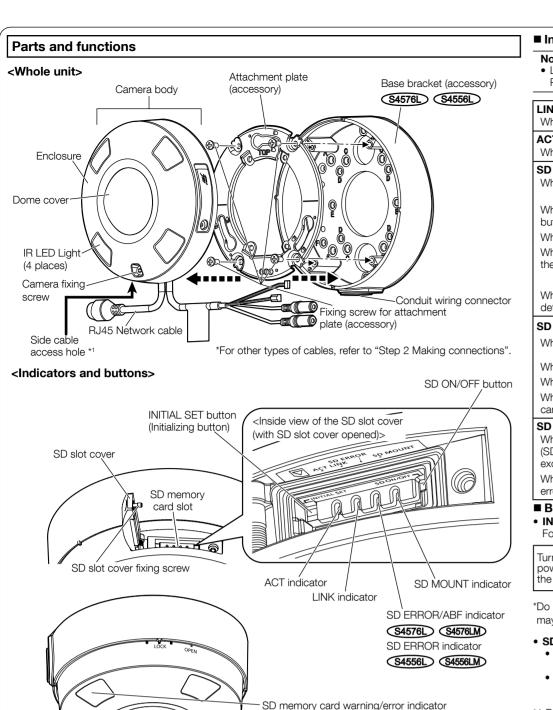

Dome cover

■ Indicators

 Lighting/blinking LED can be turned off with the software settings at any time. (The initial state is lighting or blinking.) Refer to the Operating instructions for information about settings.

LINK indicator When the camera is able to communicate with the connected	d device	Lights orange
ACT indicator		
When data is being sent via the network camera		Blinks green (accessing)
SD MOUNT indicator		
When an SD memory card is inserted and could be recognized		$\begin{array}{l} \text{Lights off} \rightarrow \text{Blinks greer} \\ \rightarrow \text{Lights off} \end{array}$
When data can be saved after the SD memory card is inserted and the SD ON/OFF button is pressed (less than 1 second)		Lights off → Lights green
When data can be saved to the SD memory card		Lights green
When the SD memory card is removed after holding down the SD ON/OFF button (about 2 seconds)	(recording)	Lights green → Blinks green → Lights of
	(waiting for recording)	Lights green → Lights of
When data cannot be saved to the SD memory card because an abnormality was detected or the SD memory card is configured not to be used		Lights off

SD ERROR/AF indicator S4576L S4576LM SD ERROR indicator S4556L S4556LM When ABF (Auto Back Focus) operation is being executed S4576L S4576LM

When the network camera is being started Lights red When an SD memory card is recognized normally Lights red → Lights off When the SD slot is not used or an abnormality is detected in SD card after the Lights red → Stays red camera has started

SD memory card warning/error indicator (off in the initial state)

When a warning status is detected SD memory card warning detection conditions: After the total use time has exceeded 6 years and the number of overwrite times has exceeded 2000)

When an error status is detected (SD memory card error detection conditions: Write Blinks red error, read error, etc.)

■ Buttons

• INITIAL SET button (Initializing)

Follow the steps below to initialize the network camera. Retry if the camera does not start up normally.


urn on the power of the Make sure minutes and the settings including the network settings will the INITIAL SET button* the camera the button

*Do not turn off the power of the camera during the process of initialization. Otherwise, it may fail to initialize and may cause malfunction

SD ON/OFF button

- When the SD ON/OFF button is pressed (less than 1 second), the SD MOUNT indicator lights up in green and data can be saved to the SD memory card.
- · When the SD ON/OFF button is held down (about 2 seconds), the SD MOUNT indicator lights off and the SD memory



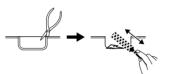

Step1 Processing the installation surface (process according to the installation type)

unction bo

Attachment

(accessory)

Fixing screw (4 pcs.)

(M4: locally procured)

{3-9/32 inches}

*Do not directly touch the dome cover

surface with your hands.

 Attach the attachment plate (accessory) so that the "TOP" mark is visible. Align the TOP direction of the attachment plate (accessory) with the {1-13/16 inches} shooting direction (upper direction of the screen), and make holes for

securing the camera and holes for wiring (if necessary). When using

a double panorama, align the TOP2 direction of the template with the shooting direction (upper direction of the screen) Refer to our support website < Control No.: C0126>

After installation is complete, the camera body can be adjusted by ±5° gangbox/ in the PAN direction

If open wiring is conducted, be sure to use conduits and run the cables inside the tubes to protect the cables from direct sunlight.

 Installation work shall be such that there is no exposure to water into the architecture through the conduits having been joined.


Gangbox/ Junction box

[1] Install the gangbox/ junction box on the installation

[2] Mount the attachment plate to the junction box.


[1] Align the TOP mark of the template A (accessory) with the direction to be attached (upper direction of the screen), bore holes for fixing screws and a hole for wiring as occasion demands.

Then, fix the attachment plate. (4 screw holes / 1 cable access hole)

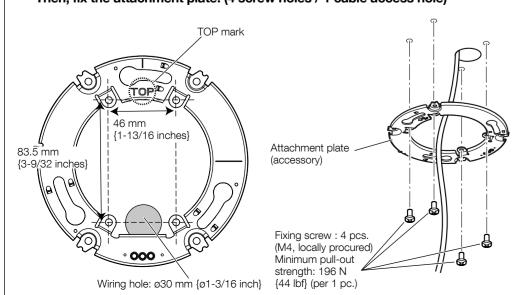

Base bracket S4576L S4556L

[1] Make a hole on the installation surface using template B (accessory). (Screw holes (M4:2 or 4 places) / Cable access hole (1 place))

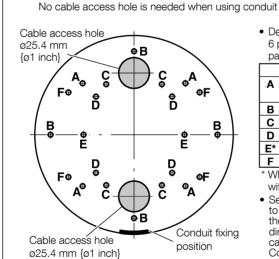

• Depending on the condition of the ceiling or the wall surface, 6 patterns of screw positions are available for fixation. Select a pattern from the following table and make holes. Vertical


Α	85 mm {3-11/32 inches}	85 mm {3-11/32 inches}
	(85.7 mm {3-3/8 inches})	(85.7 mm {3-3/8 inches})
В	138 mm {5-7/16 inches}	138 mm {5-7/16 inches}
С	83.5 mm {3-9/32 inches}	46 mm {1-13/16 inches}
D	63 mm {2-15/32 inches}	63 mm {2-15/32 inches}
E*	_	83.5 mm {3-9/32 inches}
F	70 mm {2-3/4 inches}	108.5 mm {4-9/32 inches}
* When mounting to a single-gangbox/junction box, fix it		
with screws (2 pcs.) (M4: locally procured).		

 Select either of the 2 cable access holes of template B to proceed with the installation work. The direction of he TOP mark of the attachment plate is in the upward direction of the screen after installation, and the camera cable is the outlet on the opposite side of the TOP mark. Confirm the routing for wiring, etc. when deciding the position of the base bracket

Remove the cap for the female Base bracket thread for the conduit using a 5 mm {3/16 inches} hexagon wrench and attach the conduit. female thread


When using a conduit

The female thread for conduit is compliant with ANSI NPSM (parallel pipe threads) 3/4 or ISO 228-1 (parallel pipe threads) G3/4.

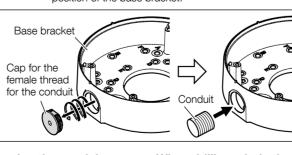

[2] Install the base bracket on the installation surface.

[3] Mount the attachment plate onto the base bracket.

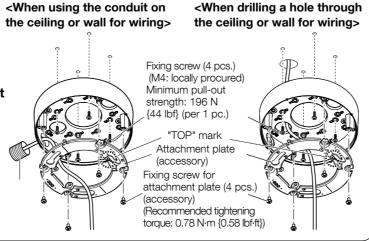

Blinks red (Interval of

1 time/ second)

Liahts red

See the captured image on a PC, and follow the procedure described below for fine adjustment of the upper direction of the screen (camera direction). For camera fixation, three points are available considering "I" of the LOCK mark as 0°; 0° (center), +5° (rightward),

Step4 Adjustment

Step2 Making connections

and external 12 V DC power supply

Use a stereo mini plug when using it as

plug when using it as a monitor output.

Step3 Mount the camera

an audio output, and use a monaural mini

[1] Align the direction of the i-PRO logo

on the camera with "TOP" of the

OPEN mark on the side of enclosure

with the protruding part of the base

bracket (accessory), insert 3 attachment

mounting screws into the attachment

plate, rotate the camera approximately

20°, and move the LOCK mark to the

temporarily secure the camera.

bracket) (\$4576L) (\$4556L)

the attachment plate

(align the LOCK mark center, "I",

with the protruding part of the base

· When directly attaching the attachment plate to a

ceiling or wall, align the OPEN mark to the nail of

protruding part of the base bracket to

attachment plate (accessory). Align the (accessory)

• Turn off each system's power supply before making a connection.

procured)

EXT I/O cable

· Devices to which power can be supplied to this product are PoE hub, PoE power supplying equipment,

Less than 100 m {328 feet}

waterproof

connector

(accessor)

cover

RJ45 waterproof

connector cap

(accessory)

4P alarm cable (accessory)

2P power cable (accessory)

supply cable (for microphone input)

cable (white) (for line input)

-Audio output

able (black)

Audio input Less than 10 m {32.8 feet}

Less than 1 m {3.28 feet}

Attachment plate

Ethernet cable

(category 5e or better,

GND (Black)

straight, 4 pairs (8 pins))

-ALARM IN3 (Grav

ALARM IN2 (Red

ALARM IN1 (Green)

Microphone or

Less than 10 m {32.8 feet} Built-in amplifier

Base bracket

(accessory) Protruding

truding part of base bracke

"I" at the center of the LOCK mar

LOCK

external audio line

External dimension:

ø5 mm {ø3/16 inches}

ø6.5 mm {ø1/4 inches}

IMPORTANT:

M12 Network cable

\$4576LM \$4556LM


RJ45 Network cable

S4576L

\$4556L

waterproof jack

or -5° (leftward).

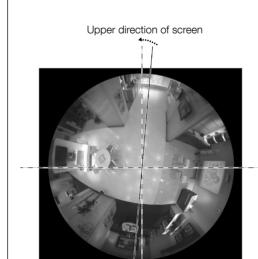


[1] Download and launch "IP Easy Setting Software" <Control No.: C0123> or "i-PRO Setting Tool (iCT)" <Control No.: C0133> on our support website, and connect to the network.

[2] Loosen the camera fixing screw using the bit (accessory).

IMPORTANT:

 Loosening the camera fixing screw allows the camera to be in the temporary fixed state.

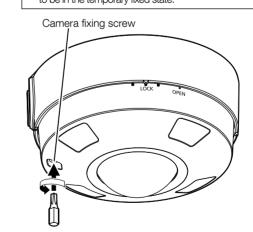

[3] Move the LOCK position of the camera clockwise or counterclockwise to finely adjust the image direction while seeing the captured image on a PC.

■ How to connect a RJ45 waterproof connector

IMPORTANT:

for power supply.

Do not install connector or cable connection parts in locations where they will be regularly exposed

• Be careful not to apply unnecessary force to the connector connecting portion or not to pinch the cables

• After the camera has been installed, the orientation of the video can be finely adjusted. For information

when this product is mounted on the base bracket. S4576L S4556L

on how to make adjustments, refer to "Step 4 Adjustment".

(2) Secure the camera by tightening the camera

fixing screws by using the bit (accessory).

Be sure to tighten the camera fixing screw. Failure to observe

(Recommended tightening torque: 0.78 N·m {0.58 lbf·ft})

this may cause camera trouble due to camera falling.

[3] If necessary, insert an SD memory card

[4] Remove the protection film from the

[5] Turn on power for the camera.

by referring to "Insert / remove an SD

supplied from the PoE device.

Approx. 20 mm

{25/32 inches}

When removing the RJ45 waterproof connector, be sure

to remove it with the reverse procedure of connection.

• When the Ethernet cable is disconnected once,

When connecting both the 12 V DC power supply and

the PoE device for power supply, 12 V DC will be used

reconnect the cable after around 2 seconds. When the

[25/32 inches]

cable is quickly reconnected, the power may not be

Insert the RJ45 plug

Align "▶" with "⊲" and then

notate until "▶" aligns with "⇔"

Tighten until no

■ Waterproof treatment for external I/O cables.

Stretch the waterproof tape (accessory) by approx.

twice its length and wind it tightly around the cable.

For the above 4 types of cables, even if they are not

used, waterproofing treatment must be performed or

• At the start and end winding points, make the tape

overlaps the external covering parts by approx.

power supply cables, audio input cables, and

gap is present

Wire and caulk

audio output cables

20 mm {25/32 inches}.

the connector parts.

to rain or water.

IMPORTANT:

IMPORTANT:

memory card".

dome cover.

 Turning the camera counterclockwise too much removes the camera from the attachment plate. Be careful not to do so.

Junction box Directly mount LOCK OPE" Base bracket

[4] Secure the camera by tightening the camera fixing

Camera fixing screw

IMPORTANT:

 Be sure to tighten the camera fixing screw. Failure to observe this may cause camera trouble due to camera falling. (Recommended tightening torque: 0.78 N·m {0.58 lbf·ft})


 When night shooting is performed using an IR LED, be aware that reflected light may be seen in captured images if the ceiling is close to the camera installed on the wall or the wall is close to the camera installed on the ceiling. In such a case, keep 3 m or more of the distance between the fixation position of the camera and ceiling or wall. For omnidirectional shooting using the IR LED, refer to our support website <Control No.: C0109>.

Insert / remove an SD memory card

■ Insert an SD memory card

① Loosen the SD slot cover fixing screw on the side of the camera using the bit (accessory), and open the SD slot cover.

(2) Insert an SD memory card into the SD memory card slot straight to the end, and confirm a click sound is heard. (direct the label face of the SD memory card toward the lens side of the camera). After a click sound is heard, release your finger from the SD memory card and confirm the rear end of the card does not project from the SD memory card insertion opening.

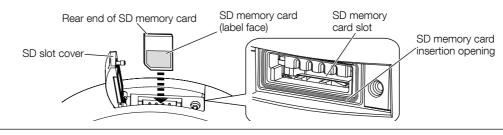

3 Close the SD slot cover, tighten SD slot cover fixing screw of the SD slot cover using the bit. Secure the SD slot cover. (Recommended tightening torque: 0.78 N·m (0.58 lbf·ft))

■ Remove an SD memory card

When removing an SD memory card, reverse the procedure for inserting an SD memory card. Press and hold the SD ON/OFF button for approx. 2 seconds, and then remove the SD memory card after checking that the SD MOUNT indicator has changed from blinking to off.

IMPORTANT:

• Before turning off the camera power switch, make sure that the SD MOUNT indicator is turned off.

• When using an SD memory card, format it using this product. Refer to the Operating Instructions for how to format an SD memory card.

• Use compatible SD memory cards. Refer to our support website <Control No.: C0107> for latest information about the compatible SD memory cards.