

















VKBD4 QUICK USER GUIDE





























Hard key description

-  **CAMERA SELECT KEY**, select the camera number followed by this key.
-  **MONITOR SELECT KEY**, select the monitor number required followed by this key.
-  **ENTER KEY/+**, used in menu setup and to increment camera inputs and preset positions.
-  **ESCAPE/-**, used in menu setup and to decrement camera inputs and presets positions.
-  **MODE SWITCH KEY**, press this key to switch between Live and Telemetry mode.
-  **EMERGENCY RECORD BUTTON**, press this key to switch a DVR into its emergency record profile.
-  **ALARM CLEAR BUTTON**, press this key to clear alarms.
-  **FUNCTION KEY 1-6**, the use of these keys changes dependant on the mode, see description of Soft Key icons, on rear of this document.

-  **SEARCH KEY KEY**, Press this key once to put into playback mode and a second time to bring up search menus.
-  **ARCHIVE KEY**, Press this key once to put into playback mode and a second time to bring up archive menus.
-  **QUICK ARCHIVE KEY**, Press this key once to put into playback mode and a second time to bring up Quick archive menus.
-  **PLAY FORWARD KEY**, press this key to enter Playback mode and to play forward.
-  **PLAY BACKWARDS KEY**, Press this key to reverse play through recorded video.
-  **FAST FORWARD KEY**, Press this key while in playback to fast forward through recorded video.
-  **FAST REWIND KEY**, Press this key while in Playback to fast rewind through recorded video.
-  **PAUSE / FREEZE FRAME KEY**, Press this key to freeze live video or to pause replaying video.

Soft key description

-  **SEQUENCE ICON**, press key adjacent to icon to start a sequence.
-  **SPLIT SCREEN ICON**, press key adjacent to icon to select multi-screen display.
-  **UNIT SELECT ICON**, select the unit number followed by key adjacent to icon.
-  **PRESET POSITION ICON**, select the preset number followed by the key adjacent, to move dome to preset position.
-  **PRESET TOUR ICON**, select the tour number followed by the key adjacent to start a Preset Tour.
-  **LEARN TOUR ICON**, select the tour number followed by the key adjacent to start a Learn Tour.
-  **FOCUS FAR ICON**, press the key adjacent to focus on objects further away.
-  **FOCUS NEAR ICON**, press the key adjacent to focus on objects closer to the camera.
-  **IRIS OPEN ICON**, press the key adjacent to open the iris on a PTZ dome.
-  **IRIS CLOSE ICON**, press the key adjacent to lose the iris on a PTZ dome.
-  **AUTO IRIS / AUTO FOCUS ICON**, press this icon to return a dome to Auto mode for Iris and Focus.
-  **COLOUR/MONO ICON**, press the key adjacent to toggle between colour and mono modes on PTZ domes.
-  **FN ICON**, used during short cut programming of presets and learn tours, or for accessing preprogrammed functions on some DVRs.
-  **SHIFT ICON**, Press the key adjacent to this icon to select next page of icons.
-  **STEP BACK ICON**, to return to previous page of icons, press the key adjacent to this icon.
-  **LIVE ICON**, To return to the live display mode from playback mode.
-  **DEVICE MENU ICON**, To access the menu of a DVR or matrix, press the key adjacent to this icon (Not dome Menus).
-  **AUDIO SELECT ICON**, select channel number followed by the key adjacent to icon to play back audio.
-  **VOLUME DOWN ICON**, press the key adjacent to the icon to reduce the volume.
-  **VOLUME UP ICON**, press key adjacent to icon to increase the volume.
-  **GOTO ICON**, press the key adjacent to enter quick search mode of a DVR.
-  **2X DIGITAL ZOOM ICON**, press key adjacent to the icon to zoom within an image.
-  **TIMED REPLAY**, press the key adjacent to start playback from predetermined lapsed period.
-  **BOOKMARK**, press the key adjacent to tag the recording, for easy future retrieval.
-  **IP CAMERA SELECTION**, select the camera number followed by the key adjacent to the icon.
-  **BLADE CONTROL ICON**, press the key adjacent to enter the Blade control icon page.