



10. Install the stainless steel ring of the vandalism set

Vandalism set: When using the vandalism set, attach the stainless steel ring with the security screws (torque 0,4 Nm) and use the supplied screwdriver bit to firmly tighten the screws.



Vandalismus set for On-Wall set with audio:

For installing and mounting, please follow the instructions as described in *Quick Install: Audio On-Wall Set* (www.mobotix.com > **Support** > **Manuals** > **Accessories** > **Mounting**). Attach the stainless steel ring with the security screws. Make sure that the cutout in the stainless steel ring tightly fits around the cable fitting of the On-Wall set. Use the supplied screwdriver bit to firmly tighten the screws (torque 0,4 Nm).



Initial Operation

The initial operation starts with connecting the power supply (see section «*Network and Power Connection, Additional Cables*» in the D25 Camera Manual). The first access follows the procedure described in the same manual in the section «*Initial Operation of the Camera*». All other tasks require access to the camera's user interface in the browser. Enter the camera's IP address into the address bar of the browser.

1. Set the lens

Open the **Admin Menu > Hardware Configuration > Lens Configuration** dialog and select the installed lens. This step is required to select the proper special functions of the installed lens (e.g., for wide-angle lenses).



2. Adjust the lens focus

Remove the dome before proceeding.

Check the live image from the camera in the browser. Activate the focusing aid in the browser (**Focusing Aid** quick control, **Activated** value).



Carefully turn the lens using the red lens wrench in clockwise or counter-clockwise direction until the red area of the focusing aid in the camera image is as small as possible.



Once the focus is adjusted properly, deactivate the focusing aid again (**Focusing Aid** quick control, **Disabled** value).


Note: Due to the lens effect of the dome, the focus of the B237 tele lens is shifting slightly once the dome has been mounted. Before mounting the

dome, the tele lens should be turned about **90° in counter-clockwise direction** (as seen from the lens' front). Make sure that you check the focus of the live image in your browser with the dome installed and re-adjust the lens, if required.

3. Configure and use the MxIOBoard-IC

After starting the camera with installed MxIOBoard-IC, the module is recognized automatically and listed in the **Camera Status** browser dialog in the **System** section.

You can immediately use the signal inputs to define **signal event profiles** in **Setup Menu > Event Overview**. Likewise, you can immediately use the signal outputs to define **signal output profiles** in **Admin Menu > Hardware Configuration > Signal Out Profiles**.

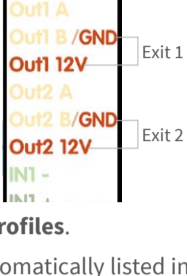

In addition, the signal inputs and outputs are automatically listed in the **Admin Menu > Assign Wires** dialog so you can use them immediately for door and light features.

If you want to use one or both signal outputs not as potential-free outputs, but as **12 V outputs**, open the **Admin Menu > Hardware Configuration > Manage Hardware Expansions** dialog. In the **IO Board** section, click on **Connect** for each output you want to use as a self-powered 12 V output.

4. Save the configuration

In the live image of the browser, select the **Manage Settings** quick control and set **Store Entire Configuration** as value. The camera stores the configuration in the permanent camera memory so that the settings will be applied at the next camera reboot

Boot Options of the v26

By default, the camera starts as DHCP client and automatically tries to get an IP address from a DHCP server. To start the camera in a mode different from the default mode, you can activate the boot menu of the camera.

1. Preparing the Camera

- Remove the outer shell and the dome.
- Disconnect the camera's power supply.
- Reconnect the power supply of the camera.

2. Activating the Boot Menu

The red LED lights up 5 to 10 seconds after establishing the power supply and will stay on for 10 seconds. Briefly press the key indicated by the red circle in the figure. The camera enters the boot menu, ready for selecting one of the boot options. To operate the camera key, use a suitable device (e.g., a screw driver).



The LED now flashes once and repeats the flash signal after pausing for one second (the number of flashes indicates the current boot option). To go to the next boot option, briefly press the key again (< 1 sec). After the last boot option, the camera returns to the first option (LED flashes once).

| LED flashes | Boot Option | Meaning | Audio Confirmation* |
|-------------|----------------------|---|---------------------|
| 1 x | Auto Configuration | Starts the auto configuration in order to operate this camera as a door station (not supported on all camera models). | Phone ringing |
| 2 x | Factory Defaults | Starts the camera with factory defaults (factory default IP address, users and passwords will not be reset). | Boing |
| 3 x | Automatic IP Address | Starts the camera as DHCP client and tries to obtain an IP address from a DHCP server. If a DHCP server cannot be found or no IP address can be obtained, the camera starts with its factory default address. | Boing Boing |
| 4 x | Recovery System | Starts the camera with the recovery system, e.g., in order to recover from a failed update of the camera software. | Alarm Sound |

3. Selecting a Boot Option

Press the key longer (> 2 sec). The camera confirms the selection by flashing rapidly three times. After 20 sec, the camera will confirm the selection by playing a sound according to the table above. If nothing is selected, the camera will resume its normal boot process after a certain time.

The outer shell and the dome can be mounted again.

Important Notes

Safety Warnings

Notes on Installing:

- This product must not be used in locations exposed to the dangers of explosion.
- Make sure that you install this product as outlined above under *Installing the v26*. A faulty installation can damage the camera!
- When installing this product, make sure that you are only using genuine MOBOTIX parts and MOBOTIX connection cables.
- Only install this product on suitable, solid materials that provide for a sturdy installation of the fixing elements used
- When attaching modules to the USB connector, the **power consumption of all attached modules must not exceed 1 W**.



Electrical installation: Electrical systems and equipment may only be installed, modified and maintained by a qualified electrician or under the direction and supervision of a qualified electrician in accordance with the applicable electrical guidelines. Make sure to properly set up all electrical connections.



Electrical surges: MOBOTIX cameras are protected against the effects of small electrical surges by numerous measures. These measures, however, cannot prevent the camera from being damaged when stronger electrical surges occur. Special care should be taken when installing the camera outside of buildings to ensure proper protection against **lightning**, since this also protects the building and the whole network infrastructure.



Never touch the lens: Due to the high performance of the v26, the area of the image sensor **can get quite hot**, especially when the ambient temperature is also high. This does not affect the proper functioning of the camera in any way. For this reason, the product must not be installed within the reach of persons without the dome.



Power off before opening the camera: Make sure the power supply to the camera is disconnected before opening the camera housing (e.g., when inserting or exchanging lenses, lens units and SD cards).



Network security: MOBOTIX products include all of the necessary configuration options for operation in Ethernet networks in compliance with data protection laws. The operator is responsible for the data protection concept across the entire system. The basic settings required to prevent misuse can be configured in the software and are password-protected. This prevents unauthorized parties from accessing these settings.



Legal Notes

Legal aspects of video and sound recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX products. Depending on national laws and the installation location of the v26, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.



Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).



Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our **General Terms and Conditions** apply. You can download the current version of the General Terms and Conditions from our website at www.mobotix.com by clicking on the **COS** link at the bottom of every page.



Technical Specifications

| | |
|-------------------------|--|
| Lens Options | B036 – B237 (103° to 15° horizontal angle of view) |
| Sensitivity | Color sensor (day): 0,1 lx @ 1/60s; 0,005 lx @ 1s BW sensor (night): 0,02 lx @ 1/60s; 0,001 lx @ 1s |
| Image Sensor | 1/1,8" CMOS, 6MP (3072x2048), progressive scan |
| Max. Image Size | 6MP (3072x2048) |
| Image Formats | Freely configurable format 4:3, 8:3, 16:9 or customized format (image cropping), e.g., 2592x1944 (5MP), 2048x1536 (QXGA), 1920x1080 (Full-HD), 1280x960 (MEGA) |
| Max. Frame Rate | • MxPEG (max.): 42@HD (1280x720), 34@Full-HD, 24@QXGA, 15@5MP, 12@6MP • M-JPEG (max.): 26@HD (1280x720), 13@Full-HD, 9@QXGA, 5@5MP, 4@6MP • H.264 (max.): 25@Full-HD, 20@QXGA |
| Video Codec | • MxPEG, M-JPEG, JPEG (max. output format 6MP) • H.264 (max. output format QXGA; bandwidth limitation possible) |
| DVR | • Camera-internal via microSD card (SDHC installed, SDXC supported) • External on USB device • External on NAS • Full image recording regardless of live image zoom • MxFFS • Pre-alarm and post-alarm images • DVR monitoring with error notification |
| Software | MxManagementCenter |
| Image Processing | MxLEO, backlight compensation, automatic white balance, image distortion correction |

| | |
|-----------------------------------|---|
| ONVIF | Compatible |
| PTZ | Digital pan/tilt/zoom; max. zoom 8x (continuous) |
| Alarm/Events | Temperature sensor, other sensors/IOs via MxMessageSystem, notification via email, FTP, VoIP, SIP |
| Intelligent Video Analysis | MxActivitySensor, video motion analysis, MxAnalytics |
| Audio | None, expandable with, for example, On-Wall set with audio |
| Interfaces | Ethernet 100Base-T (MxRJ45), MiniUSB (MxMiniUSB) |
| Security | User/group management, HTTPS/SSL, IP address filter, IEEE 802.1x, intrusion detection, digital image signature, MxFFS |
| Certifications | EN55032:2012; EN55022:2010; EN55024:2010; EN50121-4:2015; EN61000-6-1:2007; EN 61000-6-2:2005 EN61000-6-3:2007+A1:2011; EN61000-6-4:2007+A1:2011; AS/ NZS CISPR22:2009+A1:2010; CFR47 FCC part15B |
| Power Supply | Power over Ethernet IEEE 802.3af |
| Power Consumptions | Typ. 4 W |
| Protection Classes | IP protection class: IP20 IK protection class: IK10 without accessories, IK08 with On-Wall set with audio, IK10+ with Vandalism set |
| Ambient Temperature | 0 to 40 °C/32 to 104 °F |
| Dimensions/Weight | Height x diameter: 90 x 150 mm/3.54 x 5.90 in; weight: approx. 380 g |
| Housing | PBT-30GF, white and black |

Drilling Template

