



IPD/R2322ES

D/N 1080P HD Vari-Focal Dome (IR) IP Camera

LD/R2322E

D/N 1080P HD Vari-Focal Dome (IR) IP Camera

ZD/R2322E

D/N 1080P HD Auto Focus Dome (IR) IP Camera

Quick Installation Guide

IMEGAPRO

CAUTION


- Do not drop or strike this equipment
- Do not install the equipment near any naked flames or heat sources
- Do not expose this unit to rain, moisture, smoke or dust environment
- Do not cover the opening of the cabinet with cloth and plastic or to install this unit in poor ventilated places. Allow 10cm between this unit and its surroundings
- Do not continue to operate the unit under abnormal conditions such as detection of smoke, strange smell or no display on screen while power is turned on
- Do not touch the power connection with wet hands
- Do not damage the power cord or leave it under pressure
- Do not operate this unit near magnet, speaker system, etc., to avoid unnecessary magnetic interference
- Connection cables should be grounded properly

The ITE is to be connected only to PoE networks without routing to the outside plant.


L'ITE ne doit être connecté que sur un réseau PoE sans routage vers l'alimentation extérieure.



Product Overview

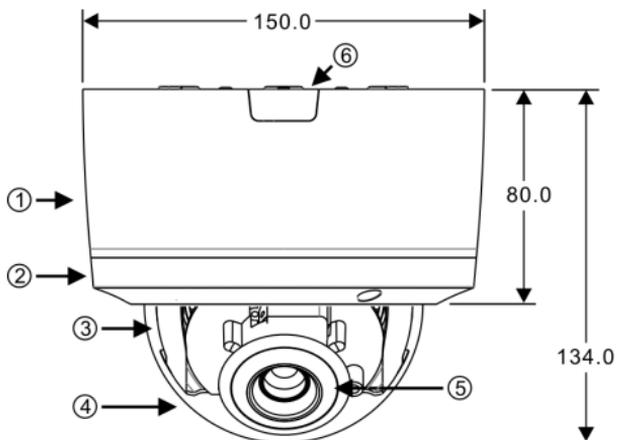


(IP Camera)

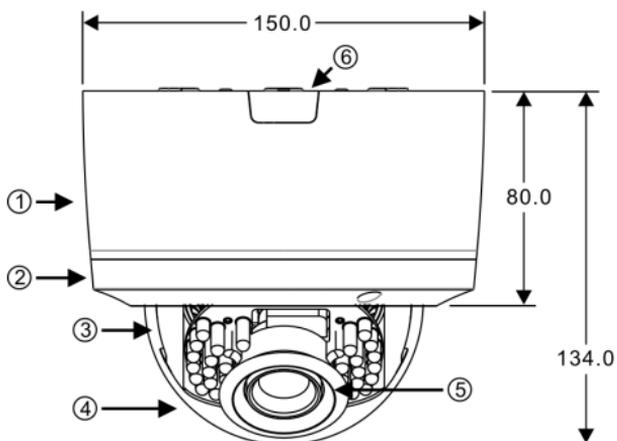

(IR IP Camera)

Unit: mm

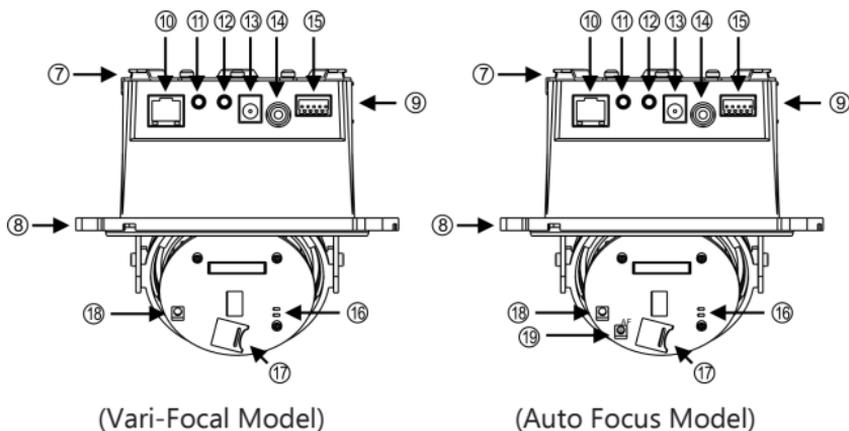

(Vari-Focal Model)

(Auto Focus Model)

- ① Cylinder (Ceiling Mount)
- ② Top Cover
- ③ Inner Cover
- ④ Dome Cover
- ⑤ Lens
- ⑥ Slide Cover
- ⑦ Fixed Plate (Ceiling Mount)
- ⑧ Bottom Chassis
- ⑨ Lock Plate
- ⑩ RJ-45 Network Connector (Support PoE)
- ⑪ Audio Input 3.5mm Phone Jack
- ⑫ Audio Output 3.5mm Phone Jack
- ⑬ DC12V Power Input Jack
- ⑭ Live Video Output RCA Jack
Plug the video input of monitor to the RCA jack and adjust focus and zoom.
- ⑮ Alarm In/Out Terminal
- ⑯ Network Indicator LEDs
Green (LINK): Network cable connected, this LED lit.
Orange (ACT): Data communications, this LED flashes.
- ⑰ Micro SD Card Slot


This network camera is compliant with micro SD/SDHC card.

- ⑱ Reset Button
To restore the server to factory default setting.
- ⑲ Auto Focus Button


Installation

Installation Structural Drawing

(Embedded Mounting)


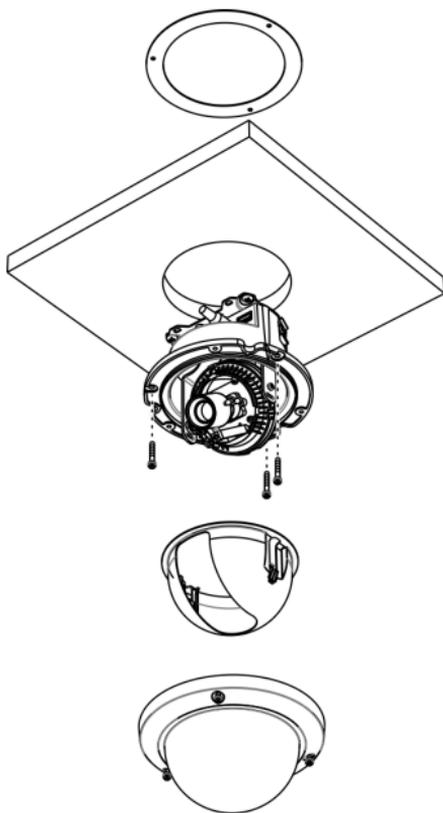


(Attached Mounting)


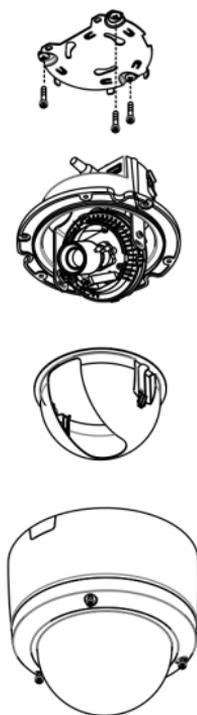


Embedded Mounting (False Ceiling)


1. Please use the screw driver to untighten the 3 screws on the top cover (FIG.1), and to untighten the 3 screws on the cylinder (FIG.2).

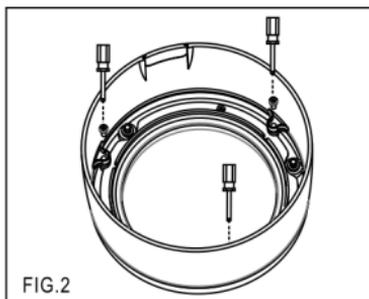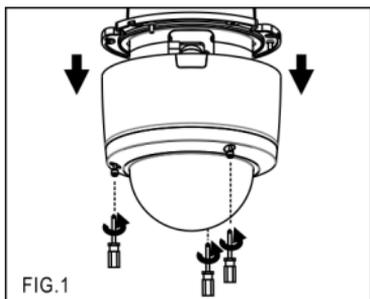



2. Use a hole site diagram to cut the circle 108mm (FIG.3 & FIG.4).

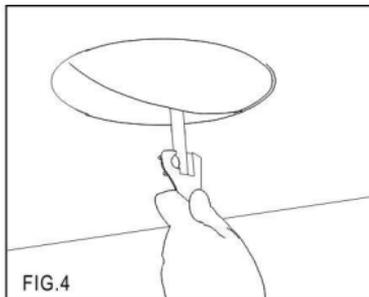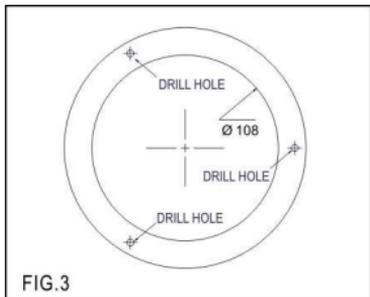



3. Plug and fix the power cable to the jack and plug the network cable to RJ-45 connector of the camera (FIG.5).

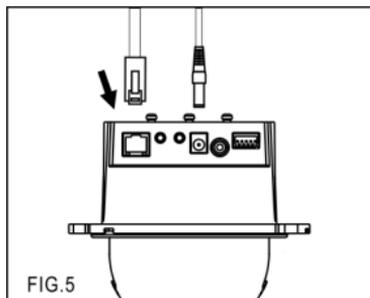



4. Put the provided screw (M3.0x25, wooden screw) through the holes marked as "a", and fix the bottom chassis in the desired area (FIG.6 & FIG.7).

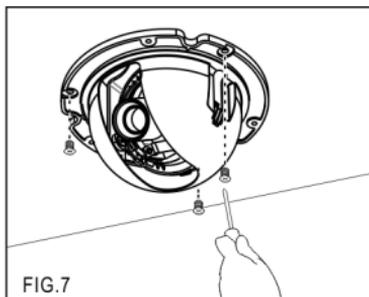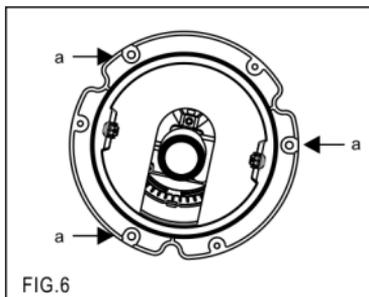



5. Take down the inner cover from the camera module (FIG.8), and then adjust the direction of the lens through the adjustable Pan/Tilt bracket and rotatable round bracket for Azimuth (FIG.9).

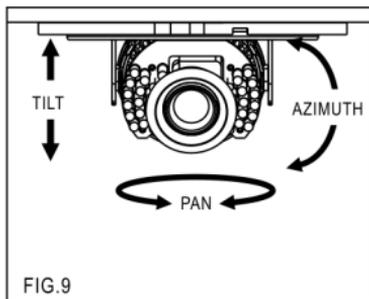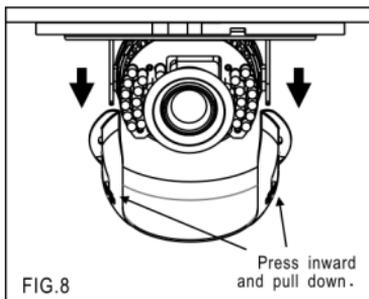

6. Adjust the lens on focus and zoom to form the optimal video image after that tighten the screws (FIG.10 & FIG.11).
NOTE: Vari-Focal Model Only.

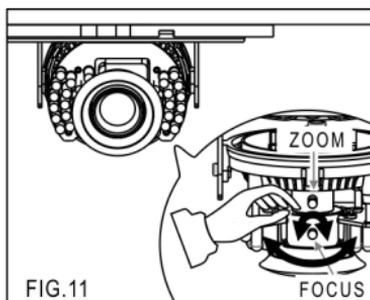
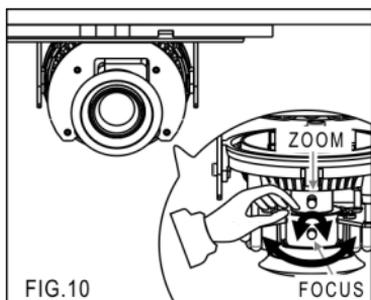


7. Put on the inner cover (FIG.12). Replace the top cover and tighten the screws (FIG.13).

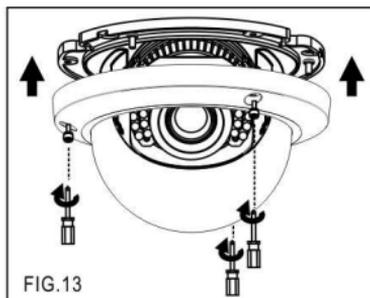
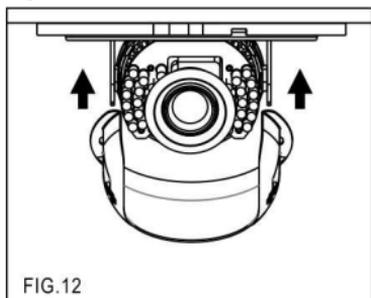


Attach Mounting (Fixed Ceiling)


1. Please use the screw driver to untighten the 3 screws on the top cover (FIG.14). Push the lock plate of bottom chassis down for unlocking (FIG.15).

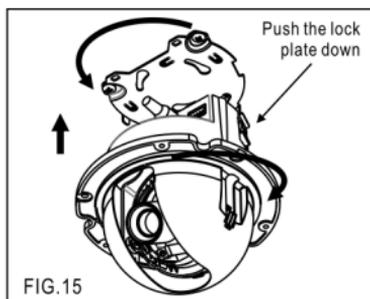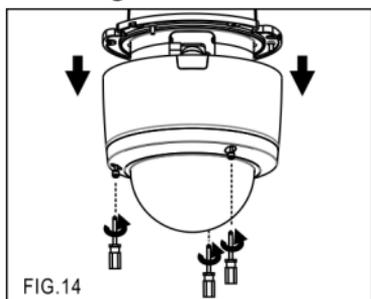


- Put the provided screw(M3.0x25, wooden screw) through the holes marked as "a", and fix the fixed plate in the desired area (FIG.16 & FIG.17).

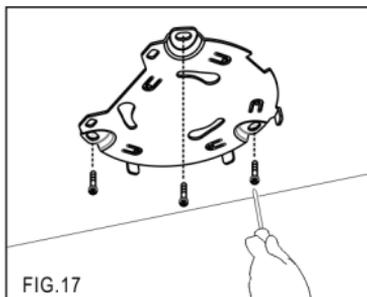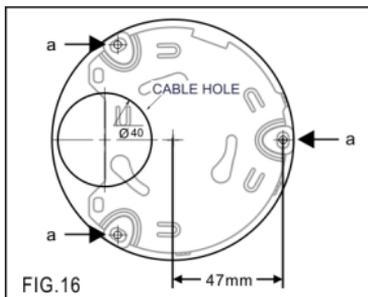



- Put the camera module into fixed plate, and push the lock plate up for locking (FIG.18).

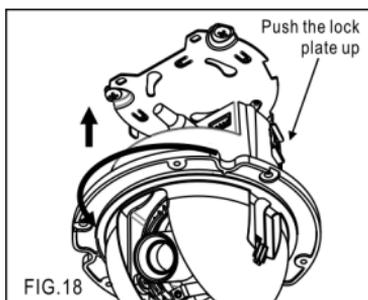

- Plug and fix the power cable to the jack and plug the network cable to RJ-45 connector of the camera (FIG.19).


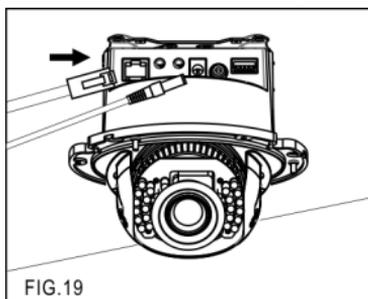


5. Take down the inner cover from the camera module (FIG.20), and then adjust the direction of the lens through the adjustable Pan/Tilt bracket and rotatable round bracket for Azimuth (FIG.21).

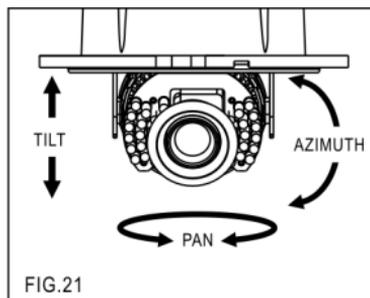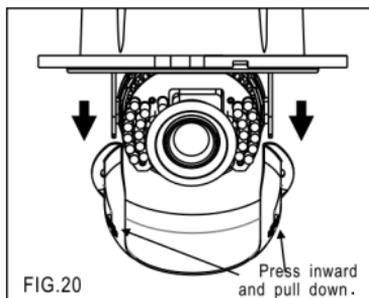

6. Adjust the lens on focus and zoom to form the optimal video image after that tighten the screws (FIG.22 & FIG.23).

NOTE: Vari-Focal Model Only.

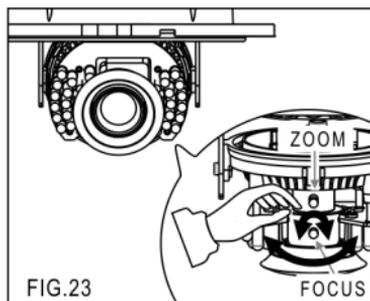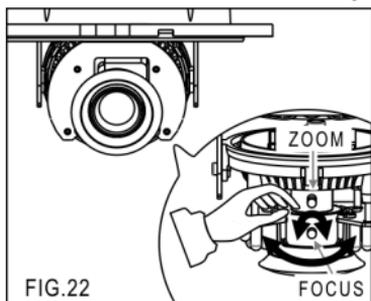

7. Put on the inner cover (FIG.24). Replace the top cover and tighten the screws (FIG.25).

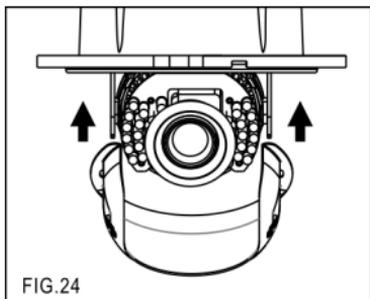


FIG.24


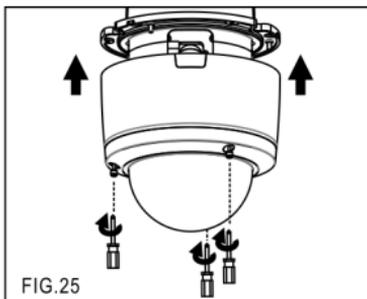


FIG.25

NOTE: When perform in-wall style installation of an IR IP camera, users are suggested to also install a wall mount bracket to avoid possible infrared reflection, when adjusting lens position. It would help minimizing any further technical issues caused by lens turning.

- AF (Auto Focus) function [Auto Focus Model Only]

The IP camera will automatically adjust the camera lens to obtain focus after pressing the AF (Auto Focus) button continuously for 2 seconds. User can adjust the image view by using Web page's zoom in/out link, and refocus using the Auto-Focus link on the main Web page.

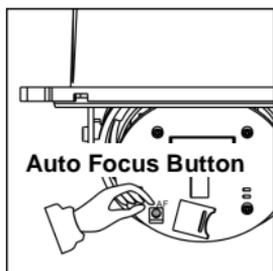


-  Zoom In
-  Zoom Out
-  Auto Focus


System Architectures

For connecting HD IP cameras to the network, please follow one of the system architectures:


- (1). Use a DC12V power adapter and a network switch to connect to the network.

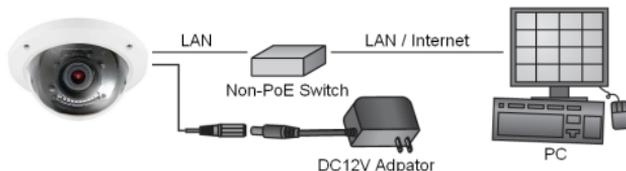

- (2). Use a PoE network switch to connect to the network.

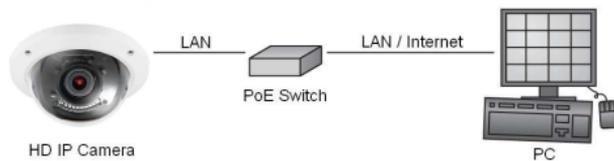

- (3). Use a PoE power injector and a network switch to connect to the network.

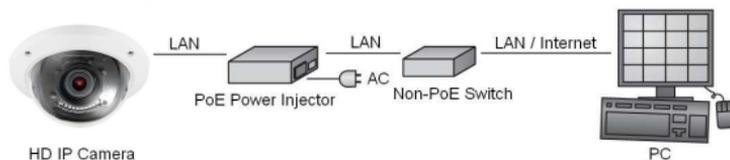

Emergency Factory Default

To restore factory default settings by hardware, please follow these steps:

1. Hold "RESET Key" for 10 seconds, then release.
2. After about 40 seconds, the network LED light should turn off, and the back on again.

3. This camera has completed the factory default settings, and can then reboot.
4. Search for the IP device using the IPScan software.
5. Start the IP device via Internet browser.
6. Enter the default username "admin" and password "pass" to operate.

NOTE: For user convenience, restoring the factory default settings will revert to the default IP address 192.168.0.200.

Before Accessing IP Cameras

Before accessing the IP camera, make sure that the camera's RJ-45 network, audio, and power cables are properly connected. To set the IP address, consult your network administrator for an available IP address. The default IP address for each IP camera is 192.168.0.200. Users can use the default IP address for verifying the camera's network connection.

Software Requirements


Merit LILIN Universal ActiveX software components are required for web interface display of JPEG or H.264 Full HD video. When you login to the IP camera by Internet Explorer, the security warning dialog box will prompt the installation of the LILIN Universal ActiveX. Click **Install** to download it.



Configuring IP Addresses by IPScan Software

To configure an IP address using the IP scan tool, you can copy the IPScan software from the installation CD, and paste to your computer. Alternatively, you can execute the IPScan software from the installation CD, or download the software from the Merit LILIN website (www.meritlilin.com). To change the settings of the IP address, subnet mask, gateway, or HTTP port, you can follow the steps below:

1. Run the IPScan software.
2. Click **Refresh**. All available devices should be listed in the device list.
3. Select your device from the list provided.
4. Change the IP address, subnet mask, gateway, or HTTP port for the IP camera.
5. Click **Apply** to submit the settings.
6. Click **Refresh** to verify the settings.

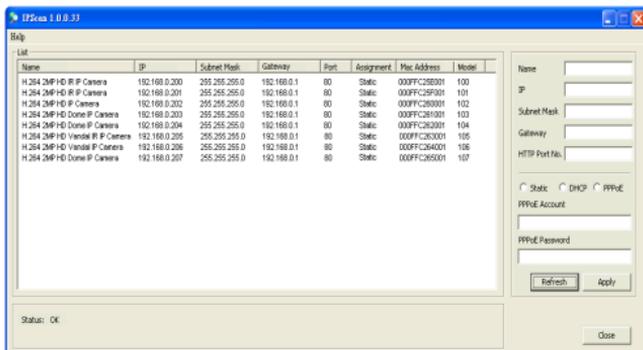


Configuring IP Addresses via Web Interface

To change an IP address via web interface, type the default IP address (192.168.0.200) in the Internet browser and follow the steps below:

1. Login to the H.264 Full HD IP camera by the default username "admin" and default password "pass"
2. Click **Basic Mode** configuration hyperlink.
3. Click **Network->General** hyperlink.
4. Change the IP address, subnet mask, gateway, or HTTP port for the IP camera.
5. Click **Submit** to verify the settings.

Internet Browser Settings & Application Required

Make sure your Internet browser allows the signed ActiveX plug-in to work on your computer. Set "Download Signed ActiveX plug-in controls" to "Prompt" and "Run ActiveX control and plug-in" to "Enable". You can set this option via Internet Explorer-> Tools-> Options-> Security Settings.

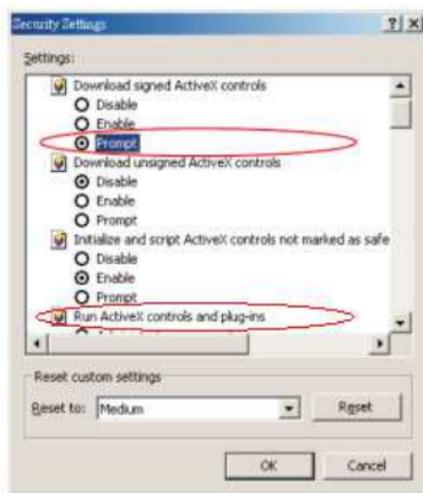

Once complete, you can access the IP camera's live video by entering the default IP address via your Internet browser. As the security warning dialog box appears, click **OK** to download the ActiveX directly from the IP camera.

Login

There are two levels of user authentication, including admin and guest, that can access the IP camera. Administrator is authorized to reset basic mode settings and see live video, while the guest is allowed to see only live video.



The default usernames and passwords are as follows:

	Administrator	Viewer
Username	admin	guest
Password	pass	guest

To logon the H.264 FULL HD IP camera, please type username and password in logon HTML page and click on Submit button to enter the system.

Creativity, Progress, and Excellence



MERIT LILIN ENT. CO., LTD

www.meritlilin.com

66-LR2322CSM