

**WISENET**

# **NETWORK VIDEO RECORDER**

User Manual

Wisenet NVR

CE

# Network Video Recorder

## User Manual

---

### Copyright

©2020 Hanwha Techwin Co., Ltd. All rights reserved.

### Trademark

Each of trademarks herein is registered. The name of this product and other trademarks mentioned in this manual are the registered trademark of their respective company.

### Restriction

Copyright of this document is reserved. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization.

### Disclaimer

Hanwha Techwin makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Hanwha Techwin reserves the right to change the contents of this document without prior notice.

❖ Design and specifications are subject to change without prior notice.

You can download the latest version from the Hanwha Techwin web site. ([www.hanwha-security.com](http://www.hanwha-security.com))

❖ The initial administrator ID is "admin" and the password should be set when logging in for the first time.

Please change your password every three months to safely protect personal information and to prevent the damage of the information theft.

Please, take note that it's a user's responsibility for the security and any other problems caused by mismanaging a password.

## IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit.

Follow all the safety instructions listed below.

Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean the contaminated area on the product surface with a soft, dry cloth or a damp cloth.  
(Do not use a detergent or cosmetic products that contain alcohol, solvents or surfactants or oil constituents as they may deform or cause damage to the product.)
- 7) Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding- type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. if the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## Standards Approvals



- ! Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- ☑ This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
  - This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
    - Reorient or relocate the receiving antenna.
    - Increase the separation between the equipment and receiver.
    - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
    - Consult the dealer or an experienced radio/TV technician for help.

## PRODUCT USER MANUAL DESCRIPTION

This document is a user manual for Wisenet Recorder product. Before using this product, please read this document carefully in order to use it properly.

- This user manual explains how to use the product based on the defaults and default screens of this product.
- The content of this manual is subject to change depending on the product software updates and the company policies. It is subject to partial changes without prior notification to users.

## TARGET AUDIENCE

This user manual contains contents for Wisenet Recorder users.

## HOW TO USE THE PRODUCT

Users of this product can perform the following:

- Monitor cameras registered to Wisenet Recorder in real time
- Search for or play videos saved in Wisenet Recorder
- Monitor text data being transmitted to the POS device connected to Wisenet Recorder in real time
- Search for text data from the POS device connected to Wisenet Recorder
- Monitor real time events that occur in Wisenet Recorder, sensors, and cameras or search through logs

Before using this product, check if the latest version of this software is installed. Go to Hanwha Techwin's website (<http://www.hanwha-security.com>) to check the software version and download necessary files.

## CAUTION

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- Do not ingest battery, Chemical Burn Hazard.
- This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.  
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## ATTENTION

- IL Y A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UNE BATTERIE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS.
- Ne pas ingérer la pile, risque de brûlure chimique.
- Ce produit contient une pile de type bouton/pièce de monnaie. Si la pile de type bouton/pièce de monnaie est avalée, elle peut causer de graves brûlures internes en seulement 2 heures et peut entraîner la mort.
- Gardez les piles neuves et usagées hors de portée des enfants. Si le compartiment de la pile ne se ferme pas correctement, cessez d'utiliser le produit et gardez-le d'atteinte des enfants.  
Si vous suspectez que des piles ont été avalées ou insérées dans une partie du corps, consultez un médecin sans tarder.

# CONTENTS

---

<b>OVERVIEW</b>	<b>3</b>	Important Safety Instructions	<b>24</b>	Real-Time Event Monitoring
<b>3</b>	<b>3</b>	Product User Manual Description	24	Check Event List
	<b>3</b>	Target Audience	24	Event Search
	<b>3</b>	How to Use the Product	25	Event Instant Viewer
	<b>5</b>	Contents	25	Stop Alarm Output
<b>GETTING STARTED</b>	<b>9</b>	Starting the system	<b>25</b>	Camera Video Control
<b>9</b>	<b>9</b>	Install Wizard	25	Capture
	<b>12</b>	Shutting down the System	26	Instant Viewer
	<b>12</b>	Restarting the System	26	Temperature Detection Mode
	<b>12</b>	Login	26	PTZ Mode
			27	Digital Zoom
<b>LIVE</b>	<b>13</b>	Screen Layout of the Live	27	Audio Output
<b>13</b>	14	Checking the System Status	27	Display Text
	15	Check Camera List	28	Change Channel Aspect Ratio
	15	Live Screen Menu	<b>28</b>	PTZ Control
	16	Icons on the Live Screen	28	Getting Started with PTZ Operations
	<b>17</b>	Live Screen Mode	28	PTZ Control Menu
	17	Changing the Pattern of Split Screen	29	Using Digital PTZ (D-PTZ) Function
	18	Switching the Split Mode	29	Preset
	19	OSD Information Display	30	Running Preset
	19	Channel Information Display	30	Running Swing (auto pan), Group (scan), Tour, or Trace (pattern)
	20	Check the Camera Status	<b>30</b>	Exporting the Recorded Video
	21	Channel Setting		
	21	Changing Overall Channel Aspect Ratio	<b>32</b>	Screen Layout of the Search
	22	Full Screen Mode	<b>32</b>	Time Search
	<b>22</b>	Setting Up the Live Layout	<b>33</b>	Event Search
	22	Check Layout List	<b>33</b>	Text Search
	22	Add Layout and Set Name	<b>34</b>	Export Search
	23	Change of Layout Channel and Name	<b>34</b>	ARB Search
	23	Delete Layout	<b>35</b>	Bookmark Search
	23	Play Layout Sequence	<b>35</b>	Smart Search
			<b>SEARCH</b>	
			<b>32</b>	

## AI SEARCH

36

- 36 Screen Layout of the AI Search
- 36 Person Search
- 37 Face Search
- 37 Vehicle Search
- 38 LP Search

## PLAY

39

- 39 Screen Layout of the Play
- 40 Play Search Results
  - 40 Time Line Adjustment
  - 40 Open Time Line Channel
  - 40 Play Button Name and Function
- 41 Search Results Export

## SETUP

42

- 42 Screen Layout of the Setup
- 42 Setting the Camera
  - 42 Setting the Channel
  - 45 Setting the Camera Functions
  - 46 Setting the Profiles
  - 50 Setting Camera Password
- 50 Setting the Recording
  - 50 Recording Schedule
  - 51 Record Setup
  - 51 Record Option
- 52 Setting the Event
  - 52 Event setup
  - 54 Event Rule Setup
  - 55 Alarm Input
  - 55 ONVIF
  - 56 Schedule

## 56 Setting the Device

- 56 Storage Device
- 60 Distributed Recording
- 61 S.M.A.R.T
- 61 Monitor
- 63 Text

## 64 Setting the Network

- 64 Interface
- 66 DDNS
- 67 IP Filtering
- 67 HTTPS
- 68 802.1x
- 68 E-mail
- 69 SNMP
- 70 DHCP Server
- 70 Failover
- 72 P2P

## 72 Setting the System

- 72 Date/Time/Language
- 73 User
- 76 System Management
- 77 Log Information

## STARTING WEB VIEWER

79

## 79 What is Web Viewer?

- 79 Product Features
- 79 System Requirements

## 79 Connecting Web Viewer

## 80 Install Wizard

**LIVE VIEWER**

81

- 81 Screen Layout of the Live Viewer
- 82 Checking the System Status
- 82 Checking User ID
- 82 Checking Camera List
- 83 Checking the All Camera Status
  - 83 Live Status
  - 83 Record Status
  - 83 Network Status
- 83 Changing the Pattern of Split Screen
- 84 Changing Overall Channel Aspect Ratio
- 84 Full Screen Mode
- 85 Setting up the Live Layout
  - 85 Check Layout List
  - 85 Add Layout and Set Name
  - 85 Change of Layout Channel and Name
  - 85 Delete Layout
- 86 Real-Time Event Monitoring
  - 86 Event Type and Camera Settings
  - 86 Check Event List
  - 87 Event Instant Viewer
  - 87 Stop Alarm Output
- 87 Live Screen Menu
- 88 Camera Video Control
  - 88 Capture
  - 88 PC Recording
  - 88 Instant Viewer
  - 88 Microphone Output
  - 88 PTZ Mode
  - 89 Performing Digital Zoom
  - 89 Audio Out
  - 89 Video Rotation
  - 89 Channel Aspect Ratio
- 89 PTZ Control
  - 89 PTZ Control Menu
  - 90 Using Digital PTZ (D-PTZ) function
  - 90 Preset
  - 90 Running Preset
  - 90 Running Swing (auto pan), Group (scan), Tour, or Trace (pattern)
- 90 Exporting Video

**SEARCH VIEWER**

91

- 91 Screen Layout of the Search Viewer
- 92 Time Search
- 92 Text Search
- 93 Bookmark Search
- 93 Search Results Export

**AI SEARCH VIEWER**

94

- 94 Screen Layout of the AI Search Viewer
- 94 Person Search
- 95 Face Search
- 95 Vehicle Search
- 96 LP Search
- 96 Search Results Export

**PLAY**

97

- 97 Play Search Results
  - 97 To Adjust the Time Line
- 97 Export Video by Section Setup
  - 98 Play Button Name and Function

## SETUP VIEWER

99

- 99 Screen Layout of the Setup Viewer
- 99 Setting the Camera
  - 99 Camera Register
  - 99 Channel Setup
  - 100 Camera Setup
  - 100 Profile Setup
  - 101 Camera Password
- 101 Setting the Recording
  - 101 Recording Schedule
  - 101 Record Setup
  - 102 Record Option
- 102 Setting the Event
  - 102 Event Setup
  - 103 Event Rule Setup
  - 103 Alarm Input
  - 103 ONVIF Setup
  - 104 Schedule
- 104 Setting the Device
  - 104 Storage Device
  - 105 Monitor
  - 106 Text
- 106 Setting the Network
  - 106 Interface
  - 107 DDNS
  - 107 IP Filtering
  - 107 HTTPS
  - 107 802.1x
  - 108 E-mail
  - 108 SNMP
  - 109 DHCP Server
  - 109 P2P
- 110 Setting the System
  - 110 Date/Time/Language
  - 110 User
  - 111 System Management
  - 111 Log Information

## EXPORT VIEWER

113

- 113 SEC Backup Viewer
  - 113 Recommended System Requirements
  - 113 Screen Layout of the Backup Viewer

## APPENDIX

115

- 115 Use Joystick
- 115 Using Virtual Keyboard
- 116 Troubleshooting



## STARTING THE SYSTEM

1. Connect the power cable of the recorder to the wall outlet.

2. You will see the initialization screen.

The initialization process will last about 2 minute. If a new HDD is installed, the initialization process may take longer.



3. The live screen appears with a beep.

The following symptoms might be observed when starting the system.

- ✎ If the HDD number is displayed at the bottom of the screen along with while the product is booting up, it indicates that the HDD is in recovery, and for this reason booting up may take longer.



- If the progress stalls while in state, it indicates that the HDD has problems. Visit your nearest customer service center to check the HDD.



## INSTALL WIZARD

As shown below, proceed through each step of the **<Install Wizard>**.


Install Wizard can only be accessed at factory reset. If you do not want to proceed, click **<Exit>**.

- ✎ It will automatically change to the optimal monitor resolution and run the install wizard.
- If the install wizard does not run, remove the monitor connection from the back of the recorder, reboot the recorder and reconnect the monitor.

1. In the **<Language>** screen, select the language and press the **<Next>** button.



2. Set the network connection type and the connection environment on the **<Network>** screen, and then click the **<Next>**.

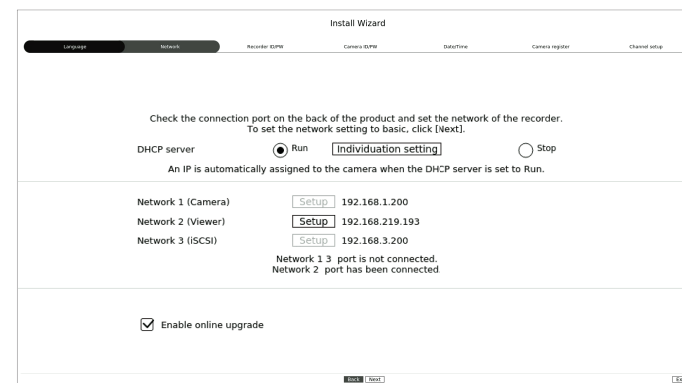

### Setting up the DHCP server

If you set up the DHCP server to **<Run>**, the IP address is automatically assigned to your camera.

- If you click the **<Individuation Setting>**, you can set the operation by network. Check the connected network and set it to **<Run>**.

For more details, refer to the "**Setup > Setting the Network > DHCP Server**" page in the Table of Contents.

- ! Depending on the camera's state, no IP may be automatically assigned to the camera. After exiting the installation wizard, go to the menu to assign an IP to DHCP, or set the IP manually.

## Setting up the network

The network port can be used as a common port for camera and web viewer connection. If a product supports two or more, then each network port will provide the following features. Click **<Setup>** of the network connected to the recorder.

- Network 1 (Camera) : Can be used as a port for connecting a camera. If you connect a camera, then the camera video will be transmitted.
- Network 2 (Viewer) : Can be used as a port transmitting video to the web viewer. If you access the network information on your browser, then you can remotely monitor video in your web viewer.
- Network 3 (iSCSI) : Can be used as a port for an iSCSI connection.
- All : Can be used as a common port for connecting camera, web viewer, and iSCSI.
  - IP type : Allows you to select the type of network access.
  - IP Address, Subnet Mask, Gateway, DNS
    - Static : IP address, subnet mask, gateway, and DNS can be directly entered.
    - DHCP : IP address, subnet mask, gateway, and DNS can be automatically set.



- If the LAN cable is not connected to the port, **<Setup>** button will not be activated for use. Check the LAN cable connection.
- The built-in DHCP Server in Recorder will turn on automatically at stage 1. At this stage, using the existing DHCP server in the same network may cause a problem, as two DHCP servers would be simultaneously operating.
- A product with multiple network ports cannot use a single bandwidth for all of them.

### Example)

- Port 1 : 192.168.100.199 / Port 2 : 192.168.100.198 (X)
- Port 1 : 192.168.100.199 / Port 2 : 192.168.101.198 (O)

## Online Upgrade

You can receive a new firmware notification when your device is connected to a network.

3. Set the administrator password on the **<Recorder ID/PW>** screen and click the **<Next>**.

Click **<i>** to view the basic guide for setting a password. Refer to the password setup rules.

The screenshot shows the 'Set a recorder password' screen in the 'Install Wizard'. The screen has a progress bar at the top with steps: Language, Network, Recorder ID/PW (current), Camera ID/PW, Date/Time, Camera register, and Channel setup. The main content area has the title 'Set a recorder password.' and a subtitle '(Administrator)'. There are three input fields: 'ID' with the value 'admin', 'Initial password' with masked characters, and 'Confirm Password' with masked characters. Below the fields is a 'View password' checkbox. An information icon is next to the 'Confirm Password' field. At the bottom, there are 'BACK' and 'NEXT' buttons.

4. Set the camera password in factory reset on the **<Camera ID/PW>** screen.


If ID/PW is already set in the camera, register the ID/PW and click **<Next>**.

The screenshot shows the 'Set the password of the factory default Wisenet camera' screen in the 'Install Wizard'. The screen has the same progress bar as the previous screenshot. The main content area has the title 'Set the password of the factory default Wisenet camera'. There is a checked checkbox 'Use the recorder administrator ID and password as the camera account'. Below it are 'Initial password' and 'Confirm Password' fields with masked characters and a 'View password' checkbox. An information icon is next to the 'Confirm Password' field. Below this is a section titled 'Register the camera ID for which the password had been set and the password (up to 3)'. There is an unchecked checkbox 'Enter the camera ID and password'. Below it are 'ID' and 'Password' fields with masked characters and a 'View password' checkbox. At the bottom, there are 'BACK' and 'NEXT' buttons.



- When the password is in factory reset, it can be changed and managed in a batch.
- Up to 3 sets of camera ID with password and password can be registered.
- You cannot change the password for cameras registered with ONVIF and RTSP.


5. Set the date, time, time zone, and daylight saving time on the <Date/Time> screen, and then click the <Next>.

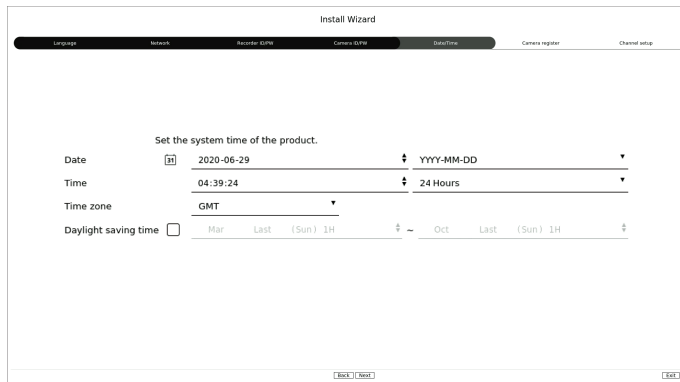

6. On the <Camera register> screen, select a camera to register from the searched camera list and click <Register>.


Select a camera to register from the list and click <Change IP>.

After completing camera register click <Next>.

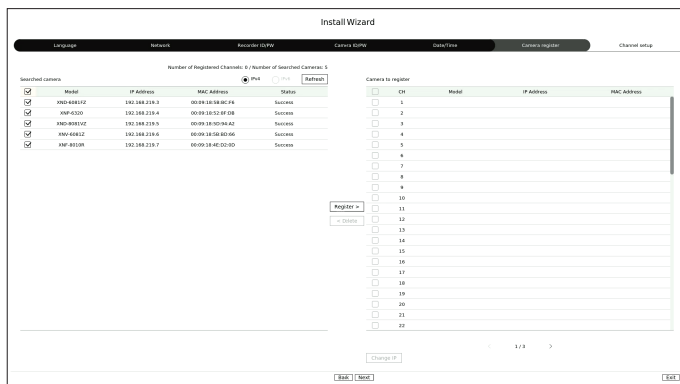

■ After entering the ID and password set in the camera, the connection test must be completed to successfully register.

7. On the <Channel setup> screen, you can view the camera videos registered to each channel in thumbnails along with thumbnail information. To change the camera video position, select a video and drag and drop it to the desired location.

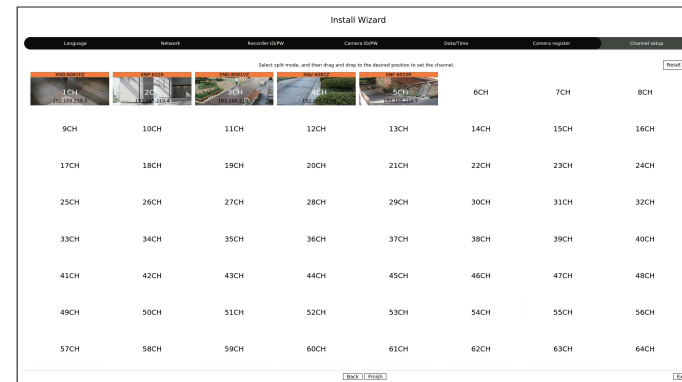


8. Click <Finish> to complete the Install Wizard.

## SHUTTING DOWN THE SYSTEM

1. Select **<Shutdown>** at the top right of the screen.
2. The "Shutdown" confirmation pop-up window will appear.
3. Click on **<OK>**.

The system will shut down.

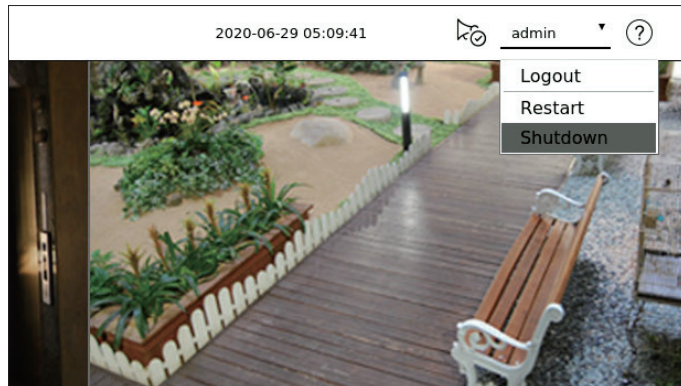

## RESTARTING THE SYSTEM

1. Select **<Restart>** at the top right of the screen.
2. The "Restart" confirmation pop-up window will appear.
3. Click on **<OK>**.

The system will restart.




- Only the user with the "Shutdown/Restart" permission can shut down or restart the system.
- To manage Permission Setup, refer to the "Setup > Setting the system > User" page in the Table of Contents.

## LOGIN

To use the Recorder menu, you are required to login as a user that is authorized to access the applicable menu.

1. Select **<Login>** at the top right of the screen.
2. The **<Login>** dialog appears.
3. Enter the user ID and password, then click **<OK>**.

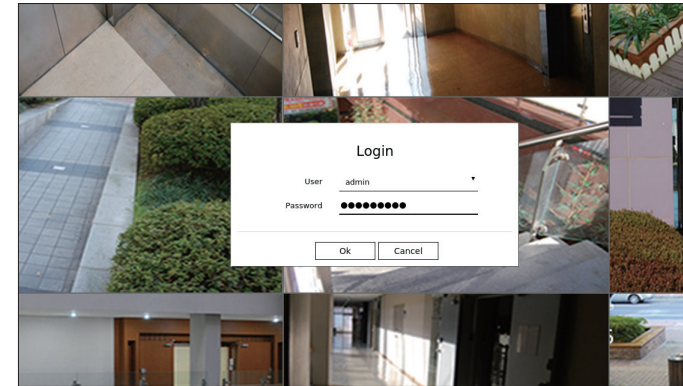

- The initial administrator ID is "admin" and you will need to configure the password in the installation wizard.
- Please change your password every three months to safely protect personal information and to prevent the damage of the information theft. Please, take note that it's a user's responsibility for the security and any other problems caused by mismanaging a password.
- For more information about limited-access permission, refer to the "Setup > Setting the System > User" page in the Table of Contents.

Shows the video of the camera connected to the recorder. Also, you can adjust the camera and check the network transfer status.

## SCREEN LAYOUT OF THE LIVE

The live screen is built as follows.




Item	Description
1	<b>Menu</b> Click each menu to go to the corresponding menu screen.
2	<b>Select list of device/event</b> <ul style="list-style-type: none"> <li>List : Select to check the camera list.</li> <li>Event : Select to check the event list</li> </ul>
3	<b>Device List</b> The list of cameras registered in the recorder is displayed. You can also register the camera manually or automatically. <ul style="list-style-type: none"> <li>+ : Registers the camera manually.</li> <li>🔍 : Searches and registers the camera connected to the recorder automatically.</li> </ul>
	<b>Event List</b> A list of events that have occurred on the device is displayed.
4	<b>Layout list</b> Displays the default layout and a list of created layouts. You can also set and play a sequence of layout lists.
5	<b>PTZ Control</b> Controls the connected PTZ camera.

Item	Description
6	Saves the recorded video of the selected channel in the designated path in a recorder or SEC format.
6	Clears the alarm in the event list and stops the alarm at the notification display of the system status.
	Activates the manual recording function of the recorder.
	Displays information of the OSD screen on the video window.
7	Shows channel information.
	Shows the status of all cameras connected to the recorder.
	Moves the page of the split mode.
8	Moves to the next page of the split mode according to the set time.
	Sets the split screen of the video window.
	Shows the video in actual proportions.
	It changes to full screen from the current split mode.
9	<b>Video window</b> Shows the video of the camera connected to the recorder.
10	The ID of the connected user is displayed.
10	Displays a QR code to download the user manual.
11	Stops the alarm at the notification display of the system status.
12	<b>System status display</b> Displays the status of the system, hard disk, and network.
13	<b>2020-06-11 19:56:32</b> Displays the current time and date.

! If the frame rate of your camera is set to 60 fps, reduction in frame rate might occur on the live screen depending on the user environment.

## Checking the System Status

The icon at the top of the screen indicates the status of the system.

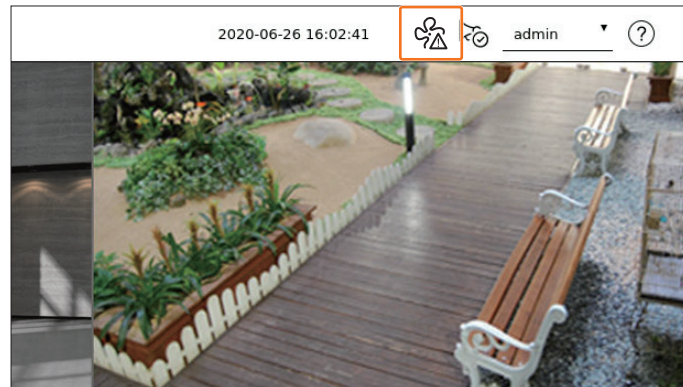

Item	Description
	It is displayed when there is a problem with the fan. <ul style="list-style-type: none"> <li>Only provided for products that support fans. (See page 4 of the <b>Product Specification Manual</b>)</li> </ul>
	It is displayed when there is a problem with the power supply. <ul style="list-style-type: none"> <li>Only provided for products that support power supply redundancy. (See page 4 of the <b>Product Specification Manual</b>)</li> </ul>
	Display when recording data is not properly saved.
	Displayed if the HDD is full and the Recorder has an insufficient space to record.
	Displayed when there is no HDD or HDD is not detected.
	Displayed if the HDD needs a technical examination.
	It is displayed when there is a malfunctioning HDD in the RAID. <ul style="list-style-type: none"> <li>There are one or two HDD malfunctions but you can still read or write to it.</li> <li>Only provided for products that support RAID.</li> </ul>
	It is displayed when recovering a RAID Error. <ul style="list-style-type: none"> <li>Only provided for products that support RAID.</li> </ul>
	It is displayed when you cannot write RAID due to a malfunction of HDD. <ul style="list-style-type: none"> <li>Only provided for products that support RAID.</li> </ul>
	Appears when input data rate per channel exceeds the specified data rate limit.

Item	Description
	It is displayed when an iSCSI device is disconnected. <ul style="list-style-type: none"> <li>Only provided for products that support iSCSI.</li> </ul>
	It is displayed when the network is overloaded. <ul style="list-style-type: none"> <li>It occurs when the max receiving allowance is exceeded, causing an overload to the CPU. It disappears when you modify the Delete Camera or Set Camera to reduce the data rate.</li> </ul>
	Displayed if the server has firmware to update.
	It is displayed when the system is overloaded. <ul style="list-style-type: none"> <li>Limit the number of users remotely monitored by Web Viewer or VMS, or control the number of events displayed in the event list of the recorder.</li> </ul>
	Displayed when manually recording a video while the access restriction for stop recording is enabled. Only a user with the permission to stop recording is allowed to stop recording.
	Displayed when exporting a recorded video in live mode.
	Displayed when there is software to update on the camera.
	Displayed when playing the layout sequence.
	Displayed when running automatic switching of the split screen.
	Displayed when an error occurs in the internal memory.


### Error Information






- If the built-in HDD is not connected, the "NO HDD" icon () will be displayed. In such case, be sure to contact the service center since the recording, play, and export functions do not work.
- If you do not format a purchased HDD in a format supporting Recorder, a "NO HDD" icon () will be displayed. If the "No HDD" icon is displayed, check the hard disk connection status in "**Setup > Device > Storage Device**" and format the hard disk.
- If a product with a fan does not work or has a problem with the fan, <Fan Information Window> appears and the fan malfunction icon () is displayed. In this case, check the fan inside the product. If the fan is defective, it can shorten the product life cycle, so please make sure to contract service center nearby.

- If an abnormal fan () icon or NO HDD () icon, HDD FAIL () icon is displayed, contact our customer service.
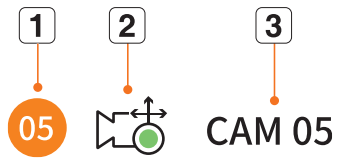
## Check Camera List

Displays the camera type, status, and name registered in the recorder.



Item	Description	
1	Channel information Displays channel information (channel number, video window assignment, and color indication).	
2	Camera type  Displays a normal camera.  Displays a PTZ camera.	
	Camera status  Recording an event video.  Recording a general video.  Displays the camera error status.	
	3	Camera name Displays the name set for the camera.


- If a camera connection error occurs, it is disabled in the list.
- The camera status display information changes according to the network connection status and settings.







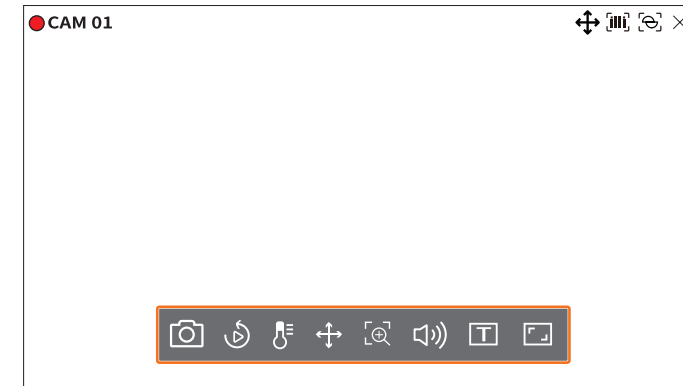

## Live Screen Menu

After selecting the desired channel on the split mode, roll the mouse cursor over the screen to see the live screen menu.

The live screen menu appears differently depending on the recorder operation status or the type of the registered camera.

- Each function may be restricted depending on the type of camera and the user's authority.
- For more detailed information about each function, refer to the table of contents "Live > Camera Video Control".




Item	Description
	<b>Capture</b> You can take a screenshot of the selected channel.
	<b>Instant Viewer</b> You can rewind 30 seconds while monitoring the video.
	<b>Temperature Detection</b> For images that support the thermal imaging camera function, you can click the desired point to check the temperature information.
	<b>PTZ Mode</b> If the network camera connected to the selected channel supports the PTZ function, it changes to the PTZ control mode.
	<b>Digital Zoom</b> You can zoom in or zoom out the video.
	<b>Audio Out</b> Turns the audio on or off when the audio is connected.
	<b>Display Text</b> Turns the text output on or off.
	<b>Channel aspect ratio</b> Shows the video in actual proportions.

## Icons on the Live Screen

You can check the status or operation with the icons on the live screen.

- The icons displayed on the screen may differ depending on the type of camera and the user's authority.

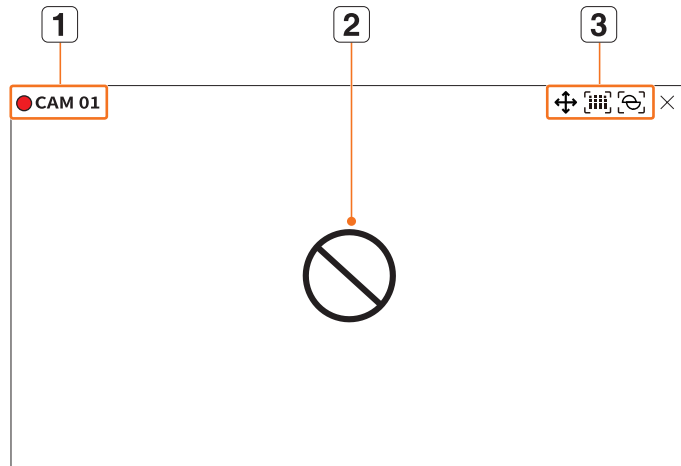


Item		Description
1	Recording status and camera name	Displays camera's recording status and name. <ul style="list-style-type: none"> <li>● (Red) : Displays the event recording.</li> <li>● (Green) : Displays the normal recording.</li> </ul>
2	Video input status	Displayed when there is no input while the camera is on.
		Displayed when the resolution of the live video exceeds the supported range while the camera is on.
		Displayed if no permission to live view is granted.
		<b>WISNET</b> Displayed when the camera is not registered or the camera channel is off. If you set the channel setup to <Covert2>, nothing will be displayed on the live screen. <ul style="list-style-type: none"> <li> If you set the channel setup to &lt;Covert1&gt;, the video will not be displayed on the live screen, but only the OSD will be displayed.</li> </ul>

Item		Description
Event Display		Events from the recorder and camera are displayed in icons. For details, refer to the "Setup > Setting the Event > Event rule setup" page in the Table of Contents.
3	Status Display	It is displayed on the channels that can enable the PTZ mode.
		Displays AUDIO ON/OFF. It will not be displayed when <Off> is selected for the audio in the channel setup.
		If the alarm in is set, it is displayed on the connected channel when an external signal is entered.
		If the event detection is set for each channel, it is displayed when a camera event occurs.
		It is displayed when it fails to decode all the frames due to limited decoding performance and in this case only the I-Frame is decoded.
		This is displayed when a POS (text) event occurs.
		Displayed when there is an error with the SD card.
		Displayed when the SD card capacity is full.
		Displayed when a defocus event occurs.
		Displayed when a fog detection event occurs.
Displayed if the Wisenet camera's certificate is valid.		




## LIVE SCREEN MODE

You can display your camera's live video in various split modes.


-  The 'Live4NVR' profile is added automatically with network camera auto registration, and settings can be changed according to user environment.
- Live4NVR Profile Basic Settings : H.264 (codec), 800 x 600 or 800 x 448 (resolution), 30fps (frame rate)
- Depending on camera specification, you may not be able to add a profile or if you have the PLUGINFREE profile, you will not be able to add the Live4NVR profile.
- When system overloaded and the performance is down, network camera may play only main frame(-l-frame).
- To set profiles, refer to "**Setup > Setting the Camera > Setting the Profiles**" page in the Table of Contents.

### Changing the Pattern of Split Screen


To change the split mode, click  > at the bottom of the screen to select the desired split mode.

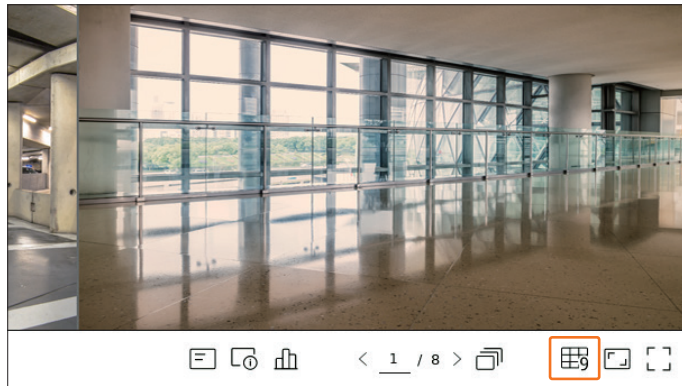


-  Each product may support different split view modes.

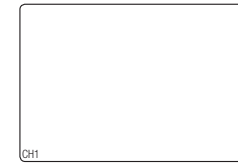


Single mode

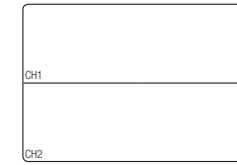


Horizontal 2-split screen

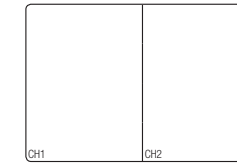


Vertical 2-split screen

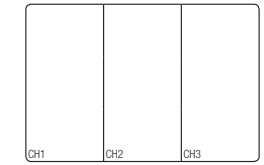


Vertical 3-split screen

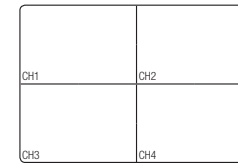


4-split mode

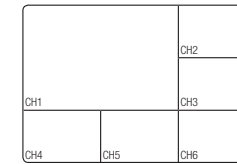


6-split mode  
(1+5 split mode)

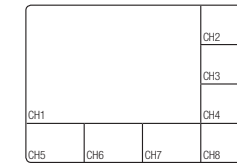


8-split mode  
(1+7 split mode)

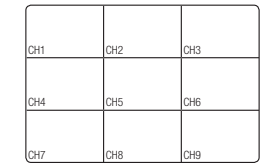


9-split mode

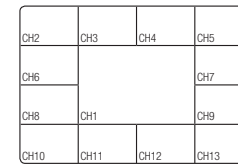


13-split mode  
(1+12 split mode)

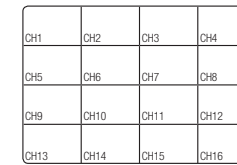


16-split mode

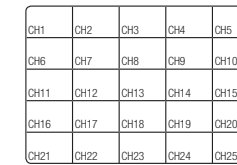

25-split mode

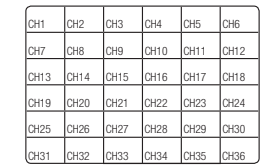

36-split mode

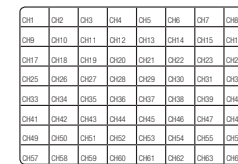

64-split mode

## Switching the Split Mode


You can split the live video from cameras to Single, 4-split, 9-Split, or 16-split mode and watch them one by one.

- Each product supports different split modes.

## Auto Sequence


To switch the screen automatically, click < > at the bottom of the screen.

You can monitor the split mode of your own choice by switching one after another at a certain interval.

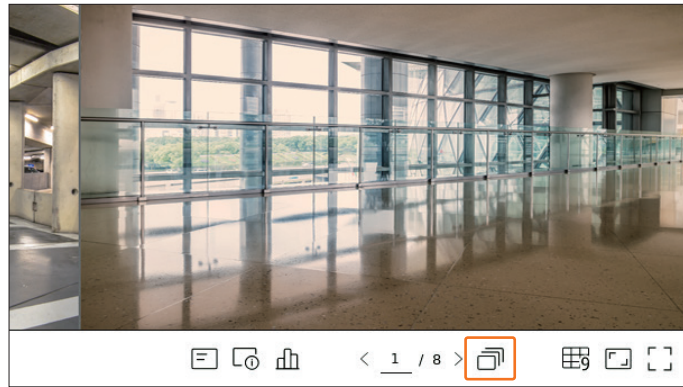


- When you switch the channel, the video may be delayed depending on the network condition.

### Example) XRN-6410DB4

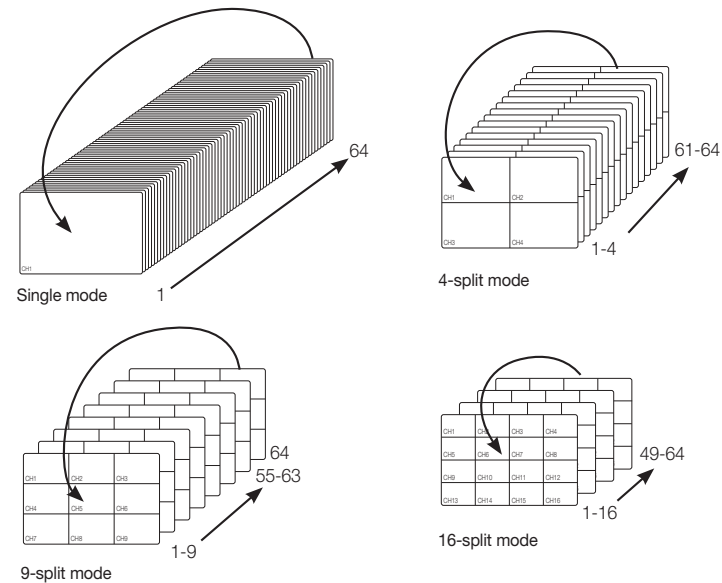


## Manual Switching

Click < or > at the bottom of the screen or enter a page number to go to that page.

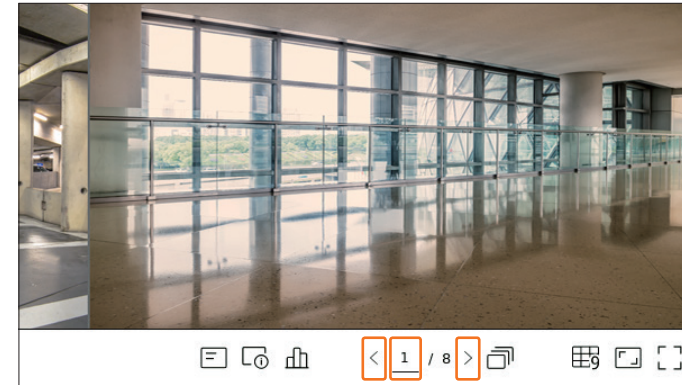

Example) After setting to 16-split screen mode in XRN-6410DB4, when clicking the right (>) button :


Channel(CH 1~16) → Channel(CH 17~32) → Channel(CH 33~48) → Channel(CH 49~64)

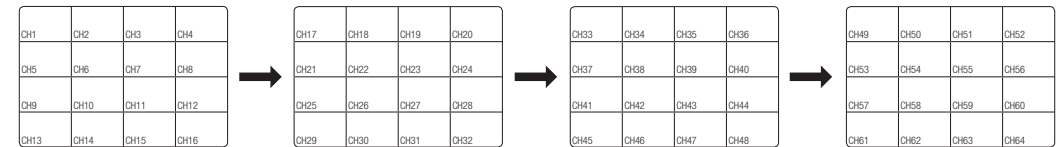

## OSD Information Display

You can show or hide the recording status, camera status, event display, etc. in the video window.


To show or hide the OSD information, click <  > at the bottom of the screen.

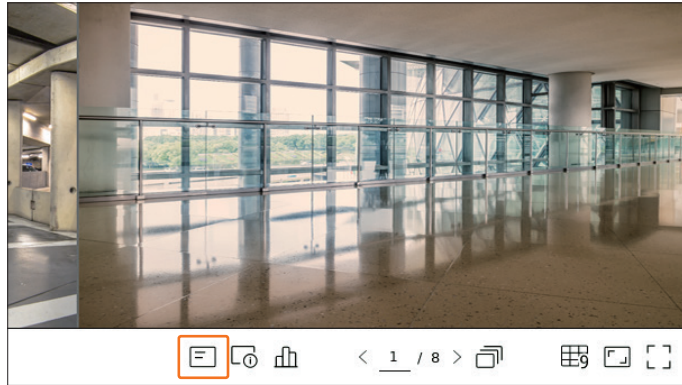


## Channel Information Display


You can check the information of the video being recorded with each camera.

To check the channel information, click <  > at the bottom of the screen.

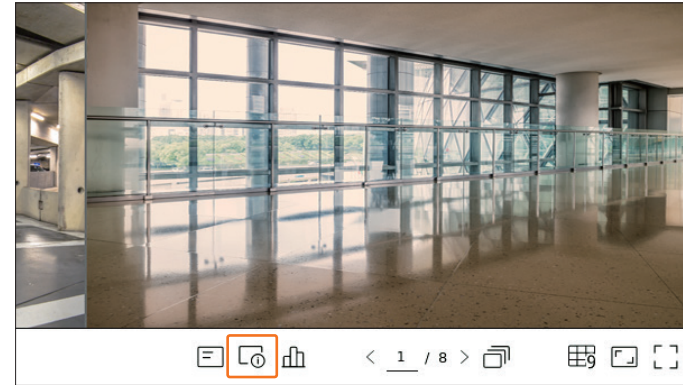


The information of the current video is displayed on the live video which is being monitored.

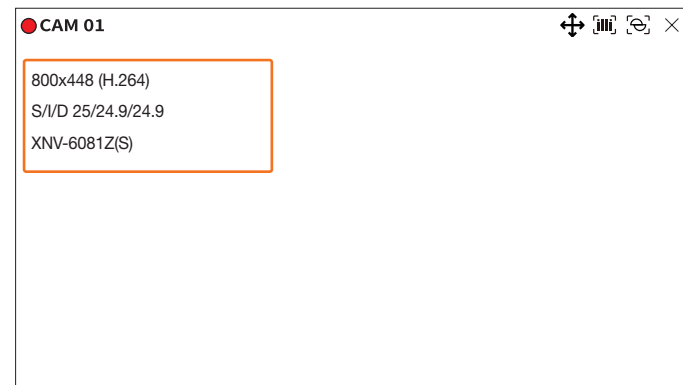

- 800x448 : Displays the resolution of the video.
- H.264 : Displays the video codec.
- S/I/D 25/24.9/24.9 : Displays the frame rate (FPS) of the video. (S : Settings, I : Video input, D : Video display)
- XNV-6081Z : Displays the camera model name.
- CH1 : For multi-channel cameras, the channel number is displayed. The channel number may not be displayed depending on the camera.
- S : Displays the protocol used when registering the camera.
  - S and V represent Wisenet protocol while O represents ONVIF.
  - When connected by RTSP protocol, only RTSP is displayed without the product name.
-  ■ ARB is only visible when an ARB situation occurs.

## Check the Camera Status

You can check the status of all cameras connected to the recorder.  
To check the camera status, click  at the bottom of the screen.

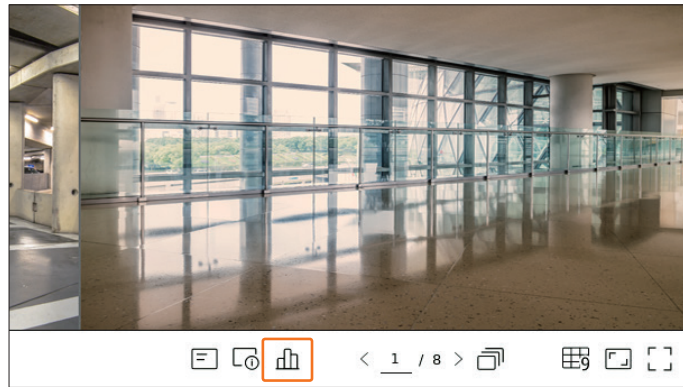

## Live Status

Select **<Live>** in the **<Status>** menu to check the transmitted data from a network camera connected to each channel.

Status						
Live Record Network						
CH	Model	Status	IP Address	Codec	Resolution	Frame rate
1	XND-6081FZ	Connected	192.168.219.3	H.264	800X600	30Fps
2	XNP-6320	Connected	192.168.219.4	H.264	800X448	30Fps
3	XND-8081VZ	Connected	192.168.219.5	H.264	800X448	30Fps
4	XNV-6081Z	Connected	192.168.219.6	H.264	800X448	30Fps
5	XNF-8010R	Connected	192.168.219.7	H.264	768X768	25Fps
6	-	-	-	-	-	-
7	-	-	-	-	-	-
8	-	-	-	-	-	-
9	-	-	-	-	-	-
10	-	-	-	-	-	-
11	-	-	-	-	-	-
12	-	-	-	-	-	-
13	-	-	-	-	-	-
14	-	-	-	-	-	-


- Model : Displays the model name of camera connected to each channel.
- Status : Shows the connection status of camera set to each channel.
- IP Address : Displays the IP address of a camera set to each channel.
- Codec : Displays the live profile codec information for a camera set to each channel.
- Resolution : Displays the live profile resolution of a camera set to each channel.
- Frame rate : Displays the live profile transmission rate for a camera set to each channel.

## Record Status

If you select **<Record>** in the **<Status>** menu, you can check the profile, record type, frame rate (Input/Record), and bit rate (Limit/Input/Record) for each channel.

Status									
Live Record Network									
Total bitrate (Record/Max) : 14.41/50.0Mbps									
View all [Current] Max									
CH	Profile	Record type	Frame rate (fps)			Bitrate (bps)			
			Input	Record	Limit	Input	Record	Receive/Limit	
1	H.264	Normal	FULL	24.0	24.0	2.3M	2.2M	2.2M	95.7%
2	H.264	Normal	FULL	24.0	24.0	2.3M	1.0M	1.0M	43.5%
3	H.264	Normal	FULL	24.0	24.0	2.3M	2.9M	2.9M	126.1%
4	H.264	Normal	FULL	25.0	25.0	2.3M	2.3M	2.3M	100.0%
5	FisheyeView	Normal	FULL	20.8	20.8	2.3M	6.0M	6.0M	260.9%
6	-	-	-	-	-	-	-	-	-
7	-	-	-	-	-	-	-	-	-
8	-	-	-	-	-	-	-	-	-

● Rcv data exceeded   
 ● Profile error   
 ● HDD capacity exceeded  
 HDD capacity (free/total): - /994 GB  
 Recording (free/total): -.6 days 3 hours  
 Overwrite: Currently overwriting.

- Total Bitrate (Record/Max) : Record bitrate shows the amount of actual data recording while Total bitrate shows the maximum data transfer allowed by the Recorder.
- View All : Displays information for all channels or channel groups. This function is only available for products that support distributed recording.
- Current : Shows the recording status information of currently transferred data.
- Max : Shows recording information of the most biggest recording data out of configured standard and event recordings.
-  : Reloads the recording information.
- Profile : Shows the video profile configured to each channel.
- Record Type : View the record type according to general or event recording.
- Frame rate (fps) : Show the input/record frames per second for each channel.
- Bitrate (bps)
  - Limit / Input / Record : Shows the amount of limit/input/recording data for each channel.
  - Receive/Limit : Shows the data ratio of actual data transferred from the camera and allowed maximum defined by user.
- Record setup : You can set detailed recording settings in the Recording Settings window. For more details, refer to the **"Setup > Setting the Recording > Record Setup"** page in the Table of Contents.
  - If an error occurs during recording, the channel's profile column turns yellow. This profile error indicates that when a recording profile cannot be used to receive video from camera, an alternative profile is used to record the video. When the recording profile resumes, the camera video can record by using the set recording profile.
  - If Recorder exceeds the recording limit, only the key frame will be recorded. In that case, a restricted recording popup and an icon will appear. The restricted recording popup appears only once. If you change the camera setup and record setup, the restricted recording popup may appear once more to confirm the status. If you don't want to see it again, then check Do not show this again in the popup. For the maximum allowed number of recording, refer to the **"Setup > Setting the Recording > Record Setup"** page in the Table of Contents.
  - For dual recording, the bit rate is shown as the sum of Main Stream and Sub Stream. However, the **<Enable dual recording>** box in the **"Record > Record Option"** menu must be checked. The recording profile and remote profile can be set in the **"Camera > Profile"** menu.

## Network Status

Select <Network> in the <Status> menu to check the status of network bandwidth currently being received/transmitted.

Status			
Live	Record	Network	
			Last update time 05:54:06
Network	Receive (bps)	Transfer (bps)	
Network 1	0.0 M	0.0 M	
Network 2	12.5 M	1.6 M	
Network 3	0.0 M	0.0 M	

ok

## Channel Setting

You can display the channel in a desired area of a split screen.

To switch the position of a channel, hold a channel and drag and drop it to the desired location.

Example) If switching CH 1 to CH 7

CH1	CH2	CH3	CH4
CH5	CH6	CH7	CH8
CH9	CH10	CH11	CH12
CH13	CH14	CH15	CH16

→

CH7	CH2	CH3	CH4
CH5	CH6	CH1	CH8
CH9	CH10	CH11	CH12
CH13	CH14	CH15	CH16

## Switching to Single Mode

When in split mode, select and double-click a desired channel to switch to its Single mode.

Example) If double-clicking CH 3


CH1	CH2	CH3	CH4
CH5	CH6	CH7	CH8
CH9	CH10	CH11	CH12
CH13	CH14	CH15	CH16


→


CH3
-----

## Changing Overall Channel Aspect Ratio


Video screen ratio for all channels can be changed in live split screen mode.

Click <  > at the bottom of the screen. It changes to the actual proportion of the video.

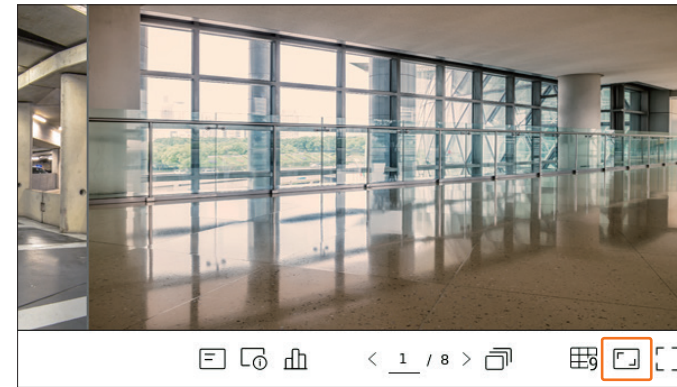


Click <  > to return to the previous aspect ratio.



-  You can change the aspect ratio of each channel. For more information, refer to the "Live > Camera Video Control > Change Channel Aspect Ratio" page in the Table of Contents.

## Full Screen Mode

You can change to full screen mode, which has no top/bottom/left/right areas of the live screen.  
Click < [ ] > at the bottom of the screen.

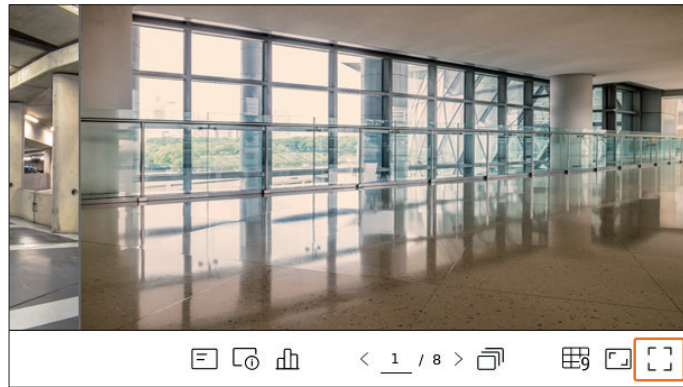

Changes to full screen mode.

- To exit full screen, place your mouse cursor over the bottom of the full screen mode and click < ≡ ≡ >.




## SETTING UP THE LIVE LAYOUT

This section outlines how to select a series of channels based on their purpose/accessibility and monitor them in a single layout.

**Example)** Layout "Lobby" - Lobby camera 1, Lobby camera 2, Front entrance camera 2  
Layout "VIP" - Directors' meeting room 1, Directors' meeting room 2, Directors' lounge 1, Corridor camera on the 7th floor

### Check Layout List

Click < ≡ List > at the top left of the live screen, and then click < ✓ > to display the layout list.

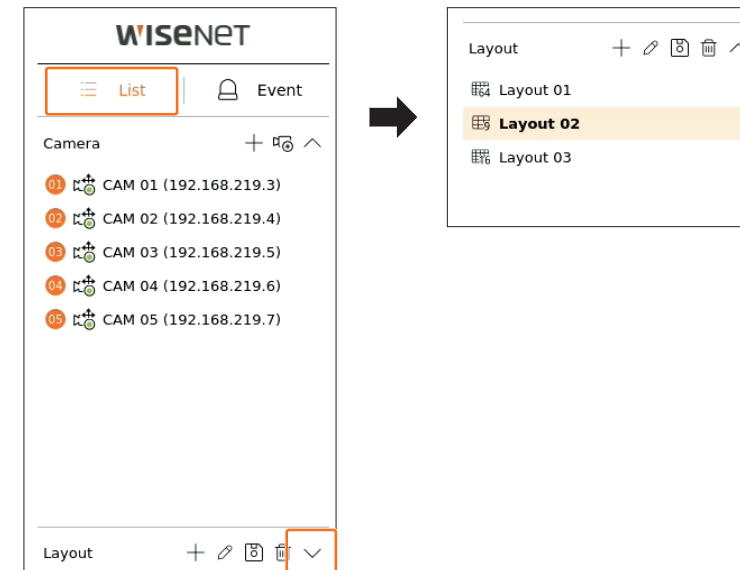



- + : Create a new layout.
- ✎ : Change the channel or name of the layout.
- 💾 : Save the changed layout.
- 🗑️ : Delete the added layout.
- ^ / ✓ : Open or close the layout list.

### Add Layout and Set Name

- Click < + > to add a layout.
- Click < ✎ > to set the name for the added layout.
- In the device list, click to select the channel to be displayed on the layout screen.
- Click < 💾 > to save the set layout.

- ✎ Each layout is saved separately by the user.
- The layout set on the live screen can also be used for time search and can be searched according to the channel order and channel combination set by the user. For more information, refer to the "Search > Time Search" page in the Table of Contents.

## Change of Layout Channel and Name

1. Click <  > after selecting a layout.
2. Add or delete channels or rename layouts.
3. Click <  > to save the changed settings.

## Delete Layout

Click <  > after selecting the layout to delete.


-  You cannot delete the default layout.

## Play Layout Sequence

You can automatically switch the layout list to a set time interval to view.


### Sequence Setting


Click <  > at the bottom of the layout list to set the sequence.

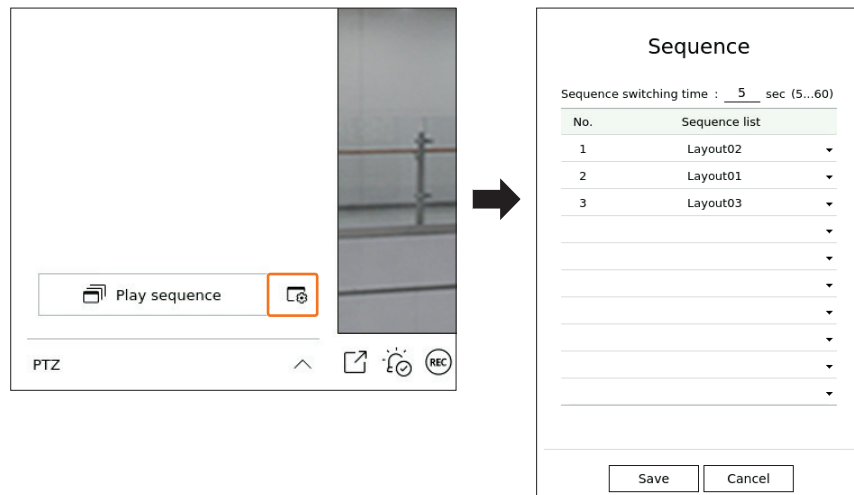

- Sequence switching time : Set the switching time of the layout list.
- Sequence list : Set the layout sequence playback order. You can add the same layout repeatedly.

## Play Layout Sequence

Click <  Play sequence > at the bottom of the layout list to automatically switch the layout according to the sequence settings.

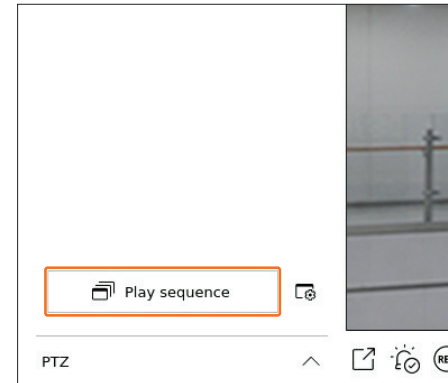


-  <Play sequence> is active only when a sequence is set.

## REAL-TIME EVENT MONITORING


Real-time events that occurred on the device can be checked in the live video window and event list.



- AI browse events are only available for products that support AI.

### Check Event List

Click <  Event > on the left side of the live screen to display the real-time event list.

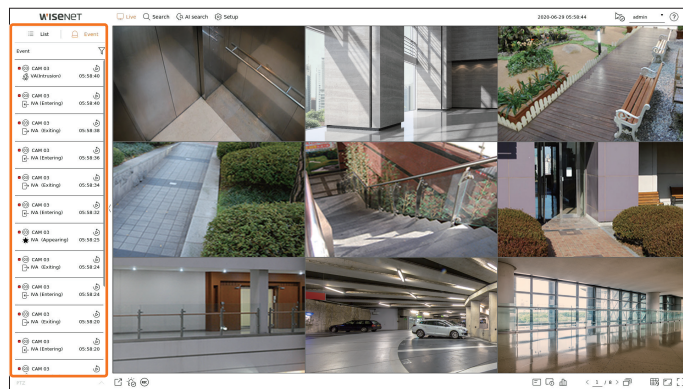- When new events occur, the list of events will be updated accordingly.
- The specified channels and events are displayed in the list according to the event rule setup. For details, refer to the "Setup > Setting the Event > Event rule setup" page in the Table of Contents.




-  : Browses for the event by the desired condition.
-  : Plays the video at the time of the event.

- When an alarm output occurs, if event recording is set and pre-event time and post-event time are set, event recording is performed before or after the event according to the set recording method. For more information about event recording settings, refer to the "Setup > Setting the Recording > Record setup" page in the Table of Contents.

- The video may be delayed depending on the network condition.
- The event output can be delayed as the transfer of the alarm event from the network camera takes time.


## Event Search

You can browse events by camera and event type.

To search for a specific event, click <  > to select the event type and camera to browse.

### Event filter


Displays only selected events in the event list.

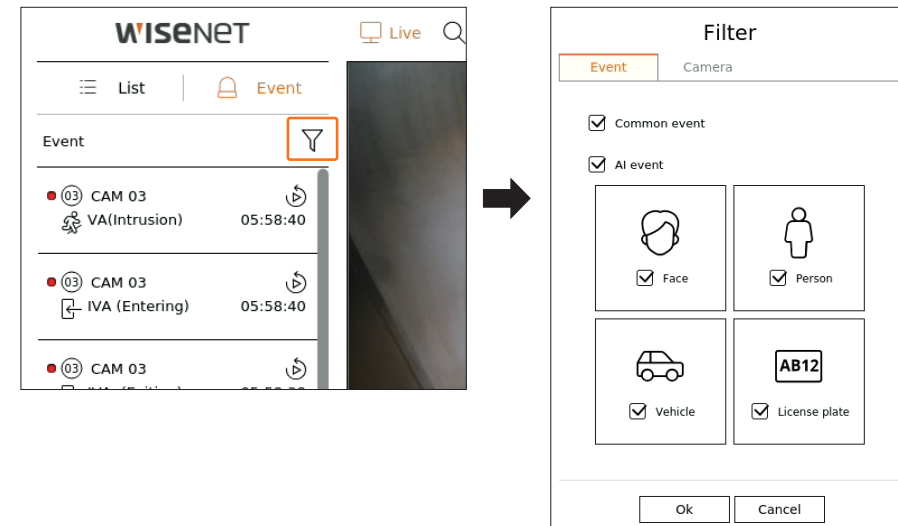

- Common event : Searches for event types that have occurred in general cameras such as motion detection and IVA.
- AI event : Searches for AI event types such as face, person, and vehicle.
  - AI events are only activated when an AI camera is connected .

### Camera filter

Displays events for the selected camera only.

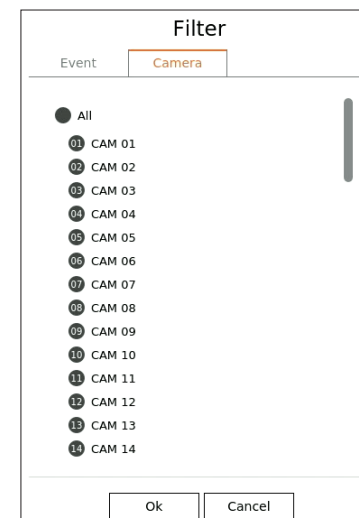



## Event Instant Viewer

Select an event to check from the event list, and click < ⏮ > to play the recorded video at the time the event occurred.

- Instant viewer can play an event video for 1 minute.
- For AI events, the best shot and details of the event that occurred are displayed.
- AI event recognition is only available when connected to a Wisenet AI camera. To enable the AI function, set the "Object" function in the "Setup > Event > Event Setup" menu.



- ▶/|| : The video is played/stopped.
- ⏮ : Moves to the playback screen.
- ✕ : Instant Viewer playback ends.


## Stop Alarm Output

When an event occurs, an alarm can occur. Click < 🔔 > at the bottom of the screen to stop the alarm output if necessary.

For details, refer to the "Setup > Setting the Event > Event rule setup" page in the Table of Contents.

## CAMERA VIDEO CONTROL


By using the function icon of the video window, you can easily use the functions of capture, video zoom, PTZ camera and thermal imaging camera. When you place your mouse over the video window, the live screen menu will appear.

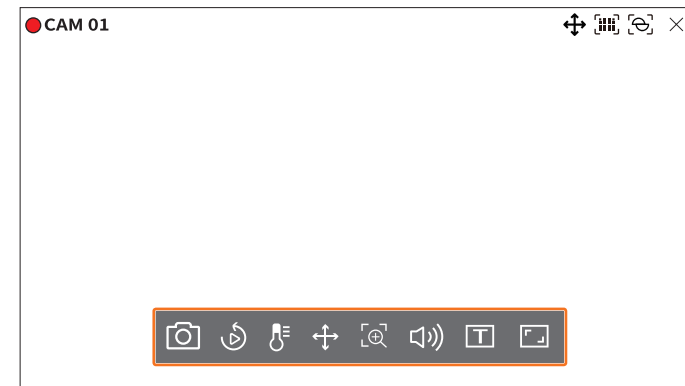

## Capture

You can take a screenshot of the current video of a specific channel selected on the live screen.

- Select a channel to capture video and click < 📷 >.
- Select the output information to be displayed on the captured screen.

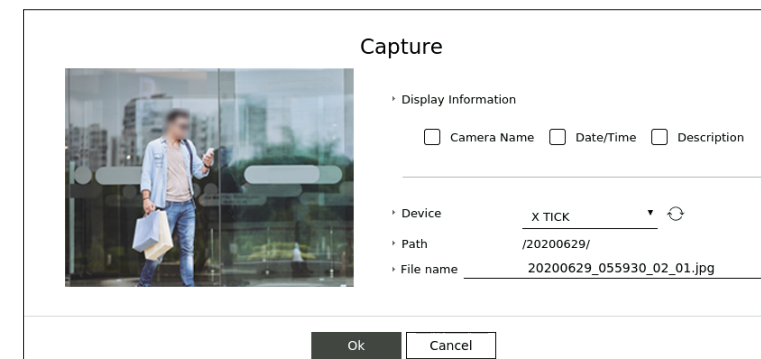


- Set the device where the screenshot file will be saved and the file name.
- Complete the settings and click < OK > then the image captured from the screen is saved to the selected device.




- Camera screen larger than 2 megapixels is captured in Full HD size.

## Instant Viewer

You can move the video back 30 seconds and play it while live monitoring. Instant viewer plays video from 30 seconds to 1 minute from the current time.

Select the desired channel and click <  >.  
The Instant Viewer screen appears.




-  : The video is played/stopped.
-  : Moves to the playback screen.
-  : Instant Viewer playback ends.



## Temperature Detection Mode

For images that support the thermal imaging camera function, you can click the desired point to check the temperature information.

Select the desired channel and click <  >.

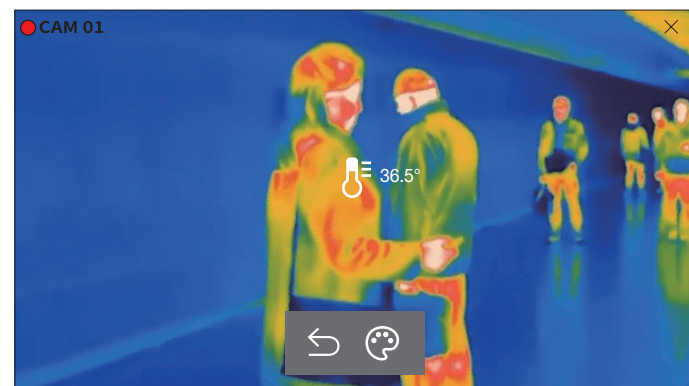When you place your mouse over the video, the mouse pointer changes to a thermometer shape, and when you click a specific location on the video, the temperature at that location is displayed next to the mouse pointer.



-  : Exits temperature sensing mode.
-  : The color of the video changes according to the temperature color selection.


## PTZ Mode







You can run PTZ control of the selected channel.

Select the desired channel and click <  >.

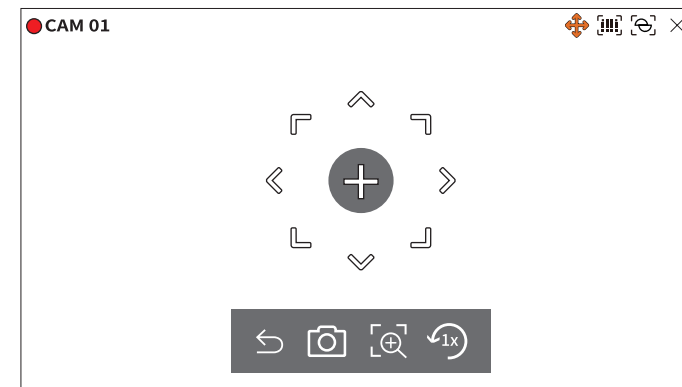
Enters the PTZ control mode.


-  : Depending on the camera, the PTZ control function and speed may be different.



-  : The PTZ mode is closed.
-  : Captures video of the current state.
-  : After clicking the digital zoom icon, you can use the  /  buttons to zoom in or zoom out the video.
-  : Returns to the 1x zoom screen.

## Adjusting the Camera Direction

When you rolls over the mouse to <  >, the 8-way key appears, and when the mouse leaves the area of the direction key, the direction key disappears. You can fine-tune the camera direction by clicking the 8-direction key once. Keep clicking the arrow keys to move in the desired direction and release the mouse to stop.

To quickly adjust the direction of the camera, click <  > and drag. The screen moves quickly in the desired direction. You can adjust the screen movement speed according to the drag distance.

## Moving to the Center of the Screen

Click a specific location on the screen to move the video at that location to the center of the screen.

## Zooming the Selected Area

Drag a specific area of the screen, to move and the selected area to the center of the screen and zoom in.

## Zooming In and Out of Images


You can zoom in or out using the mouse wheel. Click <  > to go back to the original size.


## Digital Zoom

You can zoom in or out the video via digital zoom.

Select the desired channel and click < [Z] >.

Enters the digital zoom mode.

-  In PTZ mode, click < [Z] > to run the digital zoom.

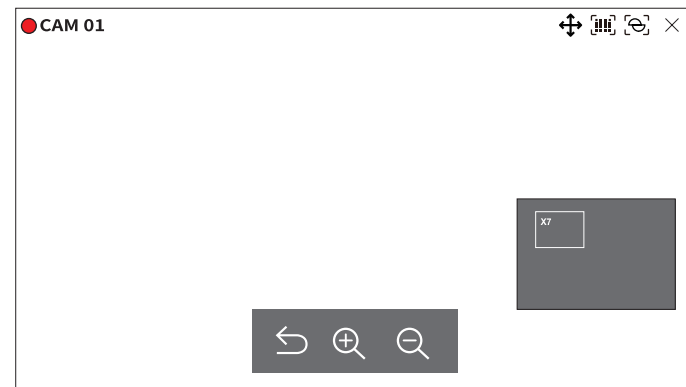


-  : Exits the digital zoom mode.
-  /  : Zooms in or out the video.
-  : When the video is enlarged 10%, a minimap is displayed. You can quickly check the desired location in the enlarged video through the mini-map.

## Audio Output

You can turn the sound on/off corresponding to the channel in Live mode.

Select the desired channel and click < [Speaker] >.

Audio output can only be turned on in one channel. The audio output of other channels will be automatically turned off.

-  If you have configured the audio output settings properly but the audio or voice is not output, check if the connected network camera supports the sound signal and if you have configured the sound settings as appropriate. The sound icon can be displayed if the sound signal fails to output from noise.
- Only the channel where <Audio> is set to <On> in "Setup > Camera > Channel Setup" displays the audio icon ( [Speaker] ) in Live mode that you can use to turn the sound on/off.

## Display Text


You can monitor texts regarding the sales record received from POS in real time.

-  This is executable when a text device is connected.
- The Recorder can display text on a live screen when a text device is set. For details, refer to the "Setup > Setting the Device > Text" page in the Table of Contents.


Select the desired channel and click < [T] >.

When text information occurs, the text information is displayed in the corresponding video window.

Also, when a set text event occurs, the corresponding part of the text is displayed in a separate color.

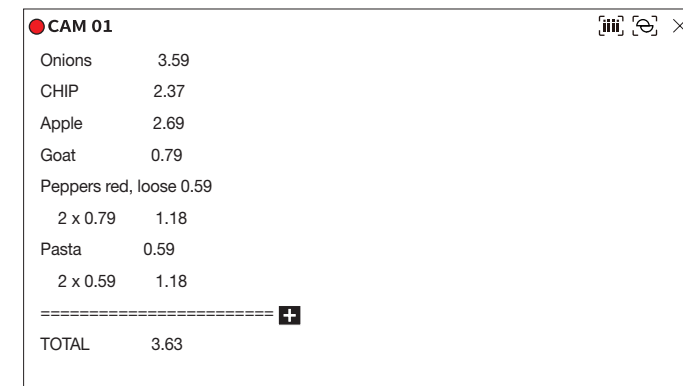

< [+] > appears when text information crosses the screen. Click < [+] > to display a popup window where you can check the entire content.

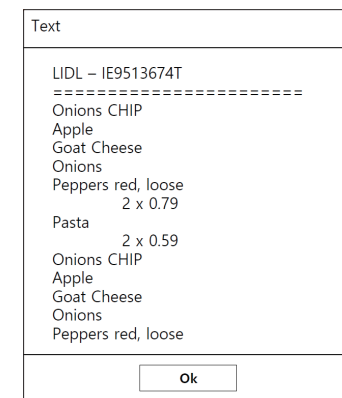

## Change Channel Aspect Ratio

You can change the aspect ratio of each channel.

Select the desired channel and click <  >.

It changes to the actual proportion of the video.





## PTZ CONTROL

With this Recorder, you can configure the settings of a PTZ camera as well as commercial cameras in the market to your preference.

This is active only if a channel that a PTZ camera is connected to is selected.


### Getting Started with PTZ Operations


The PTZ camera will be activated only if the channel of the PTZ camera is selected. After selecting the desired channel, click <  > on the live screen menu.

- This is available only if a PTZ camera is connected and the <  > icon is displayed on the screen.
- Even if the connected network camera does not support the PTZ operations, you can configure the PTZ control settings (if possible) by installing the PTZ driver (physical device).
- It only supports a network camera with Hanwha Techwin's PTZ function and a camera registered in the ONVIF.

### PTZ Control Menu

You can use a single PTZ camera to perform the Pan, Tilt and Zoom operations to monitor multiple places, and configure the custom settings of the presets in a desired mode.

Click < **PTZ**  > on the bottom left of the live screen to display the PTZ camera control menu as shown below.

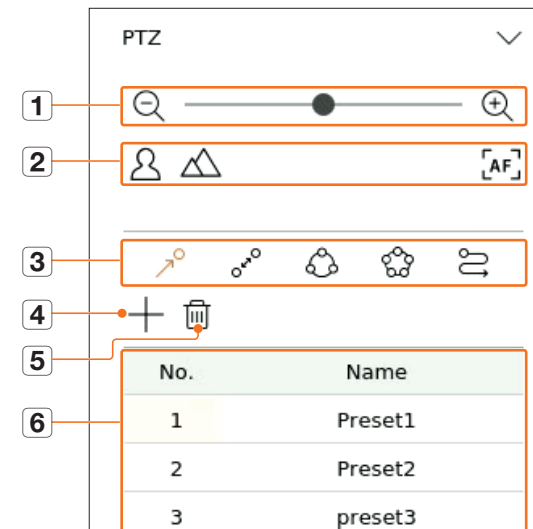

Item		Description
1		<b>Zoom out/Zoom in</b> Activate the Zoom operation of the PTZ camera.
2		<b>Manual Focus</b> You can adjust the focus manually.
		<b>Auto Focus</b> You can adjust the focus automatically.
3		<b>Preset</b> Set the preset position to move the camera, and then select the desired preset to move to the set position.
		<b>Swing</b> Swing is a monitoring function that moves between two preset points and enables you to trace the motion.
		<b>Group</b> The group function enables you to group various presets before calling them in sequence.
		<b>Tour</b> Monitor all the groups created by a user in turn.
		<b>Trace</b> Tracking remembers the trace of movements that you instructed and reproduces it for your reference.
4		The preset you set is saved and displayed in the list.
5		Deletes the selected preset list.
6	<b>Preset List</b>	Shows a list of saved presets.

- The PTZ working (active) mark can be active even if the PTZ operation is not available in normal mode. So ensure that you have completed the PTZ settings before proceeding.
  - Some cameras may differ in the menu title and operation with regard to Swing, Group, Tour and Trace.
- Even if your network camera supports the function, you can use it only if the button is activated in the PTZ control launcher.

## Using Digital PTZ (D-PTZ) Function

1. Register a camera that supports the D-PTZ profile.
  - In cameras that support the D-PTZ profile, you can use the D-PTZ function.
2. Both cameras that support general PTZ and cameras that support D-PTZ can control the live image using some of the <PTZ control> function menus.
  - For more information about the supported functions, please refer to the camera manual.

### Preset

Preset is a set of saved data specifying the locations of a PTZ camera. A single PTZ camera can save up to 300 locations.

#### To add a preset

1. Select the desired channel and click < >.
  - The PTZ control screen appears.
2. Use the arrow keys to adjust the camera to the point.
3. Click < >.
4. If you click < >, the "Preset setup" window will appear.

**Preset setup**

No.  ▼


Name

5. Click <  ▼ > to select the Preset Order to set.
6. Enter the Preset name.
7. Click < **Save** >.
  - The preset setting will be saved.

- If you replace a camera that saves your preset settings with a different one, you must configure the preset settings again.


## To delete a registered preset

1. Click <  >.
2. Click <  >. "Delete preset" window will appear.

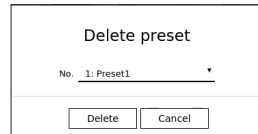

3. Click < 1: Preset1 > to select the preset to delete.
4. Click <Delete>. The selected preset will be deleted.

## Running Preset

1. Click <  >.
2. Click the preset you want to run from the list.  
The camera lens moves to the set position.


## Running Swing (auto pan), Group (scan), Tour, or Trace (pattern)


The running method of each function is the same as the preset operation method. For details on how to use it, refer to the camera's user manual.

-  Depending on the camera's capabilities, only some features may be available.



## EXPORTING THE RECORDED VIDEO

You can search the storage device to be exported and export the recorded video of the desired time by layout or channel.

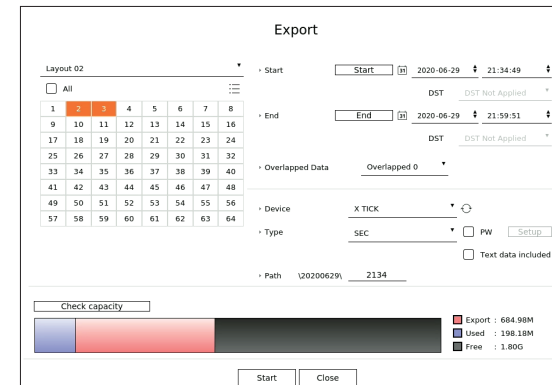1. Click <  > at the bottom of the screen.
2. The export setup screen will appear.




3. After completing the export setup, select <Start>.
    - If there is no device to export, the <Start> button will be deactivated.
    - If you click <Stop> during the export progress, which is a the export will be canceled.
  4. Click <OK> on the export completion confirmation window to finish.
- Select a layout : Select a desired layout from the layout list.
  - Channel : Select a channel to export.
    - You can select multiple channels. If you select <All>, all channels will be selected.
  - Export section : Set the <Start> and <End> time to run the export select to.
    - Start : You can set the start time for the export to the desired time.  
Click <Start> to set the export start time to the first time the video was recorded.
    - End : You can set the end time for the export to the desired time.  
Click <End> to set the export end time to the last time the video was recorded.
  - Overlapped Data : Shows a list of overlapping data on a same time according to the number of data. This is displayed when there are duplicate data in the same channel due to changes in the time or time zone.
    - For more details, refer to the "Setup > Setting the System > Date/Time/Language" page in the Table of Contents.
  - Device : Select a device to export the among the searched devices.
  - Type : Select the export format.
    - SEC : You can export in your own file format that can be played directly on your PC. You can play with the viewer included in the export folder.
      - If you select SEC format, you can choose whether to include "PW Setup" and "Text Data Included".
    - Recorder : You can export to a file that can be played only on the recorder.
  - Path : Displays the folder location where the export file will be saved. You cannot change the storage folder, only the file name to be saved.
  - Check capacity : You can check the selected export capacity and the current and remaining capacity of the export device.

-  If you insert a USB memory stick with insufficient storage space, volume calculation may be disabled. Format the memory stick or delete some of the data on the memory stick to secure adequate storage space.
  - The operation speed of the product may slow down if the export is in progress.
  - You can switch to the menu screen during export progress, but data playback will not be possible.
  - Data can be played in the web viewer during export progress, but audio will not be supported.
  - If the export fails, check the current capacity and status to see if the hard disk is connected properly in the "**Device > Storage Device**" menu.
- 
-  If <Hide> is selected while the export is in progress, the screen changes to the upper menu, but the export continues.

You can search recorded video by various conditions such as time, event, and export.

## SCREEN LAYOUT OF THE SEARCH

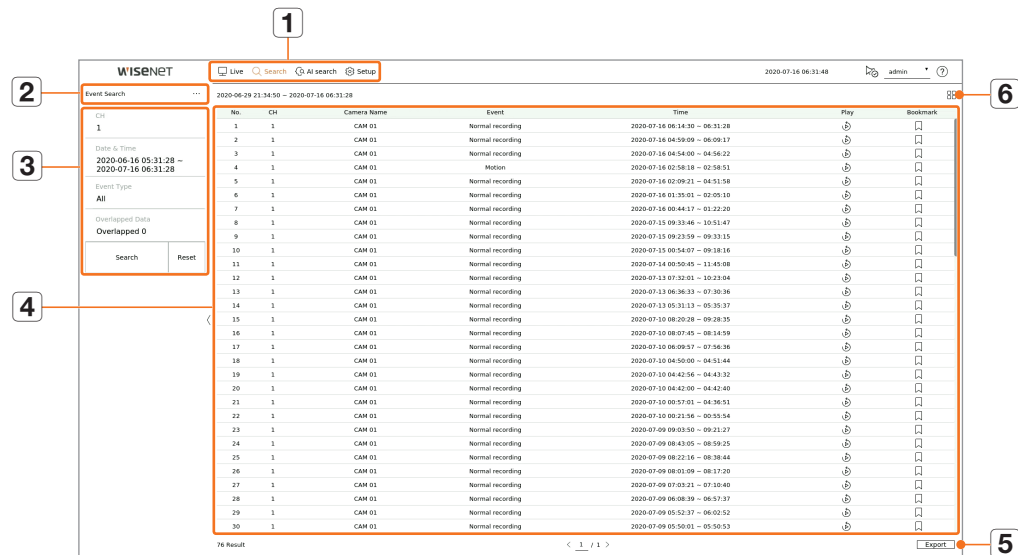


Item	Description
1	<b>Menu</b> Click each menu to go to the corresponding menu screen.
2	<b>Search menu tab</b> Click the menu tab to display the detailed search menu. Click Search menu to go to the corresponding Search screen.
3	<b>Search conditions</b> You can set various search conditions, such as date/time/event.
4	<b>Search results</b> Displays search results.
5	<b>Export</b> Exports search results to a file.
6	<b>≡, 𐀀</b> Displays the search results as a list or thumbnail.

- Click <Reset> to initialize the search conditions and results.
- Double click on the desired item in the search results list to go to the play screen.  
When you click Play (⏮), the video will be played in an instant viewer.
- You can specify a bookmark by clicking the bookmark (🔖) in the search results list. You can check the specified video in the bookmark search menu.
- If the search results are in multiple pages <, > you can click to go to the previous/next page. Or, you can click the current page number and enter the desired page to move.

## TIME SEARCH

You can search the recorded data by the desired date and time conditions.

- The time displayed will be based on the time zone and daylight saving time (DST) applied time zone, so it may be displayed differently depending on whether the data time zone recorded at the same time and daylight saving time (DST) is applied.

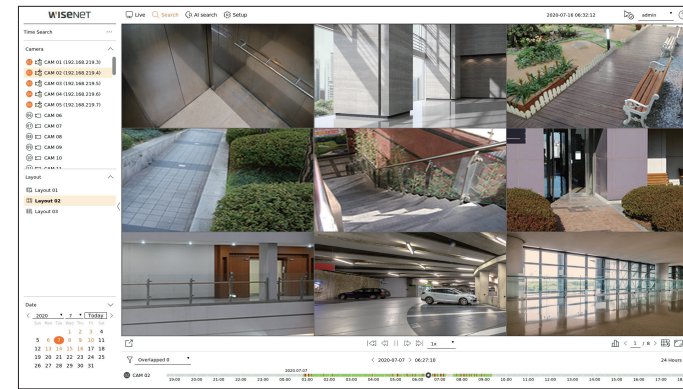

- Select <Time search> in the <Search> menu.
- Select a channel to search.
- Choose a layout.
- Click <, > in the date selection window to select the year and month to search.  
Dates with data will be shown in orange and current dates will be shown in orange circles.
- Select a date to search from the calendar.  
The first video of the searched data of the day will be displayed in the video window and the data will be displayed in the time line.
  - Click <Today> to search for today's date. Today's date will be selected.
  - The displayed color differs depending on the type of recording data.
    - Light green : Normal recording video
    - Red : Event video
- Double click the time of the desired channel to play the recorded video of that time.



## EVENT SEARCH

You can search for various events by channel.

No.	Ch	Camera Name	Event	Time	Play	Bookmark
1	1	CAM-01	Normal recording	2020-07-14 06:31:28	▶	🔖
2	1	CAM-01	Normal recording	2020-07-14 06:30:09 - 09:09:17	▶	🔖
3	1	CAM-01	Normal recording	2020-07-14 04:54:09 - 04:54:22	▶	🔖
4	1	CAM-01	Motion	2020-07-14 02:20:19 - 02:20:51	▶	🔖
5	1	CAM-01	Normal recording	2020-07-14 00:29:21 - 00:31:06	▶	🔖
6	1	CAM-01	Normal recording	2020-07-14 01:35:15 - 02:05:10	▶	🔖
7	1	CAM-01	Normal recording	2020-07-14 00:04:17 - 01:22:20	▶	🔖
8	1	CAM-01	Normal recording	2020-07-13 09:34:06 - 10:51:47	▶	🔖
9	1	CAM-01	Normal recording	2020-07-13 09:23:19 - 09:33:15	▶	🔖
10	1	CAM-01	Normal recording	2020-07-13 09:24:57 - 09:33:16	▶	🔖
11	1	CAM-01	Normal recording	2020-07-13 04:00:40 - 11:41:00	▶	🔖
12	1	CAM-01	Normal recording	2020-07-13 07:32:01 - 09:23:04	▶	🔖
13	1	CAM-01	Normal recording	2020-07-13 00:26:21 - 07:30:06	▶	🔖
14	1	CAM-01	Normal recording	2020-07-13 00:30:12 - 05:25:37	▶	🔖
15	1	CAM-01	Normal recording	2020-07-13 00:20:24 - 08:24:26	▶	🔖
16	1	CAM-01	Normal recording	2020-07-13 00:07:01 - 08:14:50	▶	🔖
17	1	CAM-01	Normal recording	2020-07-13 00:09:57 - 07:54:36	▶	🔖
18	1	CAM-01	Normal recording	2020-07-13 04:30:09 - 04:31:44	▶	🔖
19	1	CAM-01	Normal recording	2020-07-13 04:42:06 - 04:43:50	▶	🔖
20	1	CAM-01	Normal recording	2020-07-13 04:40:09 - 04:42:40	▶	🔖
21	1	CAM-01	Normal recording	2020-07-13 00:37:01 - 04:34:51	▶	🔖
22	1	CAM-01	Normal recording	2020-07-13 00:21:01 - 00:31:04	▶	🔖
23	1	CAM-01	Normal recording	2020-07-09 09:03:04 - 09:21:07	▶	🔖
24	1	CAM-01	Normal recording	2020-07-09 08:43:01 - 08:54:25	▶	🔖
25	1	CAM-01	Normal recording	2020-07-09 08:27:01 - 08:34:44	▶	🔖
26	1	CAM-01	Normal recording	2020-07-09 08:01:04 - 08:17:00	▶	🔖
27	1	CAM-01	Normal recording	2020-07-09 07:02:11 - 07:10:40	▶	🔖
28	1	CAM-01	Normal recording	2020-07-09 06:00:10 - 06:31:37	▶	🔖
29	1	CAM-01	Normal recording	2020-07-09 05:42:37 - 06:02:52	▶	🔖
30	1	CAM-01	Normal recording	2020-07-09 05:50:11 - 05:58:53	▶	🔖

1. Select <Event search> in the <Search> menu.
2. Select a channel to search.
  - If you select a channel to search, you can change the channel display mode by clicking <🔍>. You can select a desired channel by clicking or dragging it from the channel table, and clicking the channel in the channel list.
3. Select a date and time to search.
4. Please select an event type. When you click the item, the event type selection window will appear.
  - Event type options : All, motion, video analysis, auto tracking, tampering, defocusing, fog detection, audio detection, sound classification, alarm input (camera), normal recording, manual recording, ShockDetection, ObjectDetection.Face, ObjectDetection.Person, ObjectDetection, ObjectDetection.Vehicle
  - Event type options may vary depending on the camera model.
5. Select the overlapped data.

It will be displayed when there is overlapped data in one channel by changing the time or time zone at the selected time.
6. Click the <Search> button.
  - CH : Displays the channel where the event occurred.
  - Camera Name : Displays the camera name.
  - Event : Displays the event type of the recorded video.
  - Time : Displays the start time and end time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
7. If you double-click an item to play in the search list, the recorded video will be played.

## TEXT SEARCH


You can search the data input to the POS device connected to the recorder.

1. Select <Text search> in the <Search> menu.
2. Select a date and time to search.
3. Set the keyword item. When you click an item, the keyword setting window appears.
  - You can search with a narrower range by entering specific characters.
    - Text search keyword : Enter the text to search.
    - Match case sensitivity : When checked, the entered characters will be searched with case-sensitivity.
    - Match whole words : When checked, only data that exactly matches the entered character will be searched.
    - Event keywords : You can search for text with preset event keywords. For more information about event keyword settings, refer to the "Setup > Setting the Device > Text > Text Event Settings" page in the Table of Contents.
4. Select the overlapped data.

It will be displayed when there is overlapped data in one channel by changing the time or time zone at the selected time.
5. Click the <Search> button.
  - Device : Displays the name of the POS device connected to the recorder.
  - CH : Displays the channel where the event occurred.
  - Keyword : Displays the searched text.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
6. If you double-click an item to play in the search list, the recorded video will be played.

## EXPORT SEARCH


You can search the exported data on the connected storage media. Only data saved in recorder file format when exported will be retrieved.

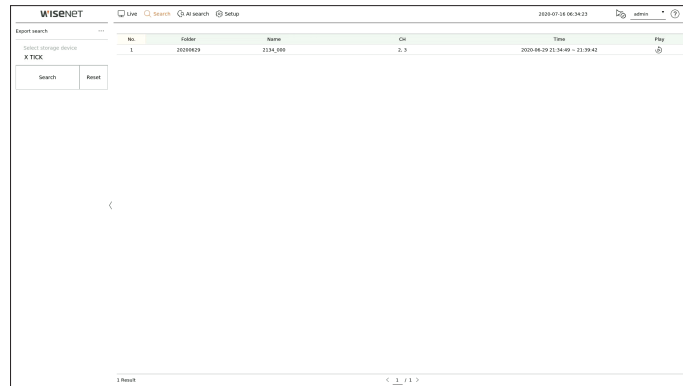

1. Select <Export search> in the <Search>.
2. When you click on the storage device selection, the device search window is displayed. Click <↻> to search Storage Media.
3. Click <Search>.
  - Exported file information will be displayed.
  - Folder : Displays the folder where files are stored.
  - Name : Displays the saved file name.
  - CH : Displays the channel of the recorded video.
  - Time : Displays the start time and end time of the exported video.
  - Play : Plays the exported video with an instant viewer.
4. If you double-click an item to play in the search list, the recorded video will be played.

## ARB SEARCH

You can search auto-recovery backup data stored on ARB storage devices.

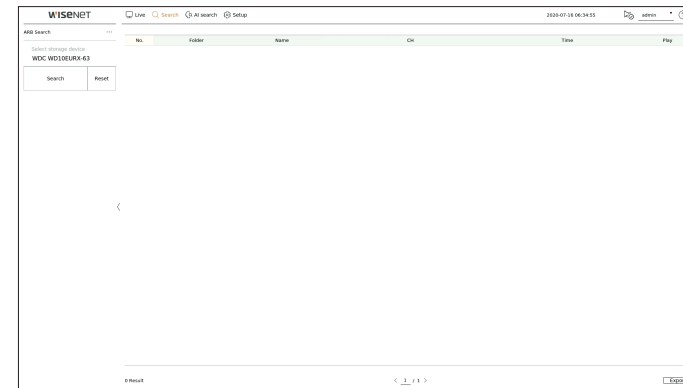

1. Select <ARB search> in the <Search> menu.
  - For more information about ARB search, refer to the "Setup > Setting the Device > Storage device" page in the Table of Contents.
2. When you click on the storage device selection, the device search window is displayed. Click <↻> to search for backup devices.
  - The model name of the ARB storage device will be displayed.
3. Click <Search>.
  - The ARB file information stored on the device will be displayed.
  - Folder : Displays the folder where ARB data is stored.
  - Name : Displays the file name stored on the ARB device.
  - CH : Displays the recorded channel.
  - Time : Displays the start time and end time of the backed up video recording.
  - Play : Plays the recorded video with an instant viewer.
4. If you double-click an item to play in the search list, the recorded video will be played.

## BOOKMARK SEARCH

You can search for bookmarked data.

No.	Bookmark name	Event	CH	Time	Play	Bookmark
1	CAM 01_2020-06-18 13:51:45	Intrusion	3	2020-06-18 13:51:45 ~ 00:52:40	▶	■
2	CAM 01_2020-06-18 13:58:26	Intrusion	3	2020-06-18 13:58:26 ~ 00:59:21	▶	■
3	CAM 01_2020-06-18 13:47:22	Exit/ing	3	2020-06-18 13:47:22 ~ 01:48:55	▶	■
4	CAM 01_2020-06-18 13:44:05	Appear	3	2020-06-18 13:44:05 ~ 01:44:56	▶	■
5	CAM 01_2020-06-18 13:43:00	Face detection	3	2020-06-18 13:43:00 ~ 01:43:06	▶	■
6	CAM 01_2020-06-17 18:01:14	Intrusion	1	2020-06-17 18:01:14 ~ 00:41:47	▶	■
7	CAM 01_2020-06-17 17:40:00	Intrusion	1	2020-06-17 17:40:00 ~ 00:40:41	▶	■
8	CAM 01_2020-06-17 17:43:03	Exit/ing	1	2020-06-17 17:43:03 ~ 00:43:23	▶	■
9	CAM 01_2020-06-17 18:56:25	Manual recording	1	2020-06-17 18:56:25 ~ 00:38:17	▶	■
10	CAM 01_2020-06-18 12:38:19	Appear	1	2020-06-18 12:38:19 ~ 00:39:44	▶	■
11	CAM 01_2020-06-18 12:38:19	Manual recording	1	2020-06-18 12:38:19 ~ 00:41:52	▶	■

### 1. Select <Bookmark search> in the <Search> menu.

- To search for bookmarks, you need to specify them by clicking the bookmark (🔖) in the instant viewer or search results. If no bookmark is specified, search results will not be displayed.

### 2. Select a channel to search.

- If you select a channel to search, you can change the channel display mode by clicking <🔍>. You can select a desired channel by clicking or dragging it from the channel table, and clicking the channel in the channel list.

### 3. Select a date and time to search.

### 4. Click <Search>.

- Bookmark name : Displays the bookmark name you set.
- Event : Displays the event type of the recorded video.
- CH : Displays the recorded channel.
- Time : Displays the start time and end time of the recorded video.
- Play : Plays the recorded video with an instant viewer.
- Bookmark : Displays whether bookmarks are specified.

### 5. If you double-click an item to play in the search list, the recorded video will be played.

- Bookmarked images will be stored without being overwritten during repeated recording. However, when the automatic deletion is set, it will be deleted according to the set period.
- When the bookmark is released, the video will not be saved. If necessary, before releasing the bookmark, export the video.
- Up to 100 bookmarks can be specified.


## SMART SEARCH

You can search for events by selecting a region of interest, an exclusive region, or a virtual line from a recorded video at a specific time.

- To use smart search, you need to set the area of the camera's "Motion Detection" or "IVA" to the entire area. However, if you want to search for cameras after Wisenet X series, you must select "Enable" in "Event setup > IVA" of the camera. For details, refer to the "Setup > Setting the Event > Event setup" page in the Table of Contents.

### 1. Click <🔍> on the video window menu.

### 2. Set the smart search area in the video window.

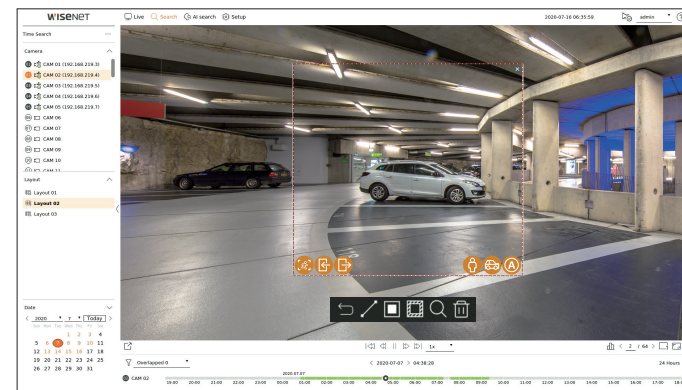

- Virtual line (↔) : Detects the passing of an object based on the virtual line and direction set on the image. Click and drag the start and end points of the virtual line to the desired location with the mouse.
  - The virtual line can be set in one direction or both directions. If you select the option of the direction of the virtual line on both sides, it will detect all objects passing in both directions on one virtual line.
- Region of interest (■) : Uses the entire screen as a non-detection area and specifies a specific area as a motion detection area. Drag the mouse over the image or take a vertex to set the detection area at the desired location.
  - When you set a zone, an event/object option icon will be displayed at the bottom of the zone. Click the icon to exclude the event/object from the search.
  - Intrusion (🚧) : Detects and searches for moving objects within the area set by the user.
  - Enter (➡) : Searches by detecting movement from the outside to the inside of the area set by the user.
  - Exit (⬅) : Searches by detecting the movement from the inside to the outside of the area set by the user.
  - Person (👤) : Searches for events that include people within the area set by the user.
  - Vehicle (🚗) : Searches for events that include vehicles within the area set by the user.
  - All Objects (👤) : Searches for events that include all objects within the area set by the user.
- Exclusive region (🚫) : Uses the entire screen as a detection area and specifies a non-detection area to exclude detection of a specific area. Drag the mouse over the image or take a vertex to specify the non-detection area at the desired location.

### 3. Set the date and time range to perform the virtual area search and click <🔍>.


### 4. When you click an item to play on the time line, the corresponding recorded video will be played.

- You can set up to 3 areas of interest, exclusion and virtual line.
- Click Delete (🗑) to delete all the set areas.

# AI search

If there is AI data recorded by the camera, you can search for images in various conditions such as people, faces, and vehicles.

## SCREEN LAYOUT OF THE AI SEARCH

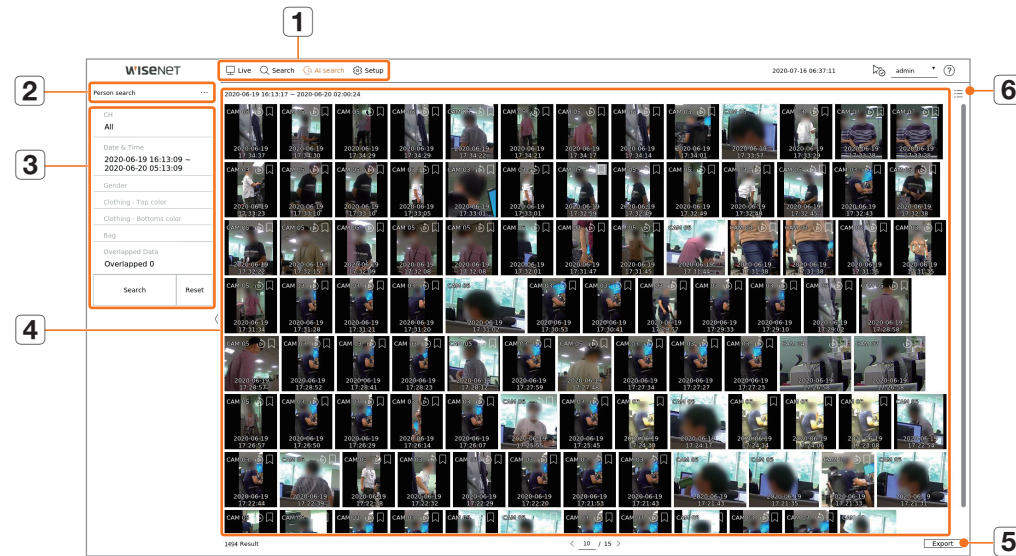


Item	Description
1	<b>Menu</b> Click each menu to go to the corresponding menu screen.
2	<b>Search menu tab</b> Click the menu tab to display the detailed search menu. Click Search menu to go to the corresponding Search screen.
3	<b>Search conditions</b> You can set various search conditions, such as date/time/gender.
4	<b>Search results</b> Displays search results.
5	<b>Export</b> Exports search results to a file.
6	<b>≡, 田</b> Displays the search results as a list or thumbnail.

- The search options you set will be saved, and click **<Reset>** to reset the search conditions.
- Double click on the desired item in the search results list to go to the play screen.  
When you click Play (⏮), the video will be played in an instant viewer.
- You can specify a bookmark by clicking the bookmark (🔖) in the search results list. You can check the specified video in the bookmark search menu.

## PERSON SEARCH


In the recorded data, you can search for a person by any condition you want, such as gender, top/bottom color.

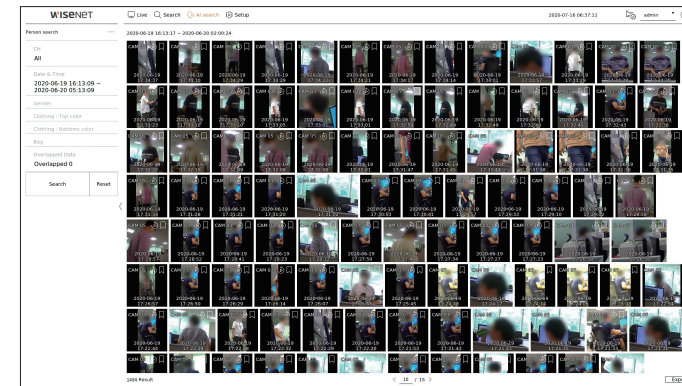

1. Select **<Person search>** in the **<AI search>** menu.
2. Select a channel to search.
  - If you select a channel to search, you can change the channel display mode by clicking **<田>**. You can select a desired channel by clicking or dragging it from the channel table, and clicking the channel in the channel list.
3. Select a date and time to search.
4. Select a detailed search option.
  - Person search options : **Gender, Clothing-Top color, Clothing-Bottoms color, Bag**
    - Click the option to display the option selection window. Select the desired search option.
    - If no details are set, all conditions will be selected and searched.
5. Select the overlapped data.  
It will be displayed when there is overlapped data in one channel by changing the time or time zone at the selected time.
6. Click the **<Search>** button.
  - CH : Displays the recorded channel.
  - Camera name : Displays the camera name.
  - Attribute : Displays the recognized search result attributes.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
7. If you double-click an item to play in the search list, the recorded video will be played.

## FACE SEARCH


From the recorded data, you can search faces according to your desired conditions such as gender and age.

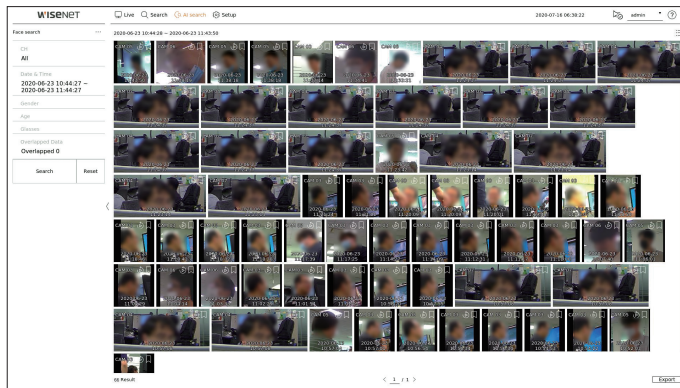

1. Select **<Face search>** in the **<AI search>** menu.
2. Select a channel to search.
  - If you select a channel to search, you can change the channel display mode by clicking **<□□>**. You can select a desired channel by clicking or dragging it from the channel table, and clicking the channel in the channel list.
3. Select a date and time to search.
4. Select a detailed search option.
  - Person search options : **Gender, Age, Glasses**
    - Click the option to display the option selection window. Select the desired search option.
    - If no details are set, all conditions will be selected and searched.
5. Select the overlapped data.  
It will be displayed when there is overlapped data in one channel by changing the time or time zone at the selected time.
6. Click the **<Search>** button.
  - CH : Displays the recorded channel.
  - Camera name : Displays the camera name.
  - Attribute : Displays the recognized search result attributes.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
7. If you double-click an item to play in the search list, the recorded video will be played.

## VEHICLE SEARCH


You can search the vehicle by setting the vehicle type and color conditions from the recorded data.

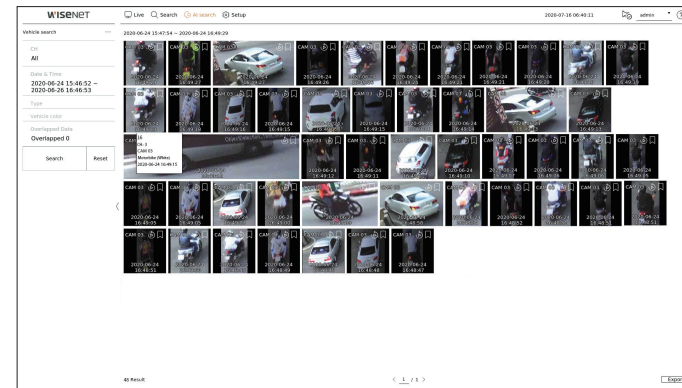

1. Select **<Vehicle search>** in the **<AI search>** menu.
2. Select a channel to search.
  - If you select a channel to search, you can change the channel display mode by clicking **<□□>**. You can select a desired channel by clicking or dragging it from the channel table, and clicking the channel in the channel list.
3. Select a date and time to search.
4. Select a detailed search option.
  - Vehicle search options : **Type, Vehicle color**
    - Click the option to display the option selection window. Select the desired search option.
    - If no details are set, all conditions will be selected and searched.
5. Select the overlapped data.  
It will be displayed when there is overlapped data in one channel by changing the time or time zone at the selected time.
6. Click the **<Search>** button.
  - CH : Displays the recorded channel.
  - Camera name : Displays the camera name.
  - Attribute : Displays the recognized search result attributes.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
7. If you double-click an item to play in the search list, the recorded video will be played.

## LP SEARCH

You can search for the license plate number recognized in the recorded data.

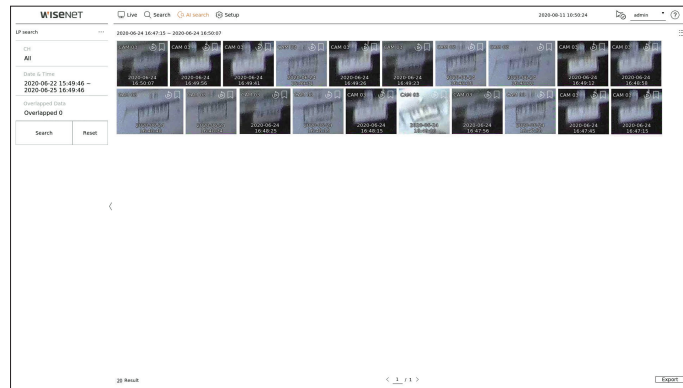


1. Select <LP search> in the <AI search> menu.
2. Select a channel to search.
  - If you select a channel to search, you can change the channel display mode by clicking <[Grid Icon]>. You can select a desired channel by clicking or dragging it from the channel table, and clicking the channel in the channel list.
3. Select a date and time to search.
4. Select the overlapped data.

It will be displayed when there is overlapped data in one channel by changing the time or time zone at the selected time.
5. Click the <Search> button.
  - CH : Displays the recorded channel.
  - Camera name : Displays the camera name.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
6. If you double-click an item to play in the search list, the recorded video will be played.

You can play the recorded data and export the video you want during playback.

### SCREEN LAYOUT OF THE PLAY

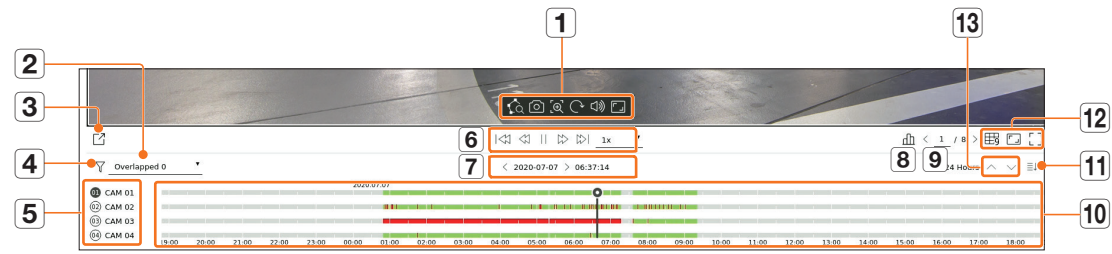


Item	Description
1	<p><b>Video control</b></p> <p>You can use the video control function.</p> <ul style="list-style-type: none"> <li>🔍 : Runs a smart search by specifying an area in the video window.</li> <li>📷 : Saves the video screen as an image.</li> <li>🔍 : Zooms in the selected area on the screen. It only runs on a single split screen.</li> <li>🔄 : Displays the image rotated 90 degrees.</li> <li>🔊 : Turns the sound on or off.</li> <li>⏏ : Changes the video display ratio.</li> </ul>
2	<p><b>Overlapped data</b></p> <p>The list will be displayed according to the number of overlapped data in the same time zone. It will appear when a video is overlapped in one channel due to time or time zone change at the selected time.</p>
3	<p><b>Export</b></p> <p>You can export the video of the channel you are playing.</p>
4	<p><b>Event filter</b></p> <p>You can filter the event items to see the time line.</p>
5	<p><b>Channel</b></p> <p>The channel and camera name will be displayed.</p>
6	<p><b>Playback control</b></p> <p>You can control video playback.</p>
7	<p><b>Date/Time</b></p> <p>Set the date/time.</p>
8	<p><b>Status</b></p> <p>You can check the live, recording, and network status.</p>

Item	Description
9	<p><b>Select channel</b></p> <p>You can move by selecting a channel.</p>
10	<p><b>Time line</b></p> <p>Move the playback position and display event data.</p>
11	<p><b>Show/Hide Channel</b></p> <p>You can change the number of channels displayed in the time line.</p> <ul style="list-style-type: none"> <li>Up to 4 channels of time line can be displayed.</li> </ul>
12	<p><b>Split screen</b></p> <p>You can select the split mode.</p>
	<p><b>Change video ratio</b></p> <p>Change the video display ratio.</p> <p><b>Full screen</b></p> <p>Display the image enlarged to full screen.</p>
13	<p><b>Previous/Next Channel</b></p> <p>You can check the time line of the previous/next channel.</p>

## PLAY SEARCH RESULTS

### Time Line Adjustment

You can move the playback position and zoom the time line in and out.



- Click the desired play position in the time line.  
The playback start position will be moved.
  - Click the start point on the left side of the time line to move the playback position to the start point of the first video.
  - Place your mouse over the time line to see the corresponding thumbnail of the recorded video.
- Click the time line and use the mouse wheel to zoom in or out on the time scale.  
It will change in the order of 24 hours-12 hours-6 hours-3 hours-1 hour-30 minutes-15 minutes-5 minutes-1 minutes.
  - The time line magnification of the time line will be displayed at the top right of the time line.
- To see the time line previous or next zooming in, zoom in and drag the time line left or right.

### Open Time Line Channel


You can display the time line of multiple channels.




- You can click < ≡↑ >, < ≡↓ > to display 1 to 4 channels in the time line. The time line will be displayed as many channels as selected.
- Click < ^ v > to move to the previous or next channel.
- Place your mouse over the time line to see the corresponding thumbnail of the recorded video.

## Play Button Name and Function

### Paused state

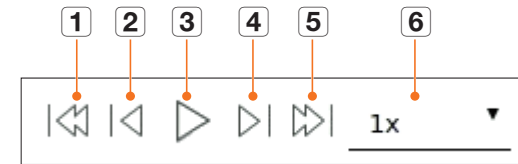

### Playback state

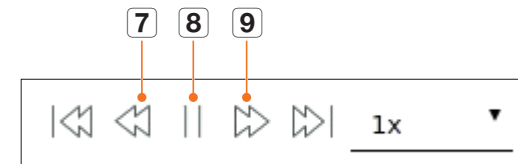

Item	Description	
1	Previous event	Go to the previous event video.
2	Step backward	Move backward one frame
3	Play	Play the video.
4	Step forward	Moves forward one frame or more.
5	Next event	Go to the next event video.
6	Speed	Select the video playback speed. Speed : x1/8, x1/4, x1/2, x1, x2, x4, x8, x16, x32, x64, x128, x256
7	Backward X times playback	It is used for reverse playback. Speed : -x1/8, -x1/4, -x1/2, -x1, -x2, -x4, -x8, -x16, -x32, -x64, -x128, -x256 ▪ Depending on the split screen, the maximum speed may be limited.
8	Freeze	Pause the video.
9	Forward X times playback	It is used for forward playback. Speed : x1/8, x1/4, x1/2, x1, x2, x4, x8, x16, x32, x64, x128, x256 ▪ Depending on the split screen, the maximum speed may be limited.



## SEARCH RESULTS EXPORT

You can export the search results to a file.

1. Click the <📄> button.
2. Select a layout and channel to export.

The screenshot shows the 'Export' dialog box with the following details:

- Layout:** Layout02
- Start:** 2020-07-28 16:43:28
- End:** 2020-07-28 16:57:41
- DST:** DST Not Applied
- Overlapped Data:** Overlapped 0
- Device:** X TICK
- Type:** SEC
- Path:** U020072R1\_1643
- Check capacity:** Export: 379.25M, Used: 512.75M, Free: 1.48G


3. Select a start date/time and an end date/time.
  - If you changed the time zone of the device, select whether to apply DST.
4. Select the overlapped data.

It will be displayed when there is overlapped data in one channel by changing the time or time zone at the selected time.
5. Click <🔄> to select a storage device.
6. Please select a storage file type.
  - SEC : You can export in your own file format that can be played directly on your PC. You can play with the viewer included in the export folder.
    - Click <Setup> to set a password for the exported video.
    - If you check <Text data included>, you can save text data in the exported video.
  - Recorder : You can export to a file that can be played only on the recorder.
7. Check the path to save the file to be exported. Only the file name to be saved can be changed.
8. Click <Check Capacity> to check the storage capacity.
9. Click <Start>.

When the export is complete, a confirmation window will be displayed.
10. Click <OK> to exit.
  - If you click <Stop> during export, the export will be canceled. If you click <Hide>, you can hide the export window.

Sets the camera, recording, event, device, network, and system environment.

## SCREEN LAYOUT OF THE SETUP

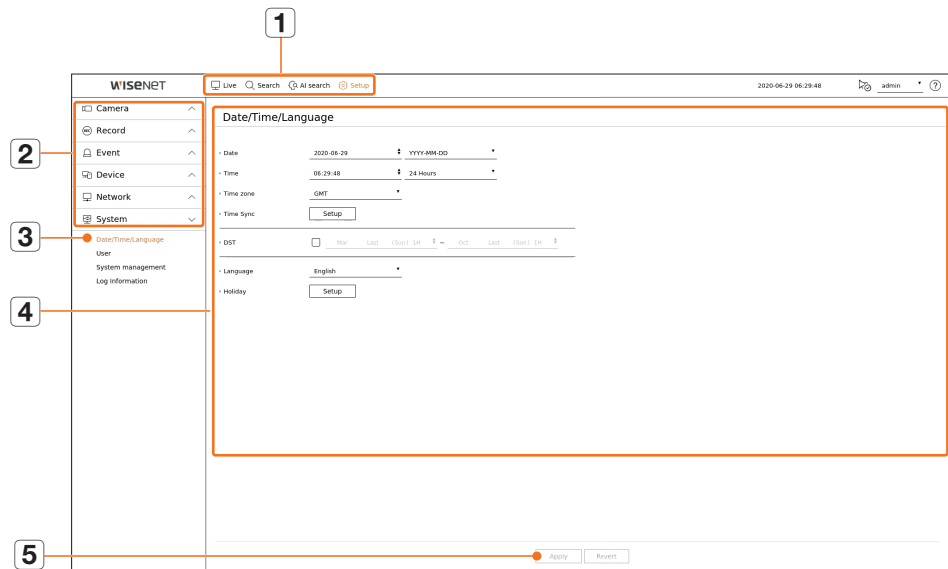

Item	Description
1	<b>Menu</b> Click each menu to go to the menu screen.
2	<b>Top menu list</b> Configure the settings or select a parent item to change the existing settings.
3	<b>Sub-menu list</b> Among the sub-menus of selected parent menu, select a desired item to set.
4	<b>Detailed Menu</b> Click desired item's input field to change and enter a desired value.
5	<b>Apply</b> Apply the modified settings.


## SETTING THE CAMERA

You can access to the channel setup, camera settings, and profiles and camera password-related settings.

### Setting the Channel


You can register a network camera for each channel and make connection between.

#### Setup > Camera > Channel setup

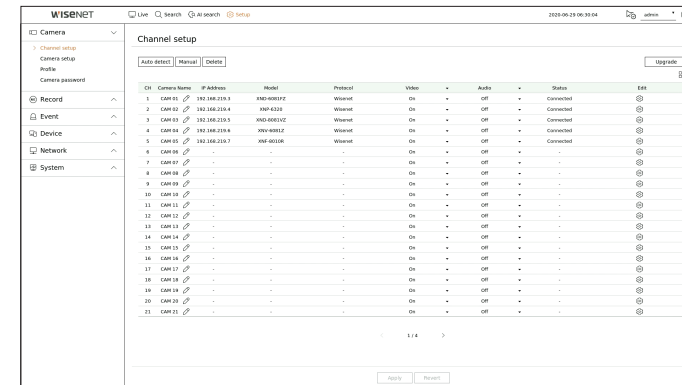


- : Displays the camera of the corresponding channel as a list or a thumbnail.
  - Camera searched with ONVIF does not provide previews.
- Camera name : Provide a camera Name. You can enter up to 15 letters including spaces.
- IP address : Display the IP address of a network camera.
- Model : Show the camera model name.
- Protocol : Show the protocol information of a registered network camera.
- Video
  - ON/OFF : You can turn ON/OFF the selected channel's camera. If the camera video is turned off, a blank screen is displayed.
  - Covert1 : Shows information other than the video of the selected channel. For privacy protection, it does not display the video while the recording continues.
  - Covert2 : Shows nothing but an empty screen while the recording continues.
- If the channel is set to <Covert1> or <Covert2> mode, the channel's sound is not hearable. However, the channel's sound is recorded if its Audio setting is set to <ON>, even the sound is not heard in Live mode.
- Audio
  - If set to <ON>, you can turn the audio of the channel ON/OFF on the Live screen.
  - If set to <OFF>, the channel's audio is off on the Live screen and not recorded.
- Status : Display the connection status.
- Edit : You can change the connection information of the camera.
- Upgrade : You can check the camera's version, upgrade version, and status and upgrade it.
- If you cannot register a camera after initializing the system, check the network setting. As the system is initialized and the network setting is reset, the camera's network bandwidth will be different from the product's network bandwidth, so it will be impossible to register a camera.

## Automatic Registration of Network Cameras

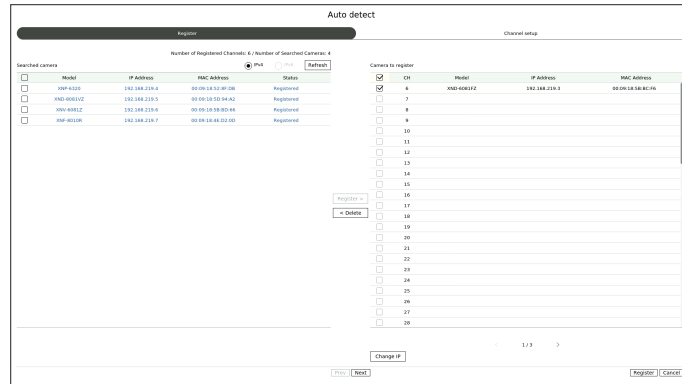

1. In the <Channel setup> field, click on the <Auto detect> button.
2. The Auto detect window will be displayed.
  - Click <+> in the device list on the live screen to automatically search and register the camera.
3. Select a camera to register in the <Searched camera> list and press the <Register> button. You can check the selected camera in the <Camera to register> list.
  - An already registered camera will be marked in blue in the list.
  - If you search for the camera again or if the IP is an old IP that was not assigned by the DHCP server (such as 192.168.1.100), then press the <Refresh> button to check if a new IP has been assigned.
  - <Status> shows the camera authentication status. In the <Auth failed> state, click <✎> to enter the camera ID and password.
  - Click a header at the top of the list to sort the list according to that header.
4. To change the IP address of the camera, select the desired camera from the <Camera to register> list and press the <Change IP> button.
5. Click <Next> at the bottom of the screen to set the registered camera channel.
6. Press the <Register> button on the lower right of the screen to register the selected camera.
  - If you register a camera using a user account—not admin account—the camera features may be limited.
  - When you change the camera ID/password in the camera web viewer, if the camera is already registered in Recorder, you also have to change the camera ID/password information registered in Recorder.
  - When the camera is factory reset, it defaults to the ID and password set in "Setup > Camera > Camera password".
  - If the camera's ID and password have already been set, the registered information matches the ID and password set in the "Setup > Camera > Camera password". (up to 3 sets)
  - Wisenet camera is registered via Wisenet protocol while a third party camera is registered via ONVIF protocol.

## Registering a Network Camera Manually

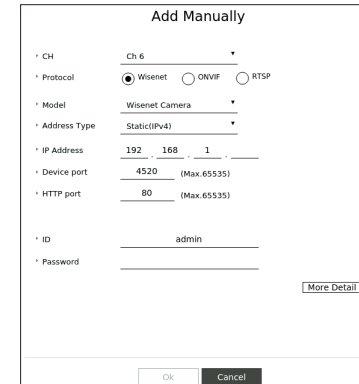

1. In the <Channel setup> field, click on the <Manual> button.
2. The Add Manually window will be displayed.
  - You can register the camera manually by clicking <+> from the device list on the live screen.
3. Select a channel and protocol used to connect to a camera. The input items may differ depending on the selected protocol.
  - Wisenet : Wisenet camera's protocol can be used.
  - ONVIF : Means the camera supports ONVIF protocols. When connecting a camera that its name cannot be found from the list, select <ONVIF>.
    - When a camera is registered with ONVIF, if the difference in system time between the camera and storage device is 2 minutes or more, you won't be able to register it. In this case, synchronize the camera and storage device time.
  - RTSP : Comply with RFC 2326, one of "Real Time Streaming Protocol (RTSP)" for real-time streaming.
4. If you select the <Wisenet> protocol, check options as necessary.
  - Model : Select a camera model.
    - Unknown : Select when the camera model cannot be identified.
    - Wisenet Camera : You can register Hanwha Techwin's cameras and encoders.
    - Wisenet Multi-Channel : You can register Hanwha Techwin's multi directional cameras and multi-imager cameras. A multi-channel camera is a camera that has multiple camera modules in one body. Auto-registering your camera to Recorder lets you register multiple channels at once. However, if you want to manually register it, you need to register one channel at a time.


- Address type : Select an address type of the camera.
  - The supported address type may differ depending on the type of the connected product.
  - Static(IPv4)/Static(IPv6) : Used to provide the IP address of the camera manually.
  - Wisenet DDNS : This is available only if the camera is registered with the Wisenet DDNS(ddns.hanwhasecurity.com) server. Provide the registered domain for DDNS ID.  
**Example)** http ://ddns.hanwha-security.com/snb5000 ; provide "snb5000" for Wisenet DDNS
  - URL : Used for URL address input.

 ▪ The DDNS specs supported by each camera can be checked in the user manual of the corresponding camera.

- IP address : Provide the IP address of the camera.
- Device port : Provide the device port of the camera.
  - Depending on the camera type, some device ports will not be supported.
- HTTP port : Provide the HTTP port of the camera.
- ID : Provide the ID of the camera that you want to register.
- Password : Enter the password of the camera to be registered.
- More detail : You can set the streaming mode.

5. Select <ONVIF> or <RTSP> for the protocol and enter your input for each field appears.

- ONVIF : After selecting an IP type, set IP address, ONVIF port, ID, password, and details.
  - IP type : Select the IP type of the camera.
  - IP address : Enter the camera's IP address.
  - ONVIF port : Enter the port number when the address type is IPv4 or IPv6.
  - Channel : Enter the channel to register the camera.
  - ID : Enter the camera ID.
  - Password : Enter the camera password.
  - More detail : Set whether to enable TLS, authentication mode, and streaming mode.
- RTSP : Set URL, ID, password, and details.
  - URL : Enter your RTSP access address. For more information, see your camera user manual.
  - ID : Enter the camera ID.
  - Password : Enter the camera password.
  - More detail : You can set the streaming mode.

 ▪ If ONVIF or RTSP protocol is selected, you can set the streaming mode in the Details section.

- TCP : The connection to network camera operates in the RTP over TCP mode.
- UDP : The connection to network camera operates in the RTP over UDP mode.
- HTTP : The connection to network camera operates in the RTP over TCP (HTTP) mode.
- HTTPS : The connection to network camera operates in the RTP over TCP (HTTPS) mode.


## If you want to check the error details of camera registration

If you failed to register a camera, the reason for the failure will be displayed.

- **Connection failed due to unknown error.** : This message appears if the camera has failed to be registered due to unknown connection status.
- **Due to the camera account locking, access has failed.** : When you enter a wrong ID/password 5 times to login to the camera account, this message is displayed.  
Try to log in again after 30 seconds. If the same message appears, you may need to check whether someone has tried to access your camera account from the outside.
- **Connected successfully.** : This message appears if the camera is connected successfully.
- **Incorrect model information. Provide the correct model information.** : This message appears if the model information provided for registering the camera is incorrect.
- **Authentication has failed.** : This message appears if the ID or password provided for registering the camera is incorrect.
- **Connection has failed due to excessive concurrent users.** : This message appears if the concurrent user count exceeds the upper limit.
- **Connection has failed due to incorrect HTTP port information.** : This message appears if the HTTP port number of the camera is invalid.
- **Connection has failed. Unknown connection status.** : This message appears if the camera has failed to be connected due to a unknown error.
- **User Model Modification** : When registering a new camera, it is named according to the device's default if user set the model to <Wisenet Camera>. In case if automatic registration fails, user can change the model name of camera to be registered.

## To edit camera profile


To change profile, refer to the "**Setup > Setting the Camera > Setting the Profiles**" page in the Table of Contents.

-  ▪ In case of Recorder, if you set 3 different profiles for live, recording and network profile, one camera will produce video streams accordingly, having different stream formats. Especially, note that the live profile may vary depending on the used screen split mode.
- For cameras, if applied with one profile only, the produced frame rate is fixed as the profile specifies; if applied with multiple profiles, produced video stream's frame rate is not guaranteed. For example, if applied with 2 profiles of 30fps, the camera may transmit streams at 20fps.

## Delete Network Camera

1. Click <Delete> in the <Channel setup> field.
2. When the delete window appears, select the camera channel to delete.
  - Click <All> to select cameras for all channels.
3. Click <OK> to delete the camera of the selected channel.

## Network Camera Firmware Upgrade

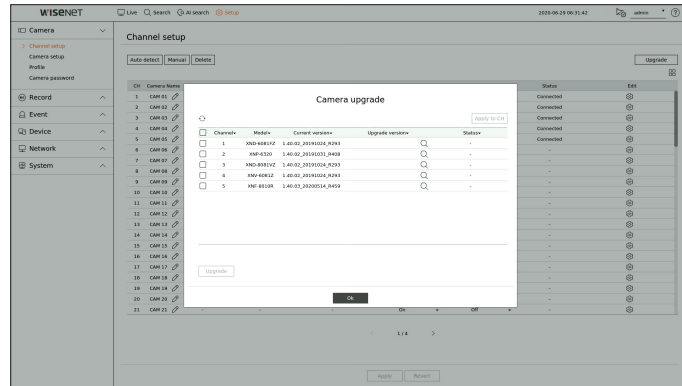

- Channel : Displays channel information.
- Model : Displays the camera model information.
- Current version : Displays the current camera firmware version.
- Upgrade version : Displays the firmware version to upgrade.
  - Press the <Q> button to select the firmware manually within the USB.
  - <🖥️> indicates an upgrade via a remote server.
- Status : Displays the status of the ongoing upgrade (upgrading, successful, failed).


1. Press the <Upgrade> button in the <Channel setup> field.
2. Displays the upgradeable channel list among the connected cameras.
  - If newer firmware exists on the remote server, the upgrade version is displayed, and the check box is automatically selected.
  - If you do not see the upgrade version, you can press the <🔄> button to get the upgrade version information from the server.
  - Connect a USB camera with camera firmware to the device and press the <Q> button to check and select the firmware file in the USB.
  - Select a channel and press the <Apply to CH> button to apply the firmware to other channels connected to the same model at once.
3. Check the box of the channel you want to upgrade.
4. Click the <Upgrade> button. The camera firmware upgrade starts.
  - You can move to another menu while upgrading.
  - You can stop the upgrade by clicking the <Stop> button during the upgrade.
  - When the upgrade is completed, you can see the result in the popup window.

- Firmware upgrade is available only for channels connected with the Wisenet protocol and the camera's administrator account.
- If the upgrade version is not displayed even though the camera's firmware is out of date, check the network settings.
- If there are more than 50 firmware files in the top USB folder, the file may not be scanned.
- The system may reboot if USB is disconnected from the device during an upgrade via USB.
- Video data of the channel connected to the camera to upgrade may not be recorded.
- Do not format the HDD until the upgrade is complete. The upgrade may fail.

## Setting the Camera Functions

You can set the camera while viewing the live video of the selected camera.

### Setup > Camera > Camera setup

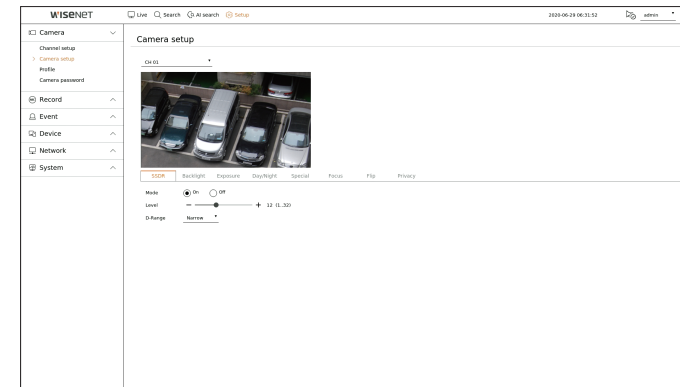

- You can use this feature in the following cases :
  1. A camera connected to Wisenet protocols.
  2. A camera connected with admin privileges.
- For more details on camera settings, refer to the camera user manual. Settings and operational spec vary depending on each camera.
- This function is not supported in some models.

### SSDR

If there is a significant difference between the dark and the bright areas, increase the brightness of the dark areas to maintain the level of brightness of the entire area.

Mode, level, D-Range can be set.

### Backlight

You can view both bright and dark areas.

Mode, WDR level, WDR black/white levels can be set.

### Exposure

You can adjust the exposure of your camera.

You can set brightness, shutter, SSNR, Sens-up, iris/lens, and AGC.

- Brightness : Adjusts the brightness by setting the exposure value.
- Shutter : Adjusts the brightness by controlling the camera shutter speed. If you select shutter, you can set among the items below.
  - Auto : Adjusts the brightness automatically, controlling the shutter speed of the camera.
  - ESC (Electronic Shutter Control) : Adjusts the brightness automatically, controlling the shutter speed according to the surrounding brightness.
  - Manual : Adjust the brightness by manually selecting the maximum/minimum shutter speed of the camera.
  - Anti Flicker : Reduces flickering in video when screen blur occurs due to different lighting and frequency of attention. The shutter speed cannot be set when the anti-flicker frequency is selected.

- SSNR : Adjusts the brightness by reducing noise and minimizing afterimages even in dark places.
- Sens-up : Automatically adjusts the shutter speed according to the brightness of the current light.
- IRIS/Lens : Adjusts the brightness by automatically or manually adjusting the camera IRIS and lens.
- AGC : Adjust the brightness by amplifying the camera's electrical signal when images are shot in the dark.

## Day/Night

You can change the mode to adjust the color and contrast.

You can set Mode, Dwell time, Negative color, Duration, Alarm input, Switching brightness, Simple Focus After D/N, and Activation time (color).

- You can select the day/night video display mode in **<Mode>**.
  - Color : Images are always displayed in color.
  - B/W : Images are always displayed in B/W
  - Auto : The video will be displayed in color in normal environments and in B/W at night.
  - External input : Displays a color or B/W video by linking an external infrared camera to the alarm in terminal. Set the alarm in item when selecting the **<External Input>**.
  - Schedule : Controls the video output mode by directly inputting the color video activation time. Click **<Setup>** and enter the activation time.

## Special

DIS (shaking compensation), use of Defog levels can be set.

## Focus

You can adjust the focus of you camera's video.

You can set focus, zoom in, simple focus, and focus reset.

## Flip

You can set flip/mirror modes and hallway view.

## Privacy

You can set an area to be hidden in the camera image range to protect privacy. You can select whether or not to use the privacy setting and set up to 32 new privacy areas.

- With a PTZ camera, it is not possible to configure settings, and when it is permitted, the setting area may be incorrect.

## Setting the Profiles

### Setting the Recording Profile

You can configure the video profile settings for instructing the network camera (connected to each channel) to make recording.

#### Setup > Camera > Profile > Record


Channel	Camera Name	IP Address	Profile	Codec	Resolution	Frame rate	Edit
1	CAM01	192.168.1.101	H.264	H.264	1920x1080	30 FPS	✎
2	CAM02	192.168.1.102	H.264	H.264	1920x1080	30 FPS	✎
3	CAM03	192.168.1.103	H.264	H.264	1920x1080	30 FPS	✎
4	CAM04	192.168.1.104	H.264	H.264	1920x1080	25 FPS	✎
5	CAM05	192.168.1.105	H.264	H.264	1920x1080	25 FPS	✎
6	CAM06	-	-	-	-	-	-
7	CAM07	-	-	-	-	-	-
8	CAM08	-	-	-	-	-	-
9	CAM09	-	-	-	-	-	-
10	CAM10	-	-	-	-	-	-
11	CAM11	-	-	-	-	-	-
12	CAM12	-	-	-	-	-	-
13	CAM13	-	-	-	-	-	-
14	CAM14	-	-	-	-	-	-
15	CAM15	-	-	-	-	-	-
16	CAM16	-	-	-	-	-	-
17	CAM17	-	-	-	-	-	-
18	CAM18	-	-	-	-	-	-
19	CAM19	-	-	-	-	-	-
20	CAM20	-	-	-	-	-	-
21	CAM21	-	-	-	-	-	-

- You can configure the settings only for the profiles that are supported by the camera.
- If the profiles used for recording and network are different, camera's video feed may not comply with the frame rate as specified in the camera.
- : Displays the camera of the corresponding channel as a list or a thumbnail.
- Camera name : Display the camera name.
- IP address : Display the IP address of a camera.
- Profile : You can select the recording profile for selected channel.
- Codec : You can check the codec for selected channel.
- Resolution : You can select the resolution for selected channel.
- Frame rate : You can set the frame rate for selected recording profile.
- Edit : You can add, change, and delete the camera profiles.

## Setting the Live Profile

You can change the live transfer settings of the network camera.

### Setup > Camera > Profile > Live

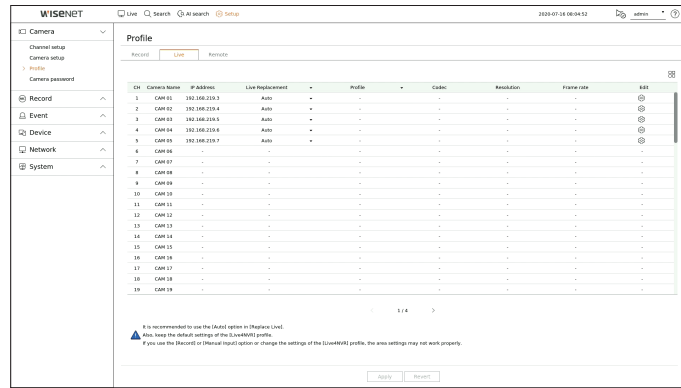


- : Displays the camera of the corresponding channel as a list or a thumbnail.
- Camera name : Display the camera name.
- IP address : Display the IP address of a camera.
- Live replacement : You can select the live profile setup mode.
  - If you select <Manual> the profile setup items are enabled, and you can change settings manually.
    - Auto : For the profile for live monitoring, a profile optimized for each split mode is displayed, along with the 'Live4NVR' profile automatically generated at the time of the camera registration.
      - Live4NVR profile default : H.264 800 x 600, 800 x 448 30 fps
    - Manual : Live monitoring is performed with the profile selected by the user from the registered camera profiles.
    - Recording : Live monitoring is performed with the profile set for recording.
- Profile : You can set the camera profile.
- Codec : Show the codec of the selected profile.
- Resolution : Show the resolution of the selected profile.
- Frame rate : Show the frame rate of the selected profile.
- Edit : You can add, change, and delete the camera profiles.

## Setting the Remote Profile

You can set the video profile transmitted to the network.

### Setup > Camera > Profile > Remote

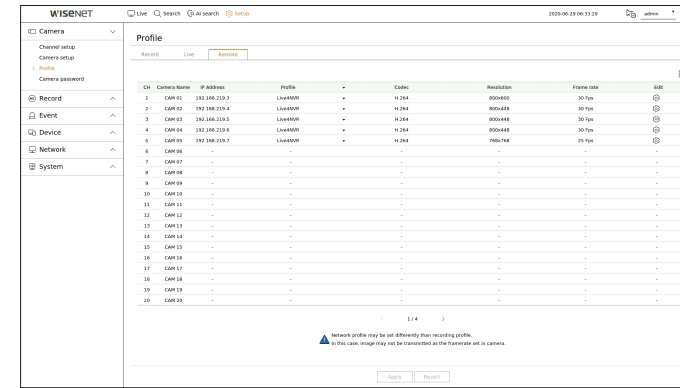

- : Displays the camera of the corresponding channel as a list or a thumbnail.
- Camera name : Display the camera name.
- IP address : Display the IP address of a camera.
- Profile : Select a network profile for the connected camera.
- Codec : Show the codec information for the selected network profile.
- Resolution : Display the resolution for the selected network profile.
- Frame rate : Shows the selected network profile's frame rates.
- Edit : You can add, change, and delete the camera profiles.
  - If the profiles used for network and recording are different, camera's video feed may not comply with the frame rate as specified in the camera.

## Editing the Profiles

You can change the video settings of a registered network camera for each channel.

### Setup > Camera > Profile

Profile	Codec	Resolution	Frame rate	Type	Bitrate	Bitrate Range	In Use
<input type="checkbox"/> MJPEG	MJPEG	1920x1080	2	-	6144	2048 - 30720	-
<input type="checkbox"/> H.264	H.264	1920x1080	30	VBR	4096	1536 - 30720	Record
<input type="checkbox"/> H.265	H.265	1920x1080	30	VBR	3072	1024 - 20480	-
<input type="checkbox"/> Live4NVR	H.264	800x448	30	VBR	2048	512 - 30720	Remote
<input type="checkbox"/> Rec4NVR	H.264	1920x1080	30	VBR	2048	1536 - 30720	-
<input type="checkbox"/> Low4SSM	H.264	640x360	15	VBR	512	512 - 30720	-
<input type="checkbox"/> OPENS...	MJPEG	800x600	5	-	6144	512 - 30720	-
<input type="checkbox"/> MOBILE	MJPEG	320x240	3	-	2048	256 - 30720	-

- Channel selection : You can select camera channels to change their video transmission settings.
  - Add : You can add camera profile. Click on the <Add> button to launch the addition window. Enter the information and click on the <OK> button to add it to the list.
  - Delete : You can delete the selected profile from the list.
  - Apply to CH : If you select <Apply to CH>, "Apply to CH" confirmation window will appear. After selecting channels that the settings will be applied to, click on <OK> to apply them to the selected channels.
  - Profile : You can check the video profile of the camera connected in the camera setup.
  - Codec : You can check the codec for the selected channel.
  - Resolution : You can change the resolution of the selected channel.
  - Frame rate : You can change the frame rate of the selected channel.
  - Bitrate control : You can change the bitrate of the selected channel.
  - In use : Displays the currently applied profile.
- If you change specific profile settings for each product, the frame rate's setup range may be changed. Example) If you set the frame rate for the first profile to 30 fps, then the setting range for the second profile may be changed to 15 fps.
- Any settings other than codec, resolution, and frame rates can be changed in the setup menu of the camera web viewer. For camera web viewer, refer to the "Setup Viewer > Setting the Camera > Camera Setup" page in the Table of Contents. Click <Camera website> button for connection.
  - If you change the current profile settings, you may encounter an interrupted playback on the recording or live screen for a certain time.
  - Changes made in your camera's setup page will be applied immediately. But any changes made through the camera's online website, it may take up to 3 minutes to apply the changes.
  - Bitrate settings are not supported for ONVIF cameras.

## Dewarping Setup

Press the <Dewarping> button at the bottom of the <Detailed profile configuration> window to go to the distortion correction setup popup window for each channel.

Profile	Source view	Over View	Resolution
Live4NVR	Source view	Over View	768x768
Low4SSM	Source view	Over View	640x640
MOBILE	Source view	Over View	640x640


- Profile : Displays the profile type.
  - Video output/view : Sets the video output/view mode for each profile type. In view mode, the fisheye view mode of the current screen can be changed for each segment.
    - Source view : When selecting source view, over view is automatically selected.
    - Dewarp view : If you select the dewarp view, you can set quad view, panorama, or quad view 1-4.
      - You can select view modes supported by your camera.
  - Resolution : You can set the resolution of the profile.
  - Mounting mode : You can change the fisheye installation type. You can select a view mode from among ceiling/ground/wall depending on the installation location.
- If there is no camera registered in the Recorder that supports fisheye view, Dewarping Setup will not be available.




## How to set WiseStream

Function to analyze the complexity of the video and effectively reduce the data size while maintaining the quality. For details, refer to the camera's help or the product's user guide.

Press the <WiseStream> button at the bottom of the <Detailed profile configuration> screen to go to the WiseStream setup popup window for the channel.

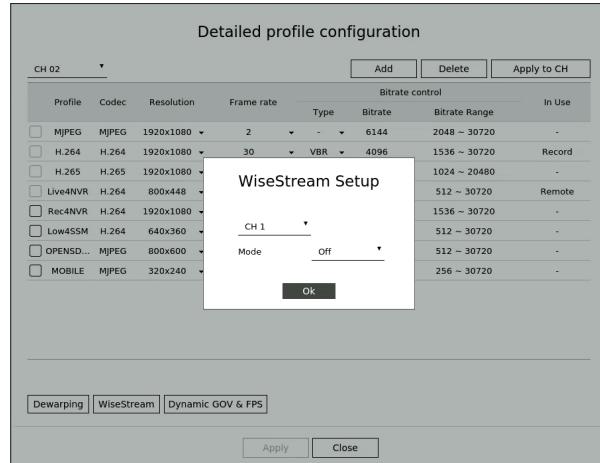


- Channel : You can select the channel to set WiseStream.
- Mode : You can choose the degree of video compression. You can choose either OFF, Low, Medium, or High.

 ■ WiseStream setup cannot be executed if there is no camera registered in Recorder that supports WiseStream.

## Dynamic GOV/FPS setup

Dynamic GOV can be used to automatically change the length of GOV depending on the video condition. For details, refer to the camera's help or the product's user guide.

At the bottom of the <Detailed profile configuration> screen, press the <Dynamic GOV & FPS> button to open the dynamic GOV/FPS setup popup for the channel.

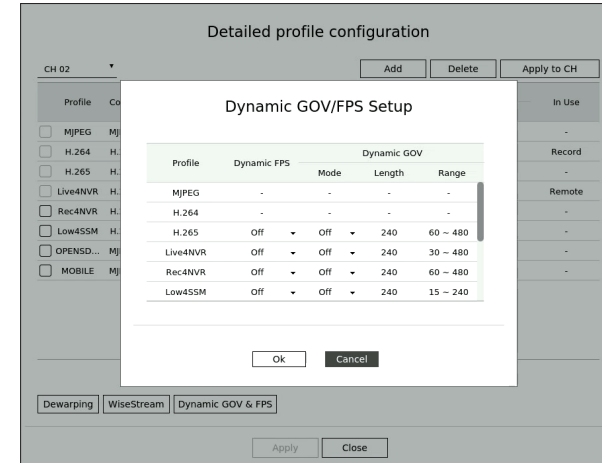

- Profile : Shows the video profile of the connected camera setting.
- Dynamic FPS : Automatically adjusts the frame rate (frames per second) based on the video conditions.
- Dynamic GOV
  - Mode : Set the GOV length to change automatically.
  - Length : Enter the maximum GOV length value to be applied when there is no motion in the video. Minimum GOV value can be set on the camera web page.
  - Range : The range of the input value of <Length> is displayed.


 ■ Any profile not supported with the dynamic GOV/FPS setting is marked with '-'.


## Setting Camera Password

You can change the passwords of all registered cameras at once.

You can register the camera's ID and password.

### Setup > Camera > Camera password

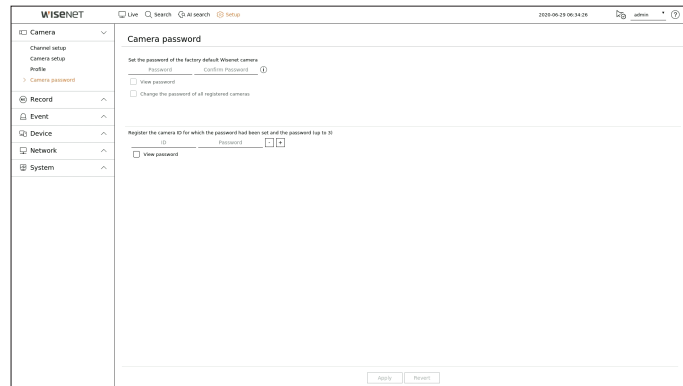

- Password : Input a new password according to the password setting rules.
  - Confirm password : Input the new password again.
  - ID : Enter the ID of the camera whose ID and password are set.
  - Password : Enter the password of the camera whose ID and password are set.
-  ■ If you click < i >, a basic guide for password setup is displayed.
- If you select < View Password >, the current password is displayed as the actual input characters.
  - If you check the < Change the password of all registered cameras >, the passwords of all cameras are changed with the entered password.
  - A camera password registered with ONVIF and RTSP cannot be changed.


## SETTING THE RECORDING


You can setup scheduled recording, event recording and other recording related settings.

### Recording Schedule

If you set a recording schedule for a specific date and time, the recording will start at that specific time.

### Setup > Record > Recording schedule

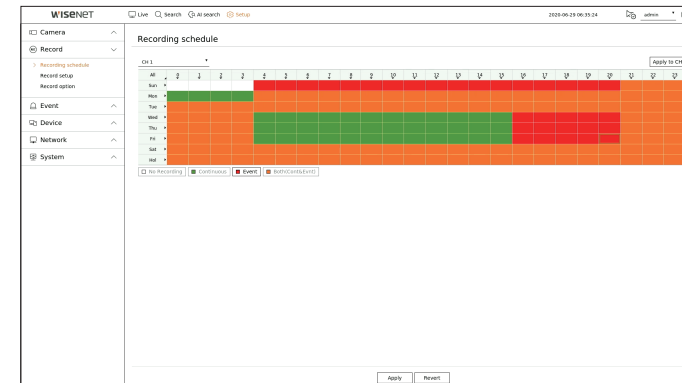

- Channel : Select the channel you want to set.
  - All : The entire time range (Monday through Sunday including holidays, AM 0~ PM 23) will be reserved with the same recording schedule.
  - Apply to CH : If you select < Apply to CH >, "Apply to CH" confirmation window will appear. After selecting channels that the settings will be applied to, click on < OK > to apply them to the selected channels.
-  ■ Event recording and scheduled recording starts about 3 seconds prior to the event/schedule for guaranteed recording.

### Record setting by the color

Color	Function	Description
White ( <input type="checkbox"/> )	No Recording	No schedule / event recording
Light green ( <input type="checkbox"/> )	Continuous	Scheduled recording only
Red ( <input type="checkbox"/> )	Event	Event recording only
Orange ( <input type="checkbox"/> )	Both(Cont&Evt)	Both scheduled / event recordings

- Each press of a selected cell will cycle through < No Recording >-< Continuous >-< Event >-< Both(Cont&Evt) >.

## Record Setup

You can set the resolution and number of recordings for each channel when an event occurs or during a normal recording.

You can check frame rates and data transfer amount of Full Frame and Key Frame recordings for each channel, and set the transfer limit for recordings.

### Setup > Record > Record Setup

CH	Camera Name	IP Address	Normal recording	Event	Frame	I-frame	Limit	Pre	Post	Audio
1	CAM 01	192.168.210.1	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
2	CAM 02	192.168.210.4	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
3	CAM 03	192.168.210.8	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
4	CAM 04	192.168.210.8	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
5	CAM 05	192.168.210.7	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
6	CAM 06	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
7	CAM 07	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
8	CAM 08	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
9	CAM 09	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
10	CAM 10	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
11	CAM 11	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
12	CAM 12	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
13	CAM 13	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
14	CAM 14	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
15	CAM 15	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
16	CAM 16	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
17	CAM 17	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
18	CAM 18	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
19	CAM 19	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
20	CAM 20	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF
21	CAM 21	-	FULL	FULL	2,000x3,511	1,125x633	2,200	5 sec	30 sec	OFF

- Apply to CH : If you select <Apply to CH>, "Apply to CH" confirmation window will appear. After selecting channels that the settings will be applied to, click on <OK> to apply them to the selected channels.
- : Displays the camera of the corresponding channel as a list or a thumbnail.
- Camera name : Display the camera name.
- IP address : Display the IP address of a camera.
- Normal recording, Event : Configures Normal recording and Event recording.
  - FULL : Records all frames fed by the camera.
  - I-frame : Records only key frames fed by the camera. It depends on the camera's settings.
  - OFF : No recording is made.
- Frame
  - FULL : Shows the amount of data for all the scene recordings.
  - I-frame : Shows the amount of data for the main scene recordings.
- Limit : Set the amount of data allowed for input for each channel.
- Event : When an event occurs, you can set which point you will start or stop recording.
  - Pre : When an event occurs, recording will be started regardless of the time set. If you set it to five seconds, recording will start at five seconds before an event occurs.
  - Post : When an event occurs, recording will continue after the time set. If you set it to five seconds, recording will continue for a further five seconds after an event is finished.
- Audio : Specify whether to record the sound received from the camera or not.

- If a channel's data transfer exceeds defined allowed limit, then it may affect to other channels, and may force switching to <I-frame> recording even when the channel is configured to <FULL> recording mode. For Key Frame recording channels, the icon for limited recording appears on the live screen's top side. But if the sum of the limits is below the max limit, you can still receive the entire frames despite exceeding the permitted bitrates for each channel.
- A channel displayed in yellow indicates that the recorded data is not being transferred from the camera and that the recording is being performed temporarily using another profile on the camera. Check the channel information to see the applied profile to the channel listed in yellow. A channel displayed in orange indicates that the amount of inputted data is greater than the permitted data amount. In this case, it is impossible to record all of the incoming frames. Instead, only part of the frames (1 or 2 frames per second) can be recorded. To resolve this issue, you must set the permitted data amount to be greater than the amount of inputted data. Refer to the "Live > Live screen mode > Check the camera status" page in the Table of Contents.

## Record Option

When the HDD capacity is full, you can set whether to stop recording or start overwriting.

### Setup > Record > Record option

CH	Camera Name	IP Address	Camera Name	Dir
1	CAM 01	192.168.210.1	CAM 01	400
2	CAM 02	192.168.210.4	CAM 02	400
3	CAM 03	192.168.210.5	CAM 03	400
4	CAM 04	192.168.210.8	CAM 04	400
5	CAM 05	192.168.210.7	CAM 05	400
6	CAM 06	-	CAM 06	400
7	CAM 07	-	CAM 07	400
8	CAM 08	-	CAM 08	400
9	CAM 09	-	CAM 09	400
10	CAM 10	-	CAM 10	400
11	CAM 11	-	CAM 11	400
12	CAM 12	-	CAM 12	400
13	CAM 13	-	CAM 13	400
14	CAM 14	-	CAM 14	400
15	CAM 15	-	CAM 15	400
16	CAM 16	-	CAM 16	400
17	CAM 17	-	CAM 17	400
18	CAM 18	-	CAM 18	400
19	CAM 19	-	CAM 19	400

- Enable dual recording : Check it if you want to record the recording profile and remote profile simultaneously. "Enable dual recording" can be applied as a profile appropriate for the split mode during the playback.
- Disk end mode : Select the recording method when the hard disk storage capacity is full.
  - Overwrite : If the HDD is full, this will overwrite the existing data and keep recording.
  - Stop : If the HDD is full, this will stop recording automatically.
- Disk End Beep : If you select <Stop> for the HDD Repeat Recording mode, this button will be active. Specify the use of beep when the HDD recording ends. If you check it, the beep will sound on the disk full and the recording stops.
- Auto Delete : If you check this option, the period list box is active, and you can set the automatic deletion period. Specify the deletion period to delete any earlier data than the specified date. However, you can search for data from the current time to the selected date.
  - If you select <Overwrite> for the HDD Repeat Recording, the button is enabled.
  - You can select a channel and set a different recording duration for each channel.
- Apply to CH : If you select <Apply to CH>, "Apply to CH" confirmation window will appear. After selecting channels that the settings will be applied to, click on <OK> to apply them to the selected channels.
- If you press <Auto Delete> when you have completed your settings, all the existing data earlier than the specified period will be deleted automatically. If you need to keep your old data, export it first.

## SETTING THE EVENT

You can set the event-related settings such as whether or not an event is detected for each channel and whether an alarm occurs

### Event setup

You can set whether or not to detect the detailed events (object detection, motion detection, intelligent video analytics, tampering) from the camera for each channel and details.

#### Setup > Event > Event setup


- Object : You can set detailed settings for object detection of the connected camera.
- Motion : You can set detailed motion detection for the connected camera.
- IVA : You can set up intelligent video analytics of the connected camera.
- Tampering : You can make detailed settings for tampering detection, such as when the screen of a connected camera is obscured or the camera location is changed.



- The object detection function is displayed only when connected to a Wisenet AI camera.

### Object


#### Setup > Event > Event setup > Object

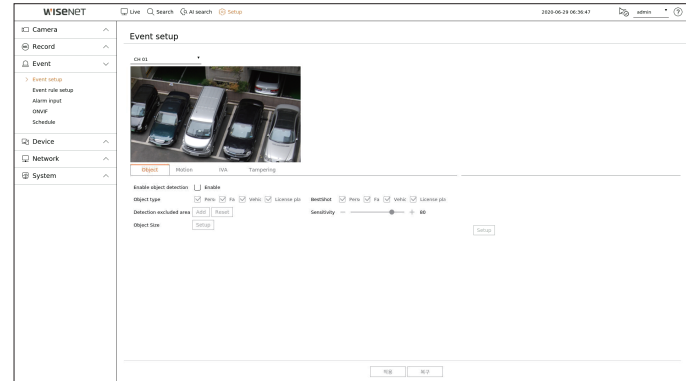

- Enable object detection : You can set whether to enable object detection.
- Object type : You can select the object type to detect.
- BestShot : You can set the object to display the bestshot items.
  - Set the same as the item selected in <Object type> to display the best shot when an event is detected.
- Detection excluded area : You can set the exclusion area for AI object detection. Click <Add> to set the detection exclusion area on the preview screen.
- Sensitivity : You can set the sensitivity of object detection for each area. Set a lower sensitivity for an environment where the background and an object are clearly distinguishable and a higher sensitivity for an environment where the background and an object are not clearly distinguishable.
- Object size : You can set the size of the object to recognize the motion.
  - Click <Setup> to select the minimum/maximum size and set the object size on the preview screen.


### Motion

#### Setup > Event > Event setup > Motion

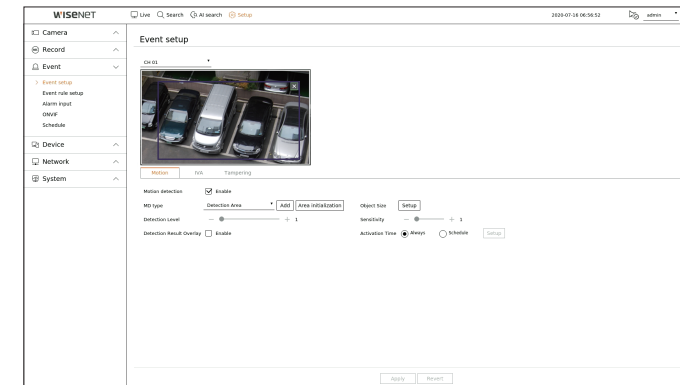

- Motion detection : You can set whether to enable motion detection.
- MD type : You can set a detection area and a detection excluded area.
  - Detection area : Set the area to detect motion.
  - Detection excluded area : Set the area to not detect motion.
  - Add : After selecting the desired area item, set the area on the preview screen.
  - Area Initialization : You can clear all the set areas.
- Detection level : You can set the basic level required for motion detection. Level values can be set for each detection area set in <MD type>. If a motion value is bigger than the set level, then a motion detection event is triggered.
- Detection result overlay : You can overlay the detection area over video.
- Object size : You can set the size of the object to recognize the motion.
  - Click <Setup> to select the minimum/maximum size and set the object size on the preview screen.
- Sensitivity : You can set the sensitivity of motion detection for each area. Set a lower sensitivity for an environment where the background and an object are clearly distinguishable and a higher sensitivity for an environment where the background and an object are not clearly distinguishable.
- Activation time : You can set the activation time for motion detection.
  - Always : Detects motion regardless of time.
  - Schedule : Detect motion only during the set period. Click <Setup> to set the detection schedule.


## Setup &gt; Event &gt; Event setup &gt; IVA

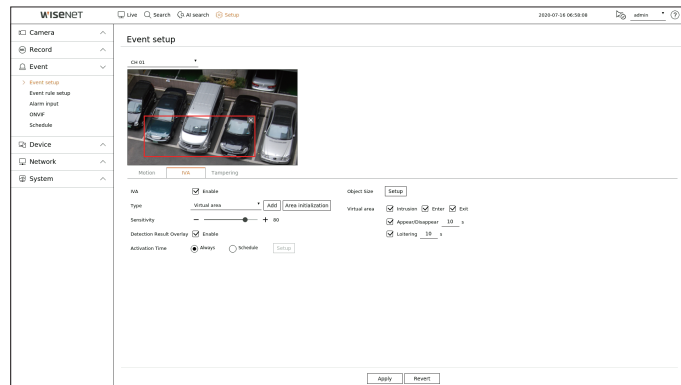


- IVA : You can set whether to enable intelligent video analytics.
- Type : You can set a virtual line, virtual area, and detection excluded area.
  - Virtual line : Set the virtual line to enable intelligent video analytics.
  - Virtual area : Set the area to enable intelligent video analytics. You can set the details of virtual areas to fit your purposes.
    - Intrusion : Creates an event when the motion of an object in the designated area is detected.
    - Enter : Creates an event when a moving object enters into the target area from the outside.
    - Exit : Creates an event when a moving object goes out of the target area.
    - Appear/Disappear : When an object which does not exist inside the area designated by the user appears inside the area without passing the area line and remains for a certain period of time, or if an object which exists inside the area disappears, an event is created. You can set the minimum observation time for each area, which is needed to trigger an event after motion detection.
    - Loitering : Creates an event when the motion of a loitering object in the virtual area is detected. You can set the minimum observation time for each area, which is needed to trigger an event after motion detection.
  - Detection excluded area : Set the area to not enable video analytics in the virtual line and the virtual area.
  - Add : After selecting the desired area item, set the area on the preview screen.
  - Area Initialization : You can clear all the set areas.
- Sensitivity : You can set the motion detection sensitivity for the virtual line and the virtual area.
- Detection result overlay : You can overlay the detection area over video.
- Activation time : You can set the activation time to recognize motion analysis.
  - Always : Detects motion analysis regardless of time.
  - Schedule : Detects motion analysis only during the set period. Click <Setup> to set the detection schedule.
- Object size : You can set the size of the object to recognize the motion.
  - Click <Setup> to select the minimum/maximum size and set the object size on the preview screen.
- Object : You can set the object to enable video analytics.
  - Objects are visible only when an AI camera is connected.

 Each camera product support different features. For more information, see the camera manual or help.

## Setup &gt; Event &gt; Event setup &gt; Tampering

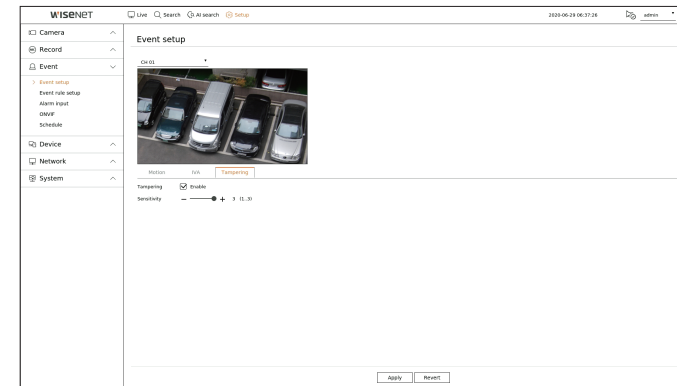


- Tampering : You can set whether to enable tampering detection.
- Sensitivity : Sets the tampering detection sensitivity.
  -  Since tampering detection is designed for optimal performance based on the sensitivity level by the user, there may be no noticeable change in the tampering detection performance depending on the sensitivity level under normal monitoring conditions.









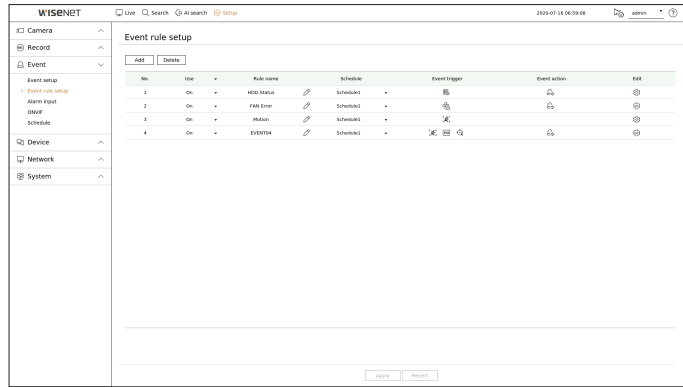









## Event Rule Setup

You can set the event trigger and action rule to output an alarm when an event occurs.






Setup > Event > Event rule setup



- Add : Adds a new event rule by selecting from rule creation or rule copy.
- Delete : Deletes the selected event rule.
- Use : Specify whether to enable the corresponding event rule.
- Rule name : Displays the name of the event rule. You can change the name of the event rule by clicking <img alt="pencil icon" data-bbox="450 455 465 470"/>.
- Schedule : Displays the schedule set in the event rule.
- Event trigger : Displays the event trigger set in the event rule.
  - The event trigger will be displayed in the live video window when an event is received, and will be saved as an event log record.


Item	Description	Item	Description
	Motion detection		Video loss detection
	IVA		SD Card
	Tampering		Dynamic event Example) Digital automatic tracking, queue, shock detection
	Auto-tracking		Object detection
	Defocusing		Change password
	Fog detection		HDD status
	Audio detection		Pan failure
	Sound classification		Power On/Off
	Alarm in (camera), alarm in (NVR)		Manual recording

- Event action : Displays the event action set in the event rule.

Item	Description
	PTZ preset setting
	Alarm output and beep setting
	E-mail recipient setting
	Mobile push receive setting
	Event monitoring duration setting

- Edit : Changes the registered event rule.

## Register a new event rule

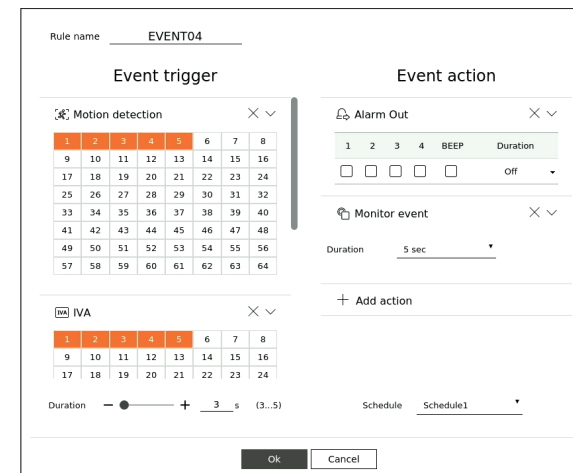

1. Click <Add> in the <Event rule setup> field.
2. Set the details when the event rule setting window is displayed.
  - Rule name : Enter the name of the event rule.
  - Event Trigger : Press <+ Add trigger> to set the event trigger and channel.
    - Up to three event triggers can be added.
    - Notification time is the waiting time to recognize the occurrence of the selected event. You can select two or more event triggers to set them. The event action will run only when all the selected event triggers occur within the notification time.
    - Event triggers will be displayed on the live screen when an event occurs and are used for event log recording.
    - To select a channel to detect an event trigger, click or drag the desired channel in the channel table. It will be displayed in orange when a channel is selected.
  - Schedule : Select the schedule to run the event action.


- Event action : Press <+ Add action> to set the event action.
  - PTZ Preset : Set the PTZ preset to be displayed when an event occurs. Click <⚙️> to set camera presets for each channel.
  - Alarm out : Set the alarm out to be generated when an event occurs. Select the output terminal according to the number of alarm terminals on the device to set the alarm duration.
  - E-mail : Set up users to receive e-mail when an event occurs. Click <⚙️> to select users to receive the e-mail.
    - Set the interval for sending events in “Setup > Network > E-mail > Events”.
  - Mobile push notification : When an event occurs, the event push notification will be displayed on the connected smart phone.
  - Monitor event : When an event occurs, the screen of the corresponding channel will be displayed by switching to the live screen. When selecting event monitoring, set the alarm duration in consideration of network conditions.
    - Event action will run only when all set event triggers occur. If only one of the multiple events set has occurred, the event action will not run.
    - Set the event action only when necessary.

3. Click <OK> at the bottom of the setting window to register the event rule.

## Alarm Input

You can set the operation of the alarm sensor.

### Setup > Event > Alarm input

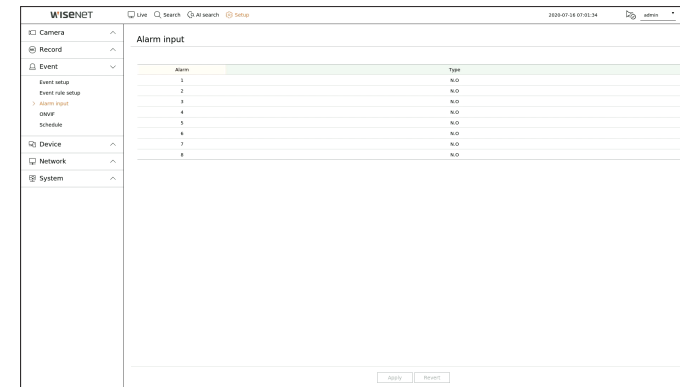


- Type : Set the mode in which the alarm sensor will operate.
  - Off : Alarm sensor is disabled. Alarm is not used.
  - N.O(Normal Open) : Sensor is opened. If the sensor is closed, it generates alarm.
  - N.C(Normal Close) : Sensor is closed. If the sensor is opened, it generates alarm.

## ONVIF

You can set the details related to camera events registered with the ONVIF protocol.

### Setup > Event > ONVIF

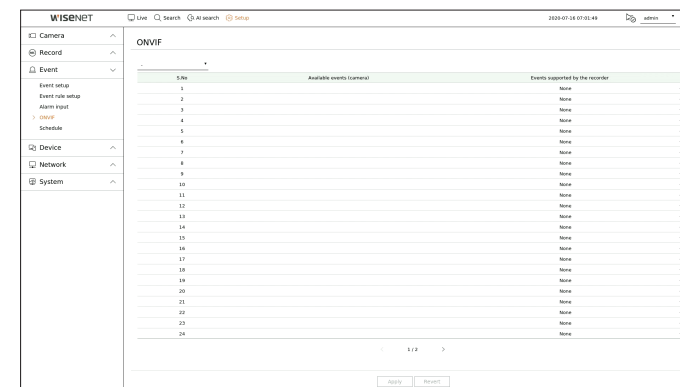



- Select channel : Select the channel to which the ONVIF camera is registered.
- Available events (camera) : It shows the list of all the events supported by a camera by using the ONVIF protocol.
- Events supported by the recorder : You can map the list of events supported by a camera to events that the Recorder can detect. There is no default value. It only shows the value sent by a camera.

## Schedule

When setting the event rule, you can set the operating time of the event action.

### Setup > Event > Schedule

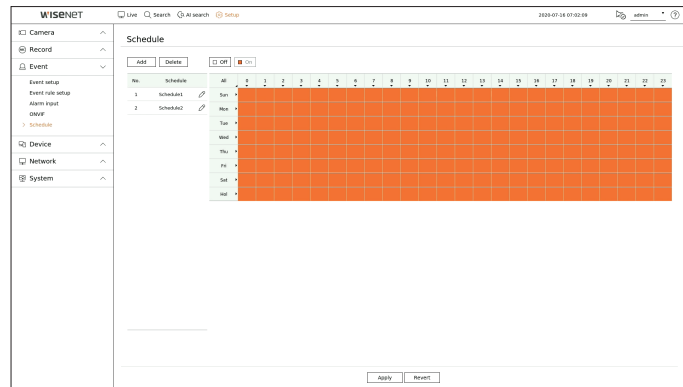

- Add : Add a schedule by setting the desired day and time.
  - Off : Displayed in white and no alarm will be output even if an event occurs.
  - On : Displayed in orange and an alarm will be output only when an event occurs.
    - Click  to change the schedule name.
- Delete : Delete the selected schedule.
  - You cannot delete the schedule in use.
  - When the alarm is generated on the scheduled time, you can stop the alarm by canceling the schedule.

## SETTING THE DEVICE

You can make the detailed settings for devices such as storage device and monitors.


### Storage Device

You can set the storage device usage and check the setting status.

### Device/Format

You can check storage devices and their capacity, usage as well as status. The connectable storage devices are HDD and USB.

### Setup > Device > Storage device > Device/Format

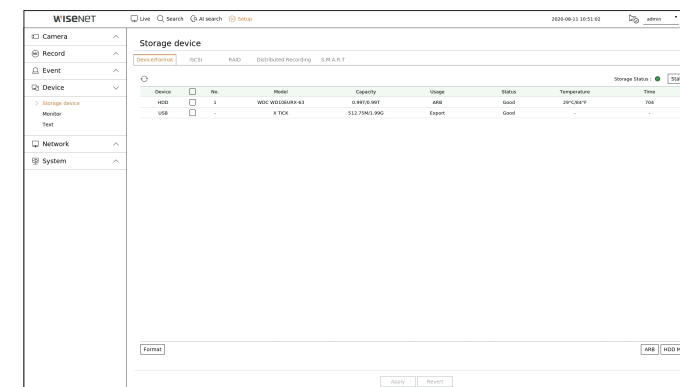

- Device : Displays the storage device type.
- No. : You can check the designated number for the built-in HDD.
  - If you want to find out about the location corresponding to the HDD number, refer to the [<HDD Map>](#).
- Model : Displays the model name of the storage device.
- Capacity : Displays the amount of storage device use and the full capacity.
- Usage : Displays the usage type of the storage device.
  - If the state of use is in "**Not Defined**", format the HDD before use.
- Status : Displays the current working condition of a storage device.
- Temperature : You can check the temperature of the HDD mounted in the Recorder.
- Time : Displays the use time of an HDD.
- Format : Select a device and click on format after which a format confirmation window appears. Click on the **<OK>** button to format the selected storage device.



- Storage Status : Displays the working status of a storage device. Click the <Status> to display the storage status window.
  - Red : Displays the situation of video loss.
  - Green : Displays the normal situation without video recording losses.
  - Status : Click <Status> to see detailed information.

Storage Status					
Device	No.	Model	Total bps	Present Loss	Worst Loss
HDD	1	WDC WD10EURX-63	15Mbps	0%(0Mbps)	0%(0Mbps)
USB	-	X TICK	0Mbps	0%(0Mbps)	0%(0Mbps)

[Reset](#)

[Confirm](#)

- Total bps : Displays the current rate of recording.
  - Present loss : Displays the current recording loss rate.
  - Worst loss : Displays the maximum amount of losses up until now.
  - If loss is continuously generated, check the following.  
For more information, refer to the "**Troubleshooting (FAQ)**" in the Appendix.
    - When data is lost due to system failure (reset the rate of data transferred from the camera)
    - When there is a problem in HDD recording performance due to an HDD malfunction (check the HDD error or replace the HDD)
- ! ▪ Formatting will delete all the recording data that has been saved. Be careful.
  - While formatting is ongoing, you cannot record video.
  - Do not remove a formatting device until it is finished.
  - After installing an HDD, if the state of use of the HDD is <Not Defined>, format the HDD before use. (If the warning message persists after formatting, replace the HDD with a new one)
- ARB : Video that was not recorded due to a camera disconnection can be backed up after the connection with the camera is re-established. Press the button and an <ARB(Auto recovery backup)> window is opened.
  - ARB storage device : Select a storage device to be set to ARB.
  - Capacity : Shows the capacity of the storage device to be set as ARB.
  - ARB channel selection : Select a channel to run the ARB.
    - You can select multiple channels. If you select <All>, all channels will be selected.
  - ARB bandwidth : Select a bandwidth for the ARB function.


- ! ▪ The ARB feature is available only when your video is saved in the SD card after registering your Wisenet camera using the Wisenet protocol. This is only supported in SUNAPI 2.3.2 or later.
  - Set the profile bitrate used for recording a video in the SD card of camera to 6144 kbps or below.  
For more information on how to set the SD card recording profile, see your camera manual.
  - To use the ARB function correctly, both the camera and Recorder should be time synchronized with the time server.  
Refer to the "**Setup > Setting the System > Date/Time/Language**" page in the Table of Contents.
  - ARB function is activated when Recorder starts/when the channel camera set is reconnected/when an Recorder recording missing section recurs at regular intervals after Recorder starts.
  - Recorder recording missing section that can be restored with the ARB function is for 24 hours backwards from the point when the ARB function is activated.
  - You can check which channels have ARB function activated through the message on each channel screen that is displayed when selecting a channel.  
Refer to the "**Live > Live screen mode > Channel Information Display**" page in the Table of Contents.
  - For automatically recovered files through ARB, refer to the "**Search > ARB Search**" page in the Table of Contents.
  - ARB storage capacity is recommended to be at least one day.  
**Example)** If you saved 64 channels with 1 Mbps each, the ARB capacity should be set to 0.7 TB or higher.
- HDD Map : You can check the location according to the assigned number for the HDDs installed inside.
  - Refer to this when servicing or installing an additional HDD.
- ! ▪ Do not add or remove an HDD while Recorder is running.

## Connecting the iSCSI

This function is only available for products that support iSCSI.

When connecting an iSCSI device to the recorder, you can search for the iSCSI device and connect and disconnect it.

### Setup > Device > Storage device > iSCSI

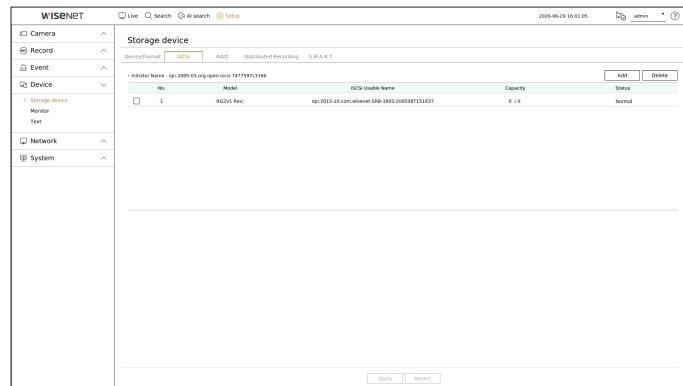

- Add : Add an iSCSI device.
- Delete : Delete the registered iSCSI device.
- Model : Displays the iSCSI model name.
- iSCSI Usable Name : It displays the name of iSCSI in compliance with the iSCSI protocol format.
- Capacity : It displays the currently used amount/total capacity of iSCSI devices.
- Status : Displays the status of an installed iSCSI device.

### List of products supported

Promise Technology vessRAID 1740i / 1840i / 2600i 1ea JBOD 3ea / SRB-160S

## Adding an iSCSI device

### Add iSCSI

• IP Address

• Port Number

No.	iSCSI Usable Name
<input type="checkbox"/> 1	iqn.2015-10.com.wisenet:SRB-160S:200508T151642
<input type="checkbox"/> 2	iqn.2015-10.com.wisenet:SRB-160S:200508T151649
<input type="checkbox"/> 3	iqn.2015-10.com.wisenet:SRB-160S:200508T151655

• ID  • Password

1. In the iSCSI window, click on the <Add> button.
2. In the "Add iSCSI" window, enter your IP address and port number and click <Search>.
3. In the <iSCSI Usable Name> list, click on a device to add.
4. After entering ID/password, click on the <OK> button.

- ✎
  - iSCSI device requires an independent port. Use a general port instead of a camera port.
  - When using a hub to connect an iSCSI device with recorder, make sure to use the GIGA hub and to use an independent network to save data normally.
  - When the Recorder is connected to an iSCSI device, if you change the iSCSI equipment setting, a problem can occur.
  - A HDD to be mounted in vessRAID should be listed in the RAID compatibility list.
  - Each volume of an iSCSI device is recommended to be 16 HDDs.
  - When you register an iSCSI device in the Recorder for the first time, you need to format it first.
  - The iSCSI lun mapping function is supported.
  - If you activate the LUN mapping function in the iSCSI device, the LUN can only be connected to a Recorder which is mapped.
  - More than one mapped lun should be available to connect to the initiator when using lun mapping.
  - An internal HDD must be mounted in the Recorder before connecting the iSCSI device.
  - For the stable communication of large data, register only one iSCSI device to Recorder to use it.

## RAID mode setting


This function is only available for products that support RAID.

If you enable the RAID (Redundant Array of Independent Disks) mode, you can safely recover your data even if your system HDD is damaged.

- RAID for each product

Product	RAID type
XRN-3210B4 XRN-6410B4 XRN-6410DB4	RAID level 5 and 6 are supported. <ul style="list-style-type: none"> <li>▪ RAID level 5 : You can recover the operation and data of only one malfunctioning HDD out of all the HDDs in the RAID array.</li> <li>▪ RAID level 6 : You can recover the operation and data of two malfunctioning HDDs out of all the HDDs in the RAID array.</li> <li>▪ You can configure two arrays of RAIDs for the product. The first RAID array only uses HDDs mounted in Slot 1 to 8 while the second RAID array only uses HDDs mounted in Slot 9 to 16.</li> <li>▪ You can configure an RAID array when the RAID array to be configured has 6 to 8 HDDs mounted in it.</li> </ul>

## Setup > Device > Storage device > RAID

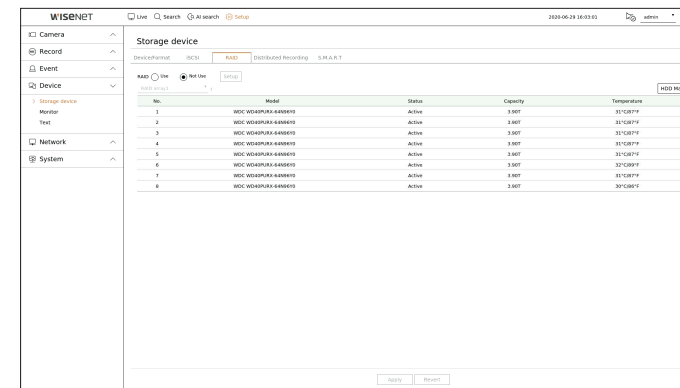

- RAID status : Displays the operational status of the RAID.
  - Active : Signals the fact that the RAID is operating normally.
  - Degraded : It is displayed when the one or more HDDs that make up the RAID are malfunctioning. When the maximum number of HDDs allowed in the RAID level are malfunctioning, if an additional HDD malfunctions, you cannot use or restore the RAID. Immediately, replace the HDD and proceed with restoration.
    - For more information about how to replace the HDD and recover the RAID array, refer to the "**Setup > Setting the Device > Storage device**" page in the Table of Contents.
  - Rebuilding : Indicates that the RAID array is in the recovery process. At RAID level 5 or 6, if the max number of HDDs allowed by the RAID level is malfunctioning, and one more HDD caused malfunction during rebuilding, then you cannot recover or use the RAID array.
  - Fail : This means that the RAID cannot be used or restored.
- Model : Displays the registered RAID model.
- Status : Displays the current operating condition of the HDDs installed in a RAID.
  - Active : Displays that the HDD is operating normally.
  - Faulty : It displays that the HDD is malfunctioning. You need to immediately replace the HDD for smooth recovery of the RAID.
  - Check : A problem occurs on the HDD, requiring replacement or inspection.
  - Ready : If recovery of 2 HDDs is required in the RAID 6 state, HDDs for which rebuild is pending are displayed.
- Capacity : It shows the total capacity of the HDDs that composes a RAID.
- Temperature : You can check the temperature of HDD(s) that compose a RAID.

## RAID mode setting

1. Click on the <Use> or <Setup> button.
2. In the use RAID window, select settings of RAID and click on the <OK> button.
  - Use/Not Used : You can select whether or not to use the RAID mode.
  - Shows the RAID types supported by each product.

Product	RAID type
XRN-3210B4	
XRN-6410B4	Level 5, level 6
XRN-6410DB4	

3. It will show the list of HDDs that compose a RAID. In the RAID screen, click on <OK>.
4. The data deletion and system rebooting message window will appear. You can click on the <OK> button to reboot the system for RAID mode setting.
5. When RAID building is complete, select "**Setup > Device > Storage device > RAID**" to check the build.

- ✎ If you disable the RAID mode at RAID level 5 or 6, then every RAID array will be canceled. If you want to cancel only one of RAID arrays in use, then go to the setup window and disable that specific RAID array.
  - If the status of HDD is displayed as inspected/replaced in the device/format page, you cannot use it to build a RAID.
  - When the RAID mode is in use, it is recommended to use HDDs with the same storage space from the same manufacturer.
  - If you enable or disable the RAID mode, existing data will be deleted. If you need to keep your old data, export it first.
  - RAID Array capacity calculation
    - When you build the RAID in level 5, the available capacity of a RAID is (the least HDD capacity) x (total number of HDDs -1).
    - When you build the RAID in level 6, the available capacity of a RAID is (the least HDD capacity) x (total number of HDDs -2).
  - If you use HDDs with different capacity, the HDD with the smallest capacity will be used to build a RAID.


## Recovering RAID Array

1. If the HDD number whose <Status> is shown as Faulty or Check is recognized, check the location of HDD to be replaced on the HDD map.
2. Replace the malfunctioning HDD from the recorder with a new HDD.
3. When the recovery starts, the LED of the replaced hard disk lights up in yellow. In the "**Setup > Device > Storage device > RAID**" menu, you can check the recovery progress.
  - ⚠ Replace it with the same model of HDD or an HDD of the same capacity from the same manufacturer.
  - A HDD used to build the RAID should be one of the recommended models. If it's not possible to use the same model of HDD, then use the HDD with the same capacity from the same manufacturer should be used.
  - If you remove the power cord while using the RAID, it can damage it, so be careful. For reliable power, it is recommended you use the UPS.
  - A new HDD to be replaced should be one that is not RAID configured.

## Distributed Recording

This function is only available for products that support distributed recording. You can save recordings in a distributed manner by distributing HDD(s) of each group.

### Setup > Device > Storage device > Distributed Recording

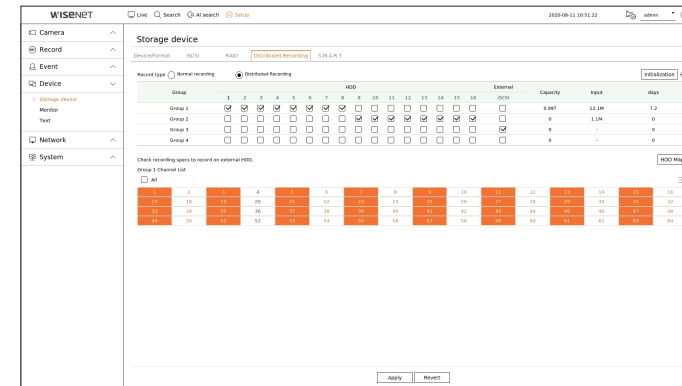


- Record type : Select a storage type from <Normal recording> or <Distributed recording>.
- Initialization : Settings that are provided when <Distributed recording> is selected are configured as the default settings.
- ↻ : Update values such as hard disk capacity, input, and storage date to the latest data.
- Group : Select a group to distribute the recording. If you select a group, a list to select a camera to assign opens below.
- HDD : The number and kind of currently available HDDs are activated.
  - **Example**) A channel number that is activated like < 7 > is an available HDD.
- External : Select an external storage device on which recordings will be stored.
- Capacity : Displays the currently used capacity and entire capacity of an HDD that is selected in the group.
- Input : Displays the recording data volume of a channel selected in the group.
  - If the input value exceeds 200 Mbps, it will be displayed in red.
- Days : Displays the number of storable days for the input from the selected channel in the group on the HDD.
  - **Example**) 3 days and 12 hours is displayed as 3.5.
- HDD map : You can check the location according to the assigned number for the HDDs installed inside.
- Channel list : The button state of the channel list is as follows.
  - **1** : Channel selected in the current group.
  - **2** : Channel selected in other group.
  - **7** : Channel that is not currently selected. Please add this channel to the group.
- ✎ Recording cannot be performed while saving changes in distributed recording settings.
  - To add more HDDs for distributed recording, install them in the order of 1, 5, 2, 6, 3, 7, 4 and 8.

## S.M.A.R.T

You can check the connection status and details of the hard disk mounted in the recorder.

Setup > Device > Storage device > S.M.A.R.T

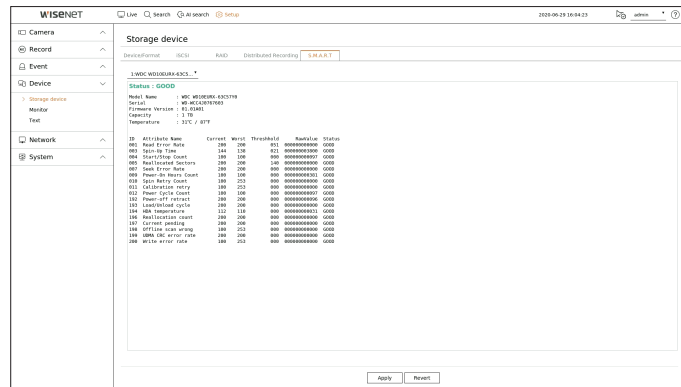


## Monitor

You can set the information displayed on the monitor as well as the output system.

Setup > Device > Monitor

### Monitor settings


You can set the monitor output related screen displays, switching time, video display, etc.

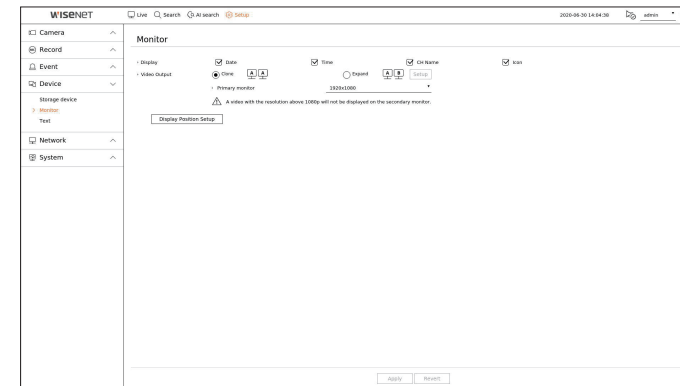


- Display : Only checked items among date, time, channel name and icon will be displayed on the monitor screen.
- Video Output : Set the video display resolution.  
For products that support the extended monitor, you can set the <HDMI> resolution after selecting <Clone> or <Expand> mode for video display.
  - Clone mode : You can set the video display resolution of the primary monitor (HDMI 1) and secondary monitor (HDMI 2) to be the same.  
If you set a resolution exceeding 1920 x 1080 while operating in clone mode, the video will not be displayed to the secondary monitor (HDMI 2).
  - Extended mode : You can set the video display resolution of the primary monitor (HDMI 1) and secondary monitor (HDMI 2) respectively.
    - The primary monitor (HDMI 1) supports 4K resolution, and the secondary monitor (HDMI 2) supports 1080p resolution. Video exceeding the resolution of 1080p will not be displayed from the secondary monitor.
- If the newly selected resolution does not fit with the monitor, the display won't function properly. In this case, wait until the native resolution is restored and then switch to another resolution of your choice.

## Expansion monitor settings

This function is only available for products that support the use of an extended monitor.

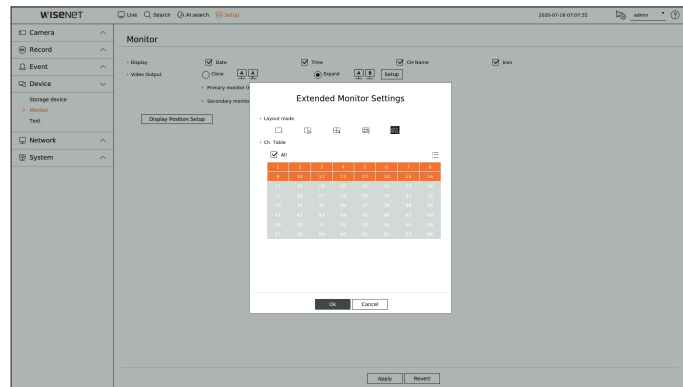


1. Select **<Expand>** for video display and click **<Setup>**. You can change the layout of the extended monitor.
2. Select split mode in the layout mode.
3. Select as many channels on the channel table as the number of channels selected in layout mode, and you can view the applicable screens on the monitor.


- 
 ■ If the newly selected resolution does not fit with the monitor, the display won't function properly. In this case, wait until the native resolution is restored and then switch to another resolution of your choice.
- The profile used in the live output of the expanded monitor uses a remote profile. If the user changes the remote profile, the video output of the expanded monitor may be affected.
- If the monitor is in clone mode, you can specify up to the split mode supported by the recorder. When the monitor is set to expanded mode, you can assign up to 16-split of the secondary monitor.

## Display position settings

Some monitors may not display information (camera name, icon, time information, etc.) about the Recording, depending on the condition. Then, you can change the display position of the data.

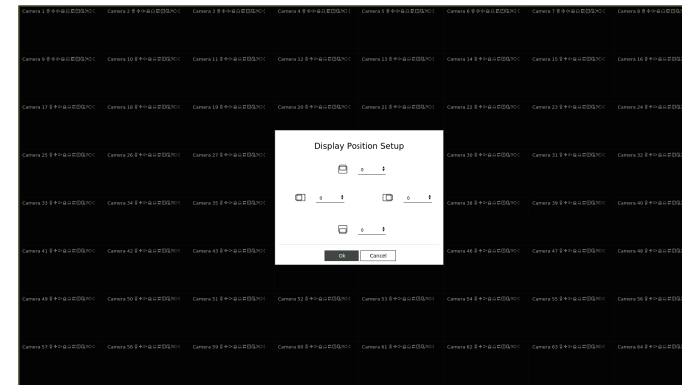

1. From the monitor setup menu, select **<Display Position Setup>**.
2. Using **<◀▶>** button to adjust the screen that is cut off.
3. Press **<OK>**.

- 
 ■ This product only supports 30Hz at 4K resolution.


## Text

You can set the POS device setting to send text information and text event information.

## Device Settings

You can make detailed settings for the POS device connected to the recorder.

### Setup > Device > Text > Device

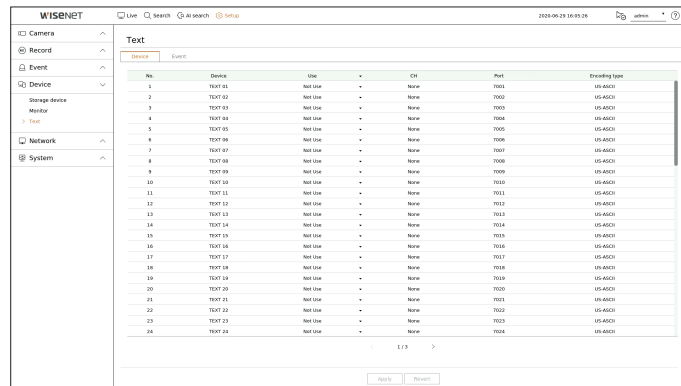

- Device : Displays the text device name registered by the user.
- Use : Specifies whether to enable text device.
- CH : Select a channel to add a device from a channel table.
- Port : Display a port number that is set.
- Encoding type : Select an encoding type to use from a list.

 Epson, Wincor Nixdorf, Axiohom, Radiant System, IBM POS device, and ANPR protocols are supported.

 Equipment connected to Recorder uses TCP/IP communication protocol.

## Registering a Text Device

### Text Device

› No.

› Device Name

› Use of a device  Use  Not Use

All ☰

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64

› CH

› Playback start time  second(s) before

› Port

› Encoding type

› Device type

› Start


› End

1. Click the desired item in the text device list.
2. Enter the device information to register in the text device window.
  - Device name : Enter the desired text device name.
  - Use of a device : Specify whether to enable text device.
  - CH : Select a channel to add a device from a channel table.
  - Playback start time : Enter the start time of the playback from how many seconds before when an event occurs.
  - Port : Enter the device's port number.
  - Encoding type : Select the encoding type of the device.
  - Device type : Select the device type.
  - Start / End : You can select starting and ending character strings.
    - A text string can be entered by using texts, hex codes, and regular expressions.
    - Text : Enter a text string to search for.
    - Hex Code : Enter a hexadecimal text string to search for.  
(Your input should not be in hexadecimal —e.g. 1b40, 1b69)
    - Regular expression : Enter a regular expression to search for text strings that follow specific rules.
3. Click <OK>.

## Text Event Settings

You can set the text to receive an alarm when an event occurs.

Setup > Device > Text > Event

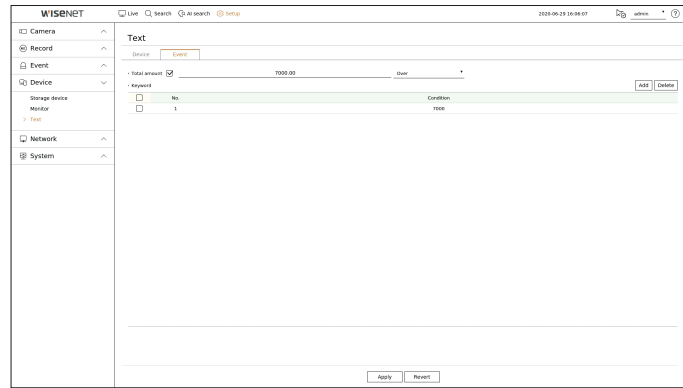

- Total amount : Set the condition of the total amount to be notified when a text event occurs. Check whether the total amount is used, and then select the base amount and range.
- Keyword : You can register or delete keywords to be notified when an event occurs.
  - If the **<Add>** button is clicked, a screen to add keywords pops up.
  - If you select one of the added keywords to delete and click the **<Delete>** button, the selected keyword will be deleted.

- ✎ When entering the total amount, set it to 15 characters or less, including minus and decimal point.
- ✎ When entering keywords, set them within 50 characters. Up to 20 keywords can be specified.

## SETTING THE NETWORK

You can set various network functions, such as monitoring live video by connecting to a network from a remote location and receiving an event by e-mail.


### Interface

You can set the network connection route and protocol.

### Setting a network connection

Sets the protocol and environment of the network.

Setup > Network > Interface > Network

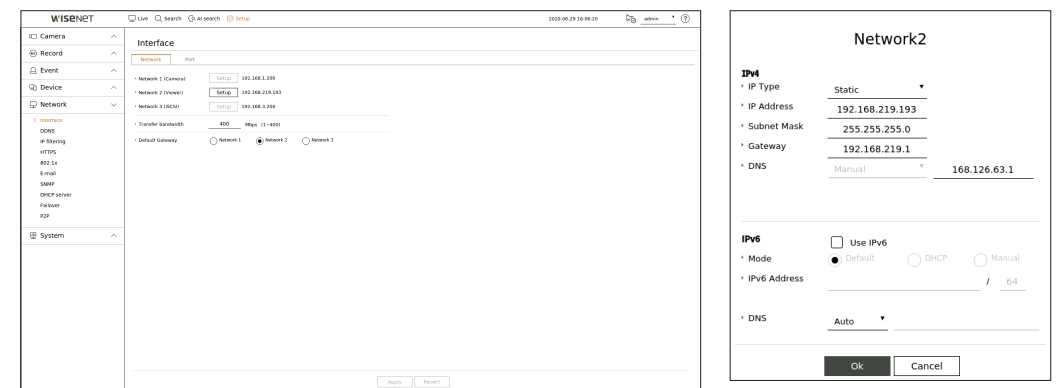

- Network : Each product supports a different number of network ports. If it supports two or more network ports, you can set the network for each function as follows.
- Network 1 (Camera) : It can be used as a port for connecting a camera. If you connect a camera, then the camera video will be transmitted. Using the network information, you can access the web viewer.
- Network 2 (Viewer) : It can be used as a common port for camera and web viewer connection.
- Network 3 (iSCSI) : It can be used as a dedicated port for iSCSI connection.
  - IP type : Select the type of network access.
  - IP address, Subnet Mask, Gateway, DNS
    - Static : IP address, subnet mask, gateway, and DNS can be directly entered.
    - DHCP : IP address, subnet mask, gateway, and DNS can be automatically set.
- Transfer bandwidth : Enter the max data volume of a rate for transfer.
- Default gateway : Select the default gateway. If there are multiple network ports, set one of them as the default gateway.

- ✎ The DNS value of **<DHCP>** can be directly entered only if you have selected **<Manual>**.



## Connecting and Setting the Network

Networking may differ from the connection method, check your environment before setting the connection mode.

### When no router is used

#### • Static mode

- Internet connection : Static IP, leased line, and LAN environments allows connection between the Recorder and remote user.
- Network Settings : Set the <Network> in <Interface> menu of the connected Recorder to <Static>.
  - Consult your network manager for IP, Gateway and Subnet Mask.

#### • DHCP mode

- Internet connection : Connect the Recorder directly to a cable modem, DHCP ADSL modem or FTTH network.
- Network Settings : Set the <Network> in <Interface> menu of the connected Recorder to <DHCP>.

### When a router is used

- ! To avoid IP address conflict with the Recorder's static IP, check followings :

#### • Setting the Recorder with a static IP

- Internet connection : Connect the recorder to an IP router where cable modem is connected, or connect the recorder in the local area network (LAN) environment.

#### • Setting the Recorder Network

1. Set the <Network> in <Interface> menu of the connected Recorder to <Static>.
2. Check whether the set IP address is in the static IP range provided by the Broadband Router.  
IP Address, Gateway, and Subnet Mask : Consult your network manager.

- ! If a DHCP server is configured with starting address (192.168.0.100) and end address (192.168.0.200), you should set the IP address out of the configured DHCP range (192.168.0.2 ~ 192.168.0.99 and 192.168.0.201 ~ 192.168.0.254).

3. Check the Gateway address and subnet mask are equal to those set in the Broadband Router.

#### • Setting the DHCP IP Address of the Broadband Router

1. To access the Broadband Router's configurations, open a web browser on the local PC that is connected to the Broadband Router and enter the router's address (ex : http://192.168.1.1).
2. At this stage, make the local PC's windows network configurations to the below example :

**Example) IP :** 192.168.1.2

Subnet Mask : 255.255.255.0


Gateway : 192.168.1.1

- Once connected to the Broadband Router, it prompts with password. While entering nothing to the User Name field, enter "admin" into the password field and press <OK> to access the router configurations.
- Access the router's DHCP configuration menu and set its DHCP server activation, and provide the start and end address.
  - Start address : 192.168.0.100
  - End address : 192.168.0.200

- ! Above steps may differ from the router devices depending on the manufacturer.

## Port Setting

Setup > Network > Interface > Port

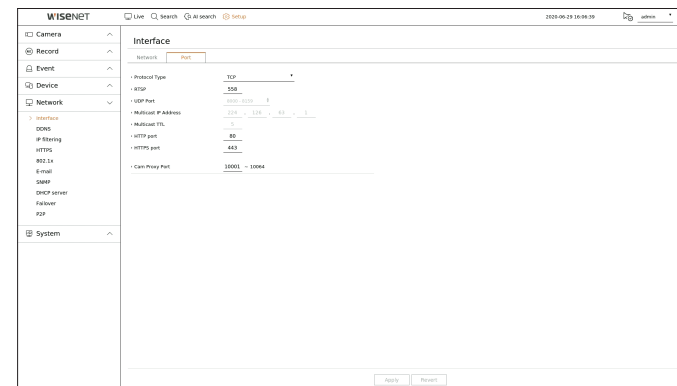


- Protocol type : Select the protocol type among TCP, UDP - Unicast and UDP - Multicast.
- RTSP : It is used to transmit the video over the network. The initial value is <558>.
- UDP port : Activated when an UDP item is selected in protocol type. The initial value is <8000-8159>, and the setting value changes in 160 units.
  - UDP : It has less stability and faster speed when compared to TCP, and recommended for local area network (LAN) environments.
- Multicast IP address : Enter the IP address directly when selecting an UDP-Multicast.
- Multicast TTL : Enter the TTL value when selecting an UDP-Multicast. The initial value is set to <5>, and enter a value between 0 and 255.
- HTTP port : Enter the port value for the HTTP web viewer. The initial value is set to <80>.
- HTTPS port : Enter the port value for the HTTPS web viewer. The initial value is set to <443>.
  - HTTPS is an enhanced version of the HTTP web communication protocol. If security is important when accessing the web viewer, enable the HTTPS port.
- Cam proxy port : Sets the camera proxy port. The initial value is set to <10001>, and the setting value changes in 64 units.

## DDNS

If a remote user accesses the network, you can set whether or not to use DDNS and the site to be connected.

### Setup > Network > DDNS

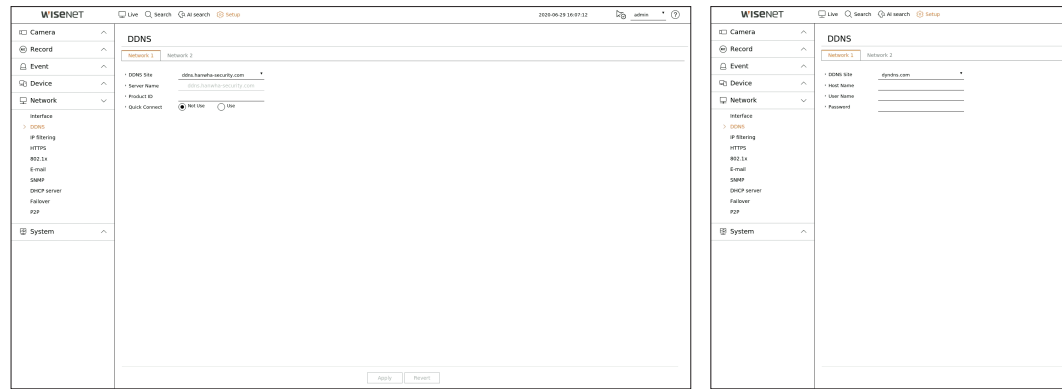

- DDNS Site : Specify the use of DDNS and select a site that you registered.
  - Server Name : Enter the server name registered with the DDNS site.
  - Product ID : Enter the product ID registered with the DDNS site.
  - Host Name : Enter the host name registered with the DDNS site.
  - User Name : Enter the user name registered with the DDNS site.
  - Password : Enter the user password registered with the DDNS site.
- ✎ If you select <Not Use>, the input box will be inactive.
  - ✎ If you select <ddns.hanwha-security.com>, the host name input box will be inactive.
- Quick Connect : Appears if the <ddns.hanwha-security.com> is selected for a <DDNS Site>. To use the function, set to <Use> after connecting the Recorder to a UPnP router.
  - ✎ If canceled during Quick Connect configuration, it automatically switches to <Not Use> and saved.
  - ✎ If you are setting up a port that is already in use, then the connection might fail. Check the port setup of your router.
  - ✎ Server name, product ID, and quick connect can be displayed if you set <DDNS Site> to <ddns.hanwha-security.com>.
  - ✎ DDNS is a short form of Dynamic Domain Naming System.  
DNS (Domain Name System) is a service that routes a domain name consisting of user friendly characters (ex : www.google.com) to an IP address consisting of numbers (64.233.189.104).  
DDNS (Dynamic DNS) is a service that registers a domain name and the floating IP address with the DDNS server so that the domain name can be routed to the IP address even if the IP is changed in a dynamic IP system.

### To check Quick Connect status

A progress bar and its message appears for a Quick Connect.

- **Quick Connect Success** : Message for a successful connection.
- **Invalid Network Configuration** : Message appears if the network configuration is not valid. Check the configuration.
- **Please enable UPnP function of the router.** : Message appears if the router requires UPnP function enabled.
- **Failed to find the router.** : Message appears if the router is not found. Check the router's configurations.
- **Please restart the router.** : Message appears if the router should be restarted.

## DDNS Setting

### Setting DDNS in the Recorder

Set <Protocol type> to <TCP> in the "Setup > Network > Interface > Port" menu of the connected recorder.

### DDNS Settings of the Router

Select the corresponding menu for the network transfer protocol of the router.


### Setting up UPnP of Router

Refer to the router's documentation to enable the UPnP function of the router.

## IP Filtering

You can prepare the list of IP addresses to allow or block access to a specific IP address.

### Setup > Network > IP filtering

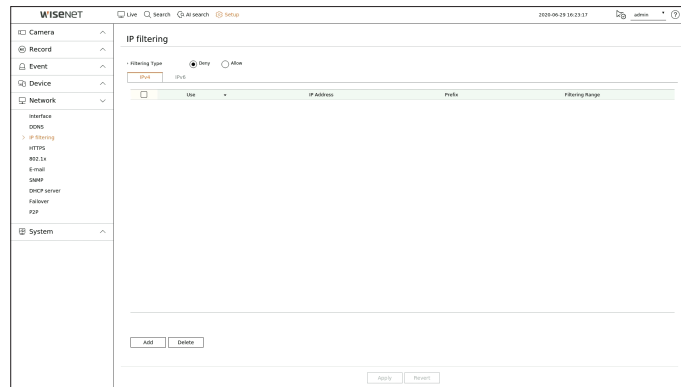

- Filtering type
    - Deny : If you select reject, access to the registered IP address will be limited.
    - Allow : If you choose permit, then they can only access the registered IP addresses.
  - Use : Select whether to enable registered IP filtering.
  - IP address : Displays the registered IP address. Double click the IP address to change the settings.
  - Prefix : Displays the prefix to be filtered. Double-click the prefix to change the settings.
  - Filtering range : If you enter an IP address or prefix, then the range of IP addresses blocked or permitted will be displayed.
- ! ■ If a camera's IP address is not included in the Permit list or is in the Reject list access to it will be rejected.
- For IPv4, camera IP filtering through PoE port is not immediately applied. (Previous connections are maintained, and filtering is applied on next login.)

#### To register the IP addresses to filter,


1. Select the IP type tab you want to register from IPv4 or IPv6.
2. Click <Add> at the bottom of the screen.
3. When the additional window is displayed, set the details.
  - IP filtering : Select whether to enable IP filtering.
  - IP address : Enter the address to enable IP filtering.
    - When entering an IP address, a value in the range 0-255 must be entered to register.
  - Prefix : Enter the prefix value.
4. Click <OK> to complete.

- ✂ ■ To delete a registered item, select the check box of the item to be deleted and click <Delete> at the bottom of the screen.

## HTTPS

You can choose a secured connection system or install a certificate.

### Setup > Network > HTTPS

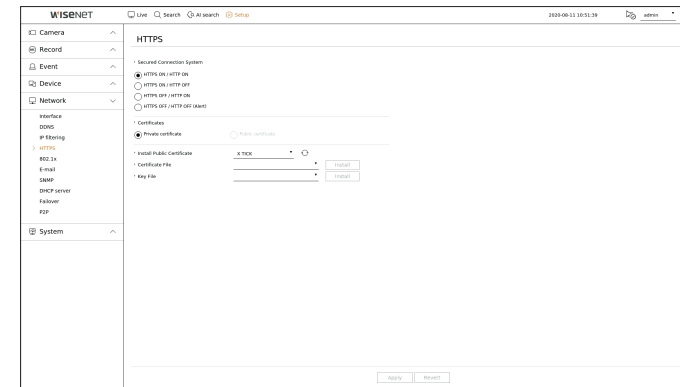

- Secured Connection System : You can select a type of security connection system.
  - HTTPS ON / HTTP ON
  - HTTPS ON / HTTP OFF
  - HTTPS OFF / HTTP ON
  - HTTPS OFF / HTTP OFF (Alert)

! ■ If the Recorder device is connected to the external internet or installed in an environment with high priority for security, making a secure connection is recommended.


- Certificates : You can select the type of certificate from <Private Certificate> or <Public Certificate>.
  - <Public Certificate> can be selected only when there is a registered public certificate.
- Install Public Certificate : You can scan and register a public certificate to be installed. To install a certificate, you must install a certificate file or key file issued by a certificate authority. Click <Install> to register the certificate.



## Event Setting

You can set the interval and type of the event that will be sent to the user.

### Setup > Network > E-mail > Event

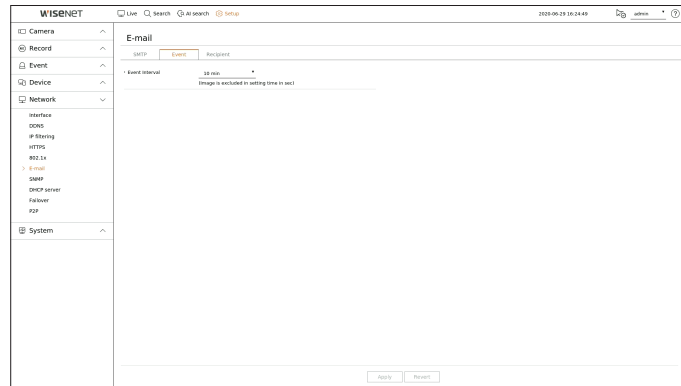


- Event Interval : Set the event interval.
  - If a series of events occurs, the e-mail will be sent at the specified interval, not on each event.

## Recipient Setting

You can create a group and add users to it or; you can delete users and change a group.

### Setup > Network > E-mail > Recipient

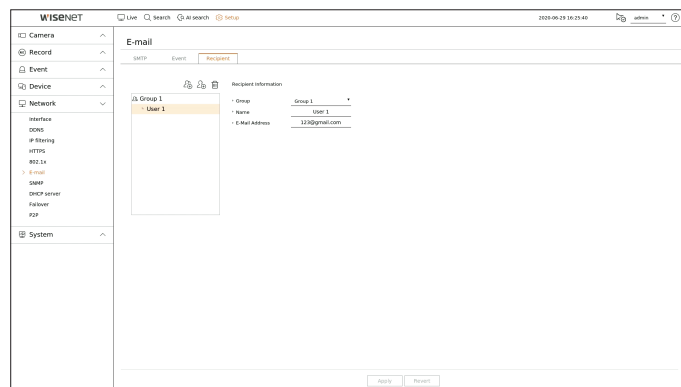


- Click on <Add Group> to add a group.  
Enter the group name.
- Select a recipient group to receive emails.  
If a group is added, it will appear in the group list.
- Click on <Add Recipient> to add a recipient.  
Select a group and enter names and email addresses.  
If a group is created, you can add a recipient.

## SNMP

The SNMP protocol allows system or network administrators to remotely monitor and configure the network devices.

### Setup > Network > SNMP

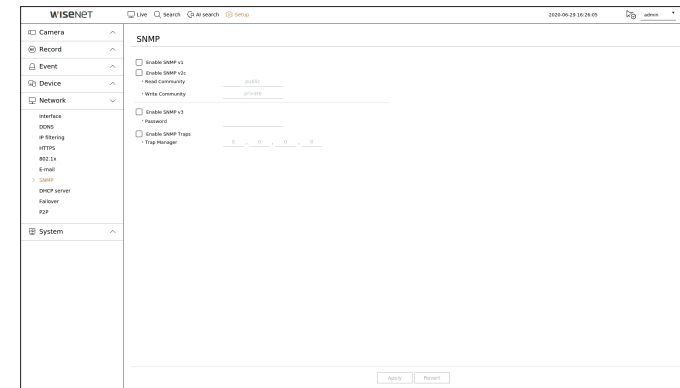


- Enable SNMP v1 : SNMP v1 is used.
- Enable SNMP v2c : SNMP v2c is used.
  - Read Community : Enter the name of read-only community to access the SNMP information. By default it is set to <public>.
  - Write Community : Enter the name of write-only community to access the SNMP information. By default, it is set to <private>.
- Enable SNMP v3 : SNMP v3 is used.
  - Password : Set the initial user password for SNMP version 3.
- Enable SNMP Traps : SNMP trap is used to send important events and conditions to the Admin System.
  - Trap Manager : Enter the IP address to which messages will be sent.

## DHCP Server

You can set the internal DHCP server and assign an IP address to the network camera.

## Network Setting

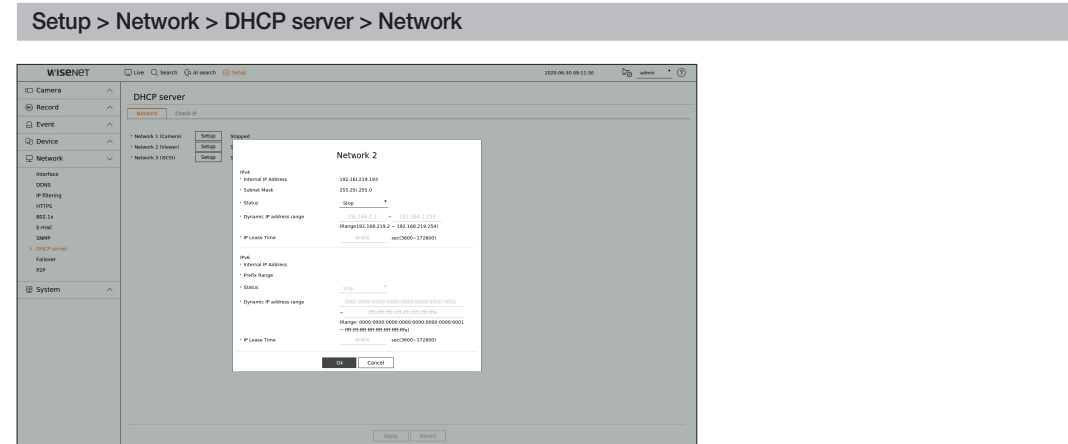

- Network : You can set the IP range and time to activate as the recorder's DHCP server.


### To set the DHCP server

1. Click **<Setup>** of the network you want to set as a server.
2. When the network setting window is displayed, select **<Run>** for **<Status>**.
3. Enter the starting IP and end IP in the **<Dynamic IP address range>** field.
4. Fill in the **<IP Lease Time>** field.
5. Click **<OK>**.  
The IP range entered is set as the DHCP server address of the network.

## Check IP

You can check the IP address assigned to the current DHCP server, MAC address, and the connected network port information.


### Setup > Network > DHCP Server > Check IP

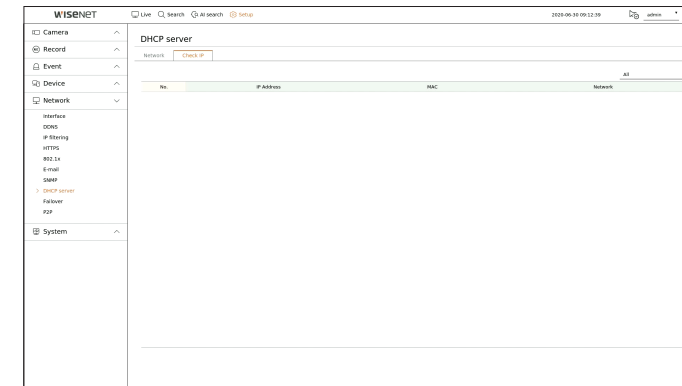

## Failover

This function is only available for products that support failover.


If the recorder cannot record due to a network failure, other recorders that have been prepared can record instead. You can connect 32 'normal' recorders to one 'standby' recorder.

-  The recorder you want to configure for failover needs to be connected to both the camera and viewer ports to the local network.
  - Failover configurations can only be set with recorders of the same model.
  - Troubleshooting network interface supports IPv4 only.
  - All recorders must have time synchronized. For more information about time synchronization settings, refer to the **"Setup > Setting the System > Date/Time/Language"** page in the Table of Contents.
  - The network IP band in the recorder must be set to a different band.
    - **Example of IP in a different bandwidth**
    - Example 1)** IP : 192.168.1.200, subnet 255.255.255.0  
In the Example 1) above, since 255 of the subnet corresponds to 192.168.1, any IP in a format of 192.168.1.x has the same bandwidth.  
An IP in a format of 192.168.2.x has a different bandwidth with an IP in a format of 192.168.1.x.
    - Example 2)** IP : 172.16.1.200, subnet 255.255.0.0  
In the Example 2) above, since 255 of the subnet corresponds to 172.16, any IP in a format of 172.16.x.x has the same bandwidth.  
An IP in a format of 172.17.x.x has a different bandwidth with an IP in a format of 172.16.x.x.
  - For more information about network settings, refer to the **"Setup > Setting the Network"** page in the table of contents.

## To set troubleshooting

1. Set one recorder to <Standby> mode and the other recorder to <Normal> mode.
2. In the recorder set to <Normal> mode, enter the viewer port IP and administrator password of the <Standby> recorder you want to connect to and click <Connection> under the status display.
3. Check the IP and status of the connected <Normal> recorder in the <Standby> recorder.

### Setup > Network > Failover

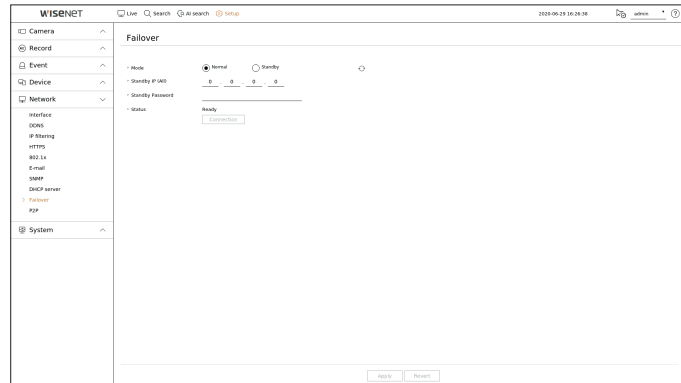

- Mode : Select either <Normal> or <Standby> mode.
  - Normal : Recorder being recorded. Monitored by the <Standby> recorder.
  - Standby : Recorder being prepared without recording. It will record instead of the <Normal> recorder if a problem occurs.

## In the case of normal mode

- Standby IP (All) : Enter the viewer port ID of a standby device to access.
- Standby Password : Enter the administrator password of the standby device.
- Status : Displays the current connection status.
- Connection / Disconnection : Click the button to access or disconnect the access.


## In the case of standby mode

- Device List/Status : Shows the status of the general recorder currently connected to the standby recorder. To delete the general recorder connected, click <Delete> on the right side of the recorder.
- The standby recorder can only enable some functions in the <System>, <Device>, and <Network> menus. You can't use the <Record> and <Event> menus.
  - In the standby recorder, the previous operation will stop when a failover is performed during the playback or section export, and the screen will move to the live screen.

State name	Description
Ready	Ready to be connected
Connected	General equipment and standby equipment connected (failover available)
Failover	Troubleshooting is being performed
Connected fail	Connection was attempted but failed
Authentication failure	Auth failed by entering an incorrect standby password when attempting to connect
Connected(Match Time Required)	Connected without time synchronization with the standby recorder
Connected(check camera port IP)	Even if the camera port of a general recorder is connected to the viewer port of the standby recorder or connected to the same viewer port, the IP port of the camera port is not matching.
Connected fail(check camera port IP)	The connection from the general recorder's camera port to the standby recorder's camera port failed.
Connected fail (It is a different model.)	Failed connection by connecting devices of different models.

## Example) XRN-6410DB4

- Subnet 1 → Network 1 (Camera)
- Subnet 2 → Network 2 (Viewer)
- Subnet 3 → Network 3 (iSCSI)

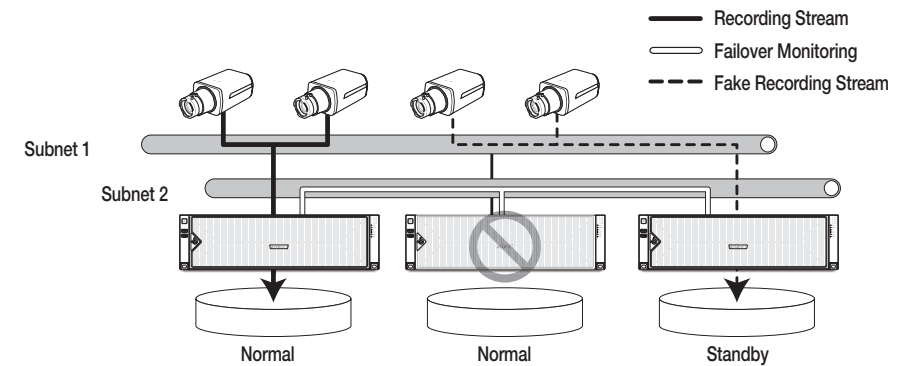


## P2P

This function is only available for products that support P2P.

You can connect the recorder to Wisenet Mobile for easy use when using P2P service.

### Setup > Network > P2P

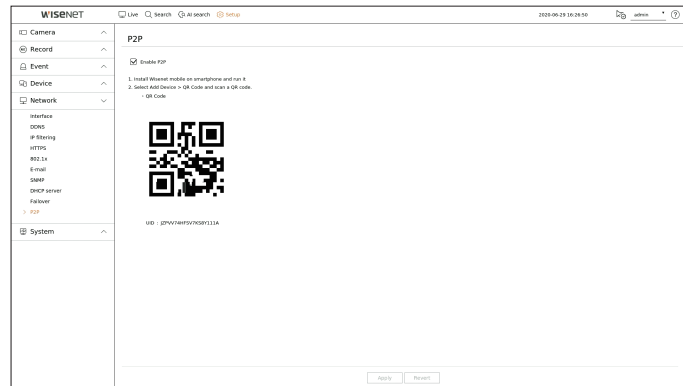

- Enable P2P : Select check box if you want to use P2P service.
- QR Code : Scan QR code by mobile device.

### To run the P2P service

1. Click **<Enable P2P>** to test the connection to see if the current recorder can be connected remotely.
2. When the connection is successful, search for Wisenet Mobile from the smart phone, and then install and run it.
  - When "Add a device > QR code" is selected, the Recorder QR code can be scanned.
3. When the QR code is scanned, the device ID that can be seen in Recorder is automatically converted to mobile viewer ID, and the mobile viewer can be used right away when the ID/password of Recorder is entered.
4. After this, it automatically connects to Recorder and can be monitored easily with a smart phone when running Wisenet mobile app saved in the smart phone.

- P2P service period expires in 3 years. If you want to extend it after expiration, contact your vendor.


## SETTING THE SYSTEM

You can set the date, language, authority, etc. displayed when using the system, and query system information or log information.

### Date/Time/Language

You can check and setup the current Date/Time and time related properties, as well as the language used for the interface on the screen.

### Setup > System > Date/Time/Language


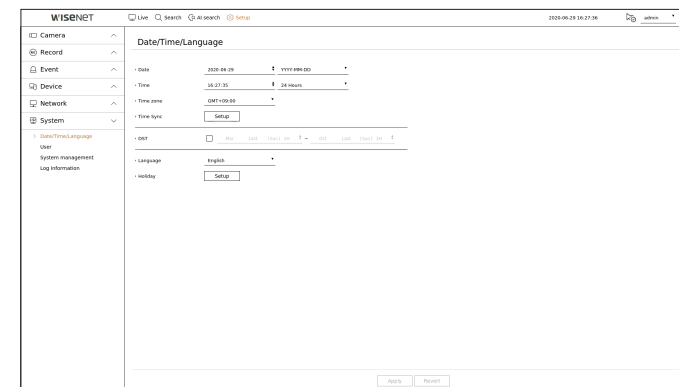


- Date : Sets the date and its format that will appear on the screen.
- Time : Sets the time and its format that will appear on the screen.
- Time zone : Sets the time zone of your area based on the Greenwich Mean Time (GMT).
  - GMT (Greenwich Mean Time) is standard World Time and the basis of world time zone.
- Time Sync. : Specify the use of synchronization with the time server. Click the **<Setup>** button to display time synchronization setup screen. If you select to use the **<Time Server>**, the current time will be synchronized on a regular basis by the server defined as **<Time Server>**. You cannot change the time information manually if the time server is enabled.
  - Synchronization : Specify the use of synchronization with the time server.
  - Time Server : Enter an IP or URL address of the time server.
  - Last Sync Time : Displays the most recent synchronization time from the selected time server.
  - Activate as server : If you select **<Use>**, this recorder will act as a time server for another recorder or network camera.
- DST : Set up Daylight Saving Time with its period to make the time earlier than the GMT of its time zone by 1 hour during the set period.
- Language : Select your language. Sets the language for the interface.

- Depending on the location of the product release, the language and standard time setup may vary.




- Holiday : A user can select specific dates as holidays according to their own preferences. Select a holiday from the calendar displayed by clicking <Setup>.
  - The same applies to <Recording Schedule> or <Schedule> settings as holidays.

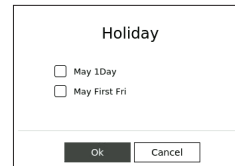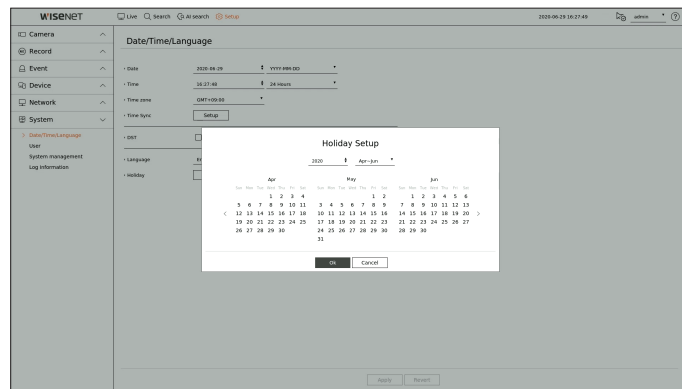

Example) If you select May 1 and check <May 1Day>, May 1 will be set as a yearly holiday, and if you check <May 1Day> and <May First Fri> May 1 of every year and all Fridays of the first week of May will be set as holidays.

### To use the calendar

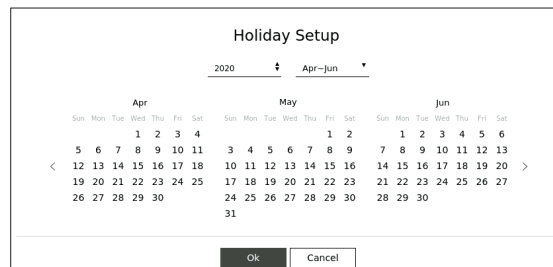

1. Select year and month.
  - Click <◀> on the right side of the year to change the year by one year.
  - Click the <▼> to the right side of the month to change the month every 3 months.
2. Select a date and click on the <OK> button.


## User

You can manage users, such as adding or deleting users and granting different authorities for each user.

### Setting the Administrator

You can set and change Administrator's ID and password. The administrator can use and set all menu items and functions.

#### Setup > System > User > Administrator

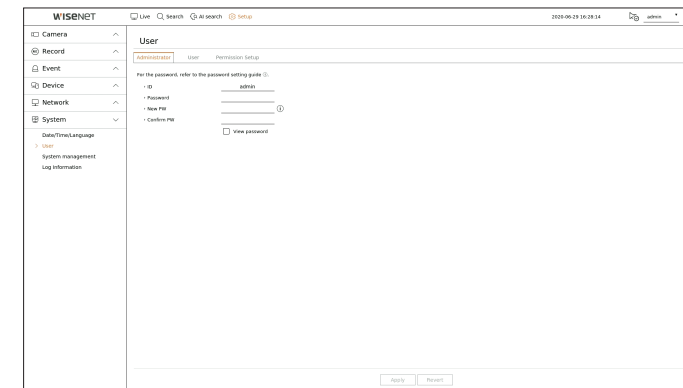


- ID : Change the admin ID.
- Password : Enter the current PW.
- New PW : Enter new password.
- Confirm PW : Enter the new password again.
  - If <View password> is selected, the password will no longer be hidden on the screen when you type it.
- The initial administrator ID is set to "admin" and you will need to configure the password in the installation wizard.
- Please change your password every three months to safely protect personal information and to prevent the damage of the information theft.
  - Please, take note that it's a user's responsibility for the security and any other problems caused by mismanaging a password.
- If you click <?>, a basic guide for password setup is displayed.

## User setting

You can create user groups and set authorities for each group. You can manage user information such as registering and deleting users in the created user group.

Setup > System > User > User

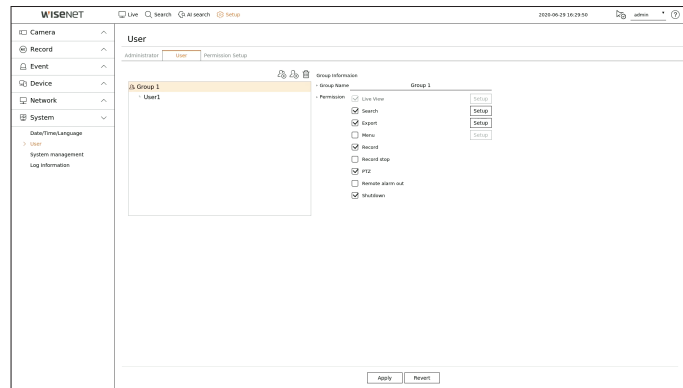

### If you want to add a group


1. Click on the <Add> button to launch the Group Addition popup window. If you want to add a group, click on <OK>.
2. If you click the group name item on the right, a virtual keyboard to enter the group name will appear. Enter the group name to register.
  - You can add a maximum of 10 groups.

### If you want to set group permission

Set the access authority of the group. Users in the group can only enable the menu to which they have been granted authority.

1. Select the menu to set group permissions. Set the menu and click <Setup> on the right to display the detailed settings window.
  - Live view : You can set permissions to access the live screen for each channel.
  - Search : You can set permissions to access the search menu for each channel.
  - Export : You can set the authority to access the export menu for each channel.
  - Menu : You can select and set the setting menu that can be accessed. A group user can only access the menu selected. If you select the menu, the menu permission setting screen will be displayed.
  - Record, Record stop, PTZ, Remote alarm out, Shutdown : You can set the menu to grant access to users in the group.
    - Permission-set menus will show up in the Live menu when users of the group log in.
2. Select <Apply>. Users in the group will be given access to the set items.

### If you want to register a user

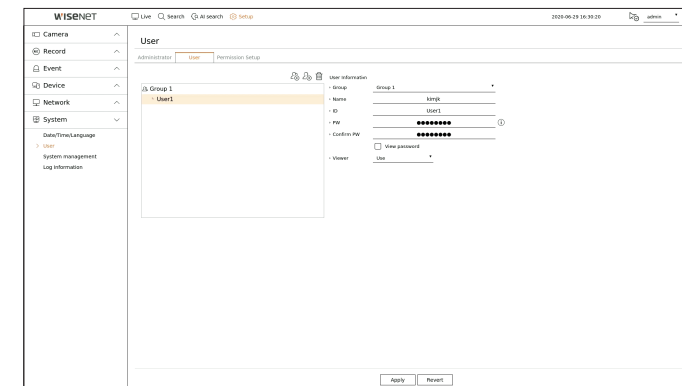

1. Click on the <Add> button to launch the user addition popup window. To add a user, click on <OK>.
2. Select a group. When registering a user, the selected group will be automatically registered.
  - You can change the group after entering all the user information.
3. Enter a name, ID and password (confirm password) and enable or disable the viewer option. If you activate use of <Viewer>, you will have the right to use the web viewer and the network viewer.
  - If <View password> is selected, the password will no longer be hidden on the screen when you type it.
4. Click <Apply>. Registered user information will be saved.


### When you want to delete the group and user information

1. Select the group or user to delete and press the <Delete> button.
2. The deletion confirmation window will appear and click on <OK>.

## Setting Permissions

Set user's restricted access or network restriction.  
Items with restrictions will require logging in for use.


### Setup > System > User > Permission Setup

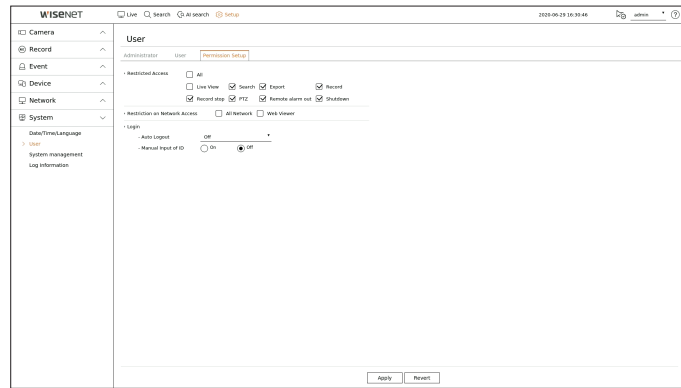

- Restricted access : You can set the menu to restrict the access for all users.
  - Checked (): Restricted
  - Not checked (): Accessible
    - If it is not checked () <Restricted Access>, any user can access the item no matter what the <Permission Setup>.
    - If it is checked () <Restricted Access>, a user can access the item only if the user has permission in <User>.
- Restriction on network access : Network set as "Restricted access" that can restrict all users' remote access.
  - All network : Set all users to be unable to access the network and the web viewer.
  - Web viewer : Set all users to be unable to access the web viewer.
- Auto Logout : A user will be automatically logged out if there is no operation on Recorder for over set period of time.
- Manual Input of ID : In the login window, select whether to enter ID.
  - On : Enter your ID manually each time you log in.
  - Off : The registered ID will be displayed in the login window.

## If the user has restricted access


If a general user selects a menu to which they do not have access, an access restriction confirmation window will be displayed. If all rights are restricted, only the accessible menu of the live screen menu will be displayed, and only the user's own password can be changed.

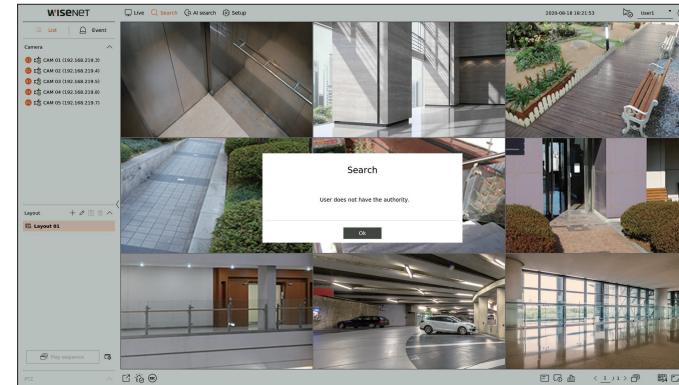

## To change the user password

If you log in with the user account of a group with restricted access, you just can change your own password.

### Setup > System > User

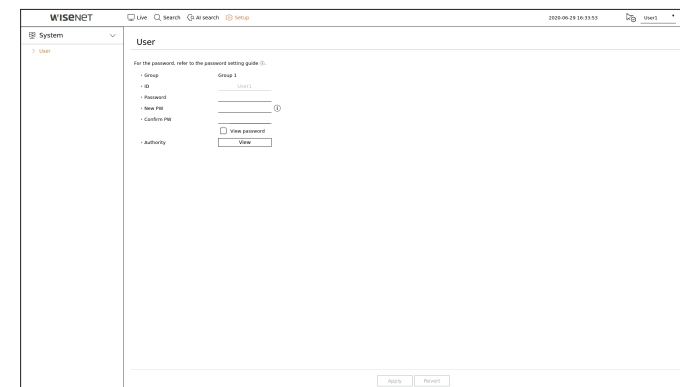

1. Provide the login information.
2. Select <User> in <System>.
3. Please enter your current PW.
4. Provide a new password. Enter the password you want to change in the password confirmation box again.
5. Select <Apply>.  
The old password will be changed to a new one.


## System Management

You can check the current system version and update to a new version, export data, setting initialization, and more.

### Checking the System information


You can check the current software version and MAC address before proceeding with the upgrade.

Setup > System > System management > System information

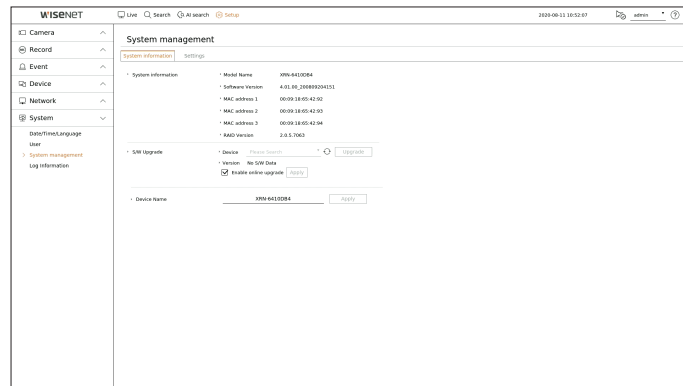

- System information : Shows the current system's information.
  - Model Name : Shows the model name of the product.
  - Software version : The software version of the product currently being used is displayed. You can check the software version and upgrade to the latest version.
  - MAC address : Shows the Mac address of the product.
  - RAID version : Displays the RAID version of the product.
- SW Upgrade : Updates the Recorder's software up to date.
  - Press the <↻> buttons to search for the software in the USB or on the network.
- Device Name : You can enter a device name for your product. To differentiate multiple storage devices in VMS, Device Manager, etc., it is recommended to enter a different device name for each device.

### To upgrade the current software version

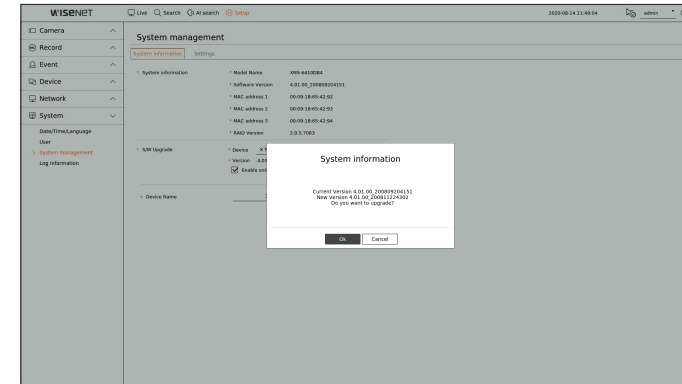


1. Connect a device storing the software to be updated.
  - It may take about 10 seconds to recognize the device.
  - Upgradeable devices include USB memory, and network device.
  - If you want to upgrade it on the network, the product should be connected to an external network. Upgrade via the proxy server may not be enabled due to the restricted access.
2. Select <System management> from <System> window.
3. Select <System information>.
4. When the recognized device appears, select <Upgrade>.
  - If you connect a device in the upgrade menu window, you can press the <↻> button to search for available software.
  - If there is an upgraded version on the network, a popup window will appear.
  - <Upgrade> will be activated only when there is a higher version than the current software version.
  - When online upgrade is enabled, you will receive a new firmware notification when your network is connected to your device. After enabling it, click the <Apply> button.
5. Press <OK> in the System Information window.
  - While updating, it shows the progress.
6. When the updating is done, it automatically restarts. Do not turn the power off until it finishes restarting.
  - If "Upgrade Failed" appears, retry from the step 4. When you experience continued failure, consult the service center for assistance.

## Settings

You can export the information set in the recorder to a storage device and apply the same information to other recorders.

### Setup > System > System management > Settings

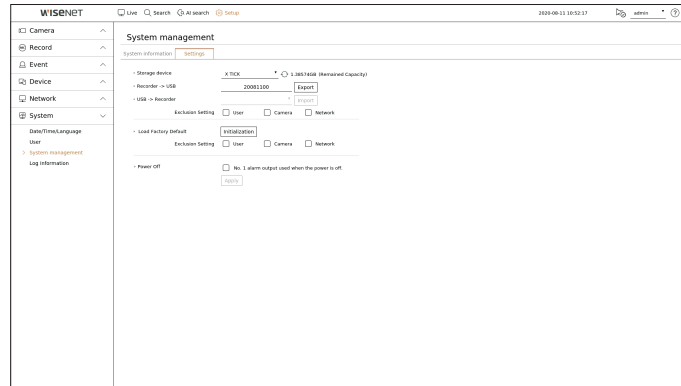

- Storage device : Shows the connected storage device.
    - Press the <↻> button to view the list of storage devices.
  - Recorder → USB : Save the information set in the recorder to a storage device.
    - If you select <Export>, a confirmation window will appear. If you select <OK>, the recorder information will be saved as a file.
  - USB → Recorder : Apply the setting information stored in the storage device to the recorder.
    - If you select the exclusion setting, you can import all information but the selected information.
    - If you select <Import>, you can recall the setting information stored in the storage device. Select <OK> to apply the loaded information to the storage device.
      - The <Export> and <Import> settings can be used in the same software version only.
  - Load factory default : Resets the product to its factory default settings. However, logs won't be reset. Anything selected under Exclusion Setting won't be part of the factory reset. A confirmation pop-up will appear when you press the <Initialization> button. Select the <OK> button to reset the selected items.
  - Power off : If the power is off, the first alarm is generated. Select the <No. 1 alarm output used when the power is off.> check box and click <Apply> to clear all alarms set for alarm output 1, and then selecting alarm 1 with another alarm out will not be possible.
    - This function is provided only for products that support alarm output.
    - If that function is set, the first alarm-out checkbox and all alarms in the alarm setup screen are deactivated, to Off.
- 📄
- If you export setup information, then the data will be saved as a file in the recorder folder of your storage device.
  - If you want to import setup information, you have to first make sure that the setup information file is located in the recorder folder of the storage device.


## Log Information

You can check the log information related to system, events, and export.

### Checking the system log

System Log shows log and timestamp on every system start up, system shutdown, and changes on system settings.

### Setup > System > Log Information > System log

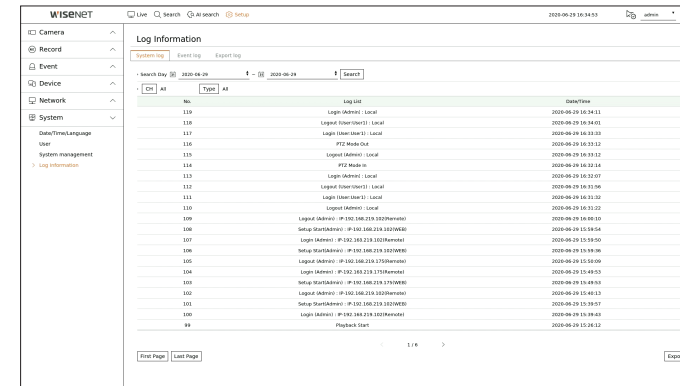

- Search day : Click the Calendar icon to display the calendar window, or use the direction buttons to specify the search period of the system log.
- Search : Specify the date and press this button to display the search result in the log list.
- CH : Select a channel to search.
- Type : When there are too many logs, you can display logs of the desired format by selecting the type. Select the desired type and click <Apply>.
- First page/Last page : Move to the first/last page when there are many search results.
- Export : Save all the logged information recorded in the Recorder into the storage media.

## Checking the event log

You can search recorded events including alarms, camera events and video loss. It also shows the log and its timestamp.

### Setup > System > Log Information > Event log

No.	User	Device	Date/Time
817	ADMIN	WISENET-CH 2	2020-06-29 16:24:23
818	ADMIN	WISENET-CH 2	2020-06-29 16:24:48
819	ADMIN	WISENET-CH 2	2020-06-29 16:24:59
820	ADMIN	WISENET-CH 2	2020-06-29 16:25:26
821	ADMIN	WISENET-CH 2	2020-06-29 16:24:30
822	ADMIN	WISENET-CH 2	2020-06-29 16:24:26
823	ADMIN	WISENET-CH 2	2020-06-29 16:24:46
824	ADMIN	WISENET-CH 2	2020-06-29 16:24:53
825	ADMIN	WISENET-CH 2	2020-06-29 16:23:49
826	ADMIN	WISENET-CH 2	2020-06-29 16:23:46
827	ADMIN	WISENET-CH 2	2020-06-29 16:23:11
828	ADMIN	WISENET-CH 2	2020-06-29 16:23:51
829	ADMIN	WISENET-CH 2	2020-06-29 16:23:46
830	ADMIN	WISENET-CH 2	2020-06-29 16:23:02
831	ADMIN	WISENET-CH 2	2020-06-29 16:23:23
832	ADMIN	WISENET-CH 2	2020-06-29 16:23:25
833	ADMIN	WISENET-CH 2	2020-06-29 16:23:42
834	ADMIN	WISENET-CH 2	2020-06-29 16:23:27
799	ADMIN	WISENET-CH 2	2020-06-29 16:23:04
798	ADMIN	WISENET-CH 2	2020-06-29 16:20:08
797	ADMIN	WISENET-CH 2	2020-06-29 16:20:40

- Search date : Select the date to search the event log by using the calendar window that appears when the calendar icon is selected or by using the arrow buttons.
- Search : Specify the date and press this button to display the search result in the log list.
- CH : Select a channel to search.
- Type : When there are too many logs, you can display logs of the desired format by selecting the type. Select the desired type and click <Apply>.
- First page/Last page : Move to the first/last page when there are many search results.
- Export : Save all the logged information recorded in the Recorder into the storage media.

## Checking the Export Log

You can search the user who performed the export and the execution time and details (time, channel, device, file type).


### Setup > System > Log Information > Export log

No.	User	Date/Time
2	ADMIN	2020-06-11 13:13:18
2	ADMIN	2020-06-11 21:27:25
1	ADMIN	2020-06-11 21:26:19

- Search day : Select the date to search the export log by using the calendar window that appears when the calendar icon is selected or by using the arrow buttons.
- Search : Specify the date and press this button to display the search result in the log list.
- First Page/Last Page : Move to the first/last page when there are many search results.

## WHAT IS WEB VIEWER?

Web Viewer is a software program with which the operator can access a remote Recorder for real-time monitoring, PTZ control (if configured) or search.

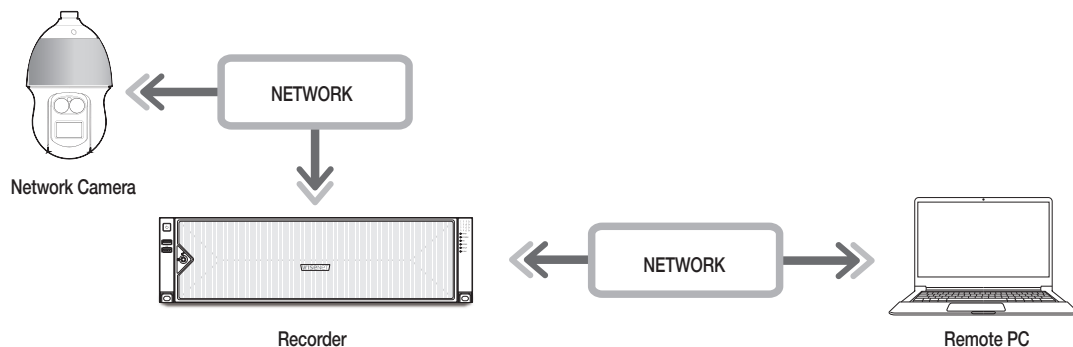

## Product Features

- Remote connection using the browser
- PTZ camera control enabled
- Split mode supported
  - 2-split vertical, 2-split horizontal, 3-split, 4-split, 6-split, 1+5-split, 1+7-split, 9-split
- ✎ Depending on the number of channels supported by the product, the number of screen split modes may vary.
- Takes a screenshot and saves images in PNG format
- Record video in AVI format-compatible with popular media players. (The integrated codec is needed)

## System Requirements

The following lists the minimum suggested hardware and operating system requirements needed to run the Web Viewer.

- Recommended browser : Edge, Chrome
- Supported browsers : Chrome, Edge, and Safari
- Supported OS : Works on all of the Windows, Linux, and OS X environments given the platform-independent nature of the web.
- Tested environments : Tested and certified to run on Windows® 10 with Edge 83, Google Chrome™ 83 and Intel® Core™ i7-7700 processor 3.60 Ghz with NVIDIA® GeForce® GTX™ 1050 or Intel™ HD Graphics 630.
- Performance restrictions : The performance of users' CPU/GPU may impact the video playback performance of the web viewer.

## CONNECTING WEB VIEWER

1. Open your web browser and type the IP address or URL of Recorder into the URL address box.
2. A user with the admin permissions should provide the admin ID and password. A registered user should provide the user ID and password.

The screenshot shows a 'Sign in' page for a web viewer. The URL is 'http://192.168.219.193'. A warning message states 'Your connection to this site is not private'. There are input fields for 'Username' and 'Password', and 'Sign in' and 'Cancel' buttons.

3. After you log in, the Live Viewer main screen appears.


- ! All settings are applied according to the Recorder settings.
- When an initial password is entered, while partially resetting to access a web viewer, a pop up window will appear that will guide the user to change the password and when doing a whole reset to access a web viewer, a pop up window will appear that will guide the user to complete the settings for the Install Wizard. Set a new password when a pop up window appears.
- If you change the web port when connecting to the Webviewer, you may fail to access since the applicable port is blocked. In this case, change the port to a different port.
- Please change your password every three months to safely protect personal information and to prevent the damage of the information theft. Please, take note that it's a user's responsibility for the security and any other problems caused by mismanaging a password.
- ✎ It allows up to 10 simultaneous access including the admin and general users.
- Password of the admin and general users can be changed in <User> menu of the Recorder.
- Normal users should have set <Web Viewer> under <Restriction on Network Access> to Use before connecting to the Web Viewer. For details, refer to the "Setup > Setting the System > User" page in the Table of Contents.
- All settings are applied according to the Recorder settings.

# starting web viewer


## INSTALL WIZARD

As shown below, proceed through each step of the <Install Wizard>.

Install Wizard can only be accessed at factory reset. If you do not want to proceed, click <Exit>.


 ■ When you complete installation using the install wizard on your recorder, the install wizard will not appear on your web viewer.


1. In the <Language> screen, select the language and press the <Next> button.

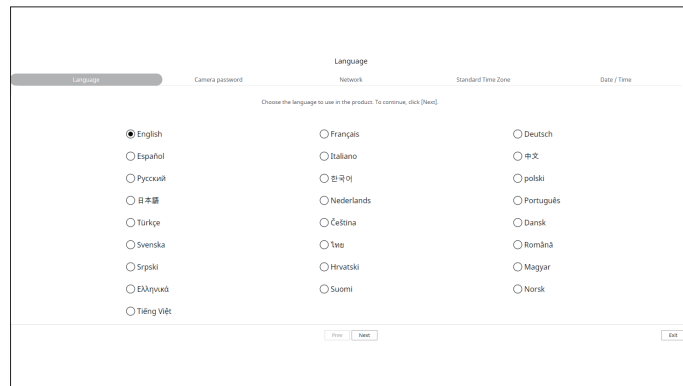


2. Set the camera password in factory reset on the <Camera password> screen.

If ID/PW is already set in the camera, register the ID/PW and click <Next>.

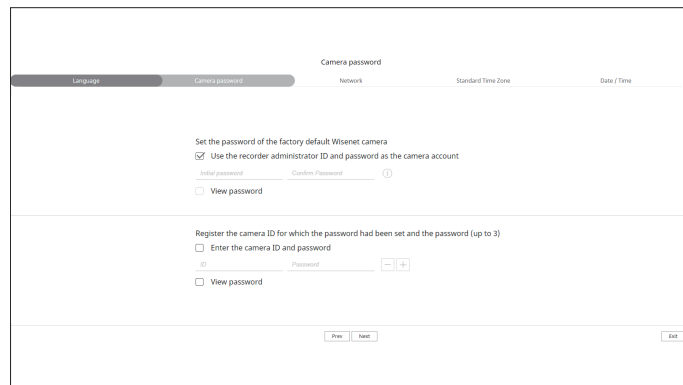


-  ■ When the password is in factory reset, it can be changed and managed in a batch.
- Up to 3 sets of camera ID with password and password can be registered.
  - You cannot change the password for cameras registered with ONVIF and RTSP.

3. Set the network connection type and the connection environment on the <Network> screen, and then click the <Next> button.

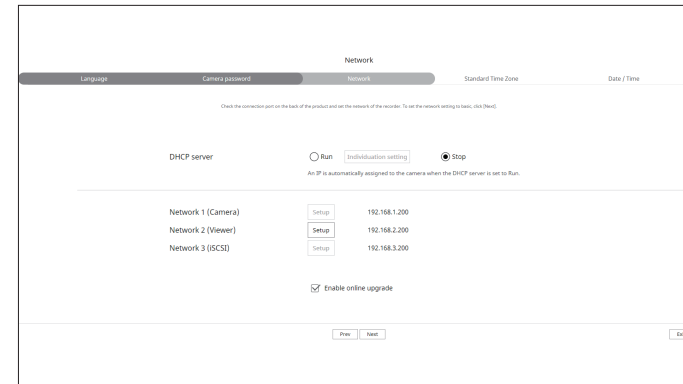


 ■ For details on network settings, refer to the "Getting Started > Install Wizard" page in the Table of Contents.

4. Set the standard time zone and daylight saving time on the <Standard Time Zone> screen, and then click <Next>.

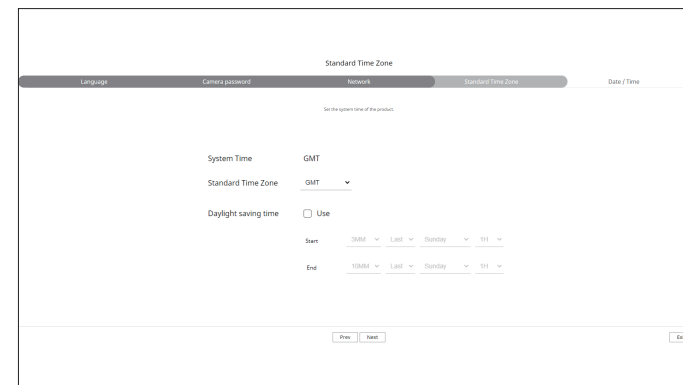

5. To modify the date and time on the <Date/Time> screen, select the <Modify> check box. Set the date and time, and then click <Next>.

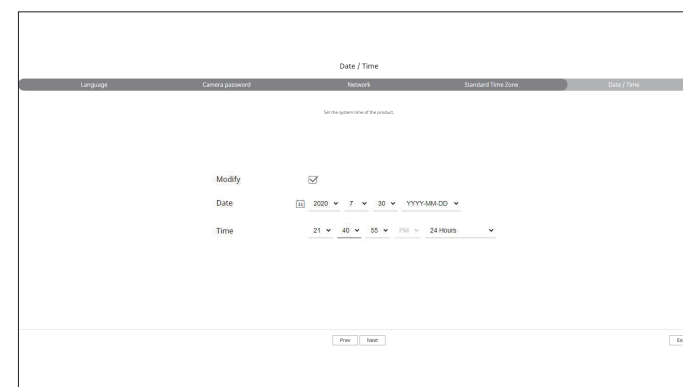


6. Click the <Next> button to complete the Install Wizard.








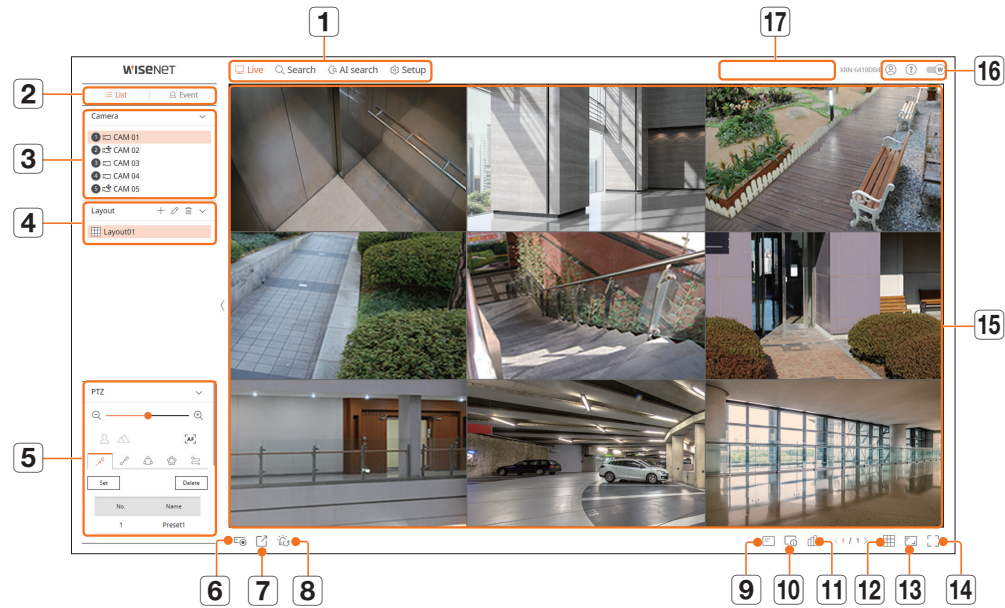






You can check the video from camera registered in the Recorder connected from a remote PC. Also, you can adjust the camera and check the network transfer status.

## SCREEN LAYOUT OF THE LIVE VIEWER



Menu	Description
<b>1</b>	<b>Menu</b> Click each menu to go to the corresponding menu screen.
<b>2</b>	<b>Select list of device/event</b> Select to check the camera/event list.
<b>3</b>	<b>Device List</b> The list of cameras registered in the recorder is displayed.
	<b>Event list</b> Shows a list of events that occurred on the device.
<b>4</b>	<b>Layout list</b> Displays the default layout and a list of created layouts.
<b>5</b>	<b>PTZ Control</b> Controls the connected PTZ camera.

Menu	Description
<b>6</b>	 Enables the Manual recording function of the recorder.
<b>7</b>	 Saves the video saved in the set time of the selected channel in PC in AVI format.
<b>8</b>	 Clears the alarm in the event list and stops the alarm at the notification display of the system status.
<b>9</b>	 Displays the information on the OSD screen in the video window.
<b>10</b>	 Shows the selected Channel Information.
<b>11</b>	 Shows the status of all cameras connected to the recorder.
<b>12</b>	 Sets the split screen of the video window.
<b>13</b>	 Shows the video in actual proportions.
<b>14</b>	 It changes to full screen from the current Split Mode. To exit full screen, press the <b>[ESC]</b> key on your keyboard. ▪ MAC Safari does not support full screen.
<b>15</b>	<b>Video window</b> Shows the video of the camera connected to the recorder.
	 The ID of the connected user is displayed.
	 You are directly connected to the Hanwha Techwin homepage ( <a href="http://www.hanwha-security.com">www.hanwha-security.com</a> ).
<b>16</b>	 Changes the color theme of Web Viewer.
	<b>17</b>

## CHECKING THE SYSTEM STATUS


The icon at the top of the screen indicates the status of the system.

Name	Description
	<ul style="list-style-type: none"> <li>Displayed when a problem occurs with the pan or recording status.</li> <li>Displayed when an error occurs in the power supply.</li> <li>Displayed when the amount of input data by channel exceeds the set amount of data limit.</li> </ul>
	<ul style="list-style-type: none"> <li>Displayed when the hard disk is full during recording and the recording capacity is insufficient.</li> <li>Displayed when the hard disk does not exist or needs to be replaced.</li> <li>Displayed when there is an abnormality in RAID or cannot be used.</li> <li>Displayed when RAID is being rebuilt.</li> <li>Displayed when an error occurs in the iSCSI device connection.</li> </ul>
	<ul style="list-style-type: none"> <li>Displayed when network overload occurs.                             <ul style="list-style-type: none"> <li>It occurs in case of excessive CPU load because the reception performance is exceeded. It disappears when you modify the Delete Camera or Set Camera to reduce the data rate.</li> <li>Limit the number of users remotely monitored by Web Viewer or VMS, or control the number of channels played by remote or recorder.</li> </ul> </li> </ul>
	<ul style="list-style-type: none"> <li>Displayed if the server has firmware to update.</li> </ul>

## CHECKING USER ID

Displays the user ID and authority for the user connected to Web Viewer.  
Click **<Logout>** to log out the logged-in user.


- If you are logged in with an admin account, the authority setting window will not be displayed.

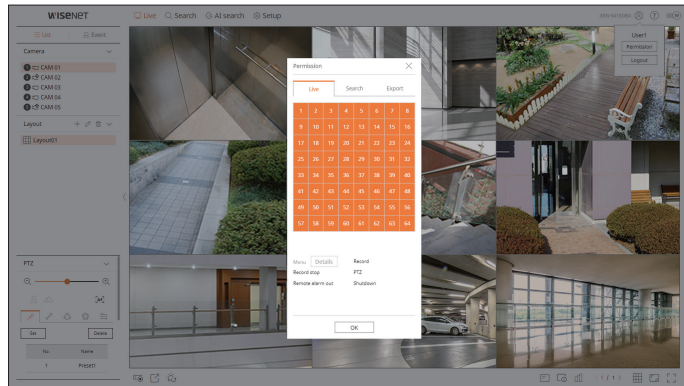

## CHECKING CAMERA LIST

Displays the camera type, status, and name registered in the recorder.

Live > List

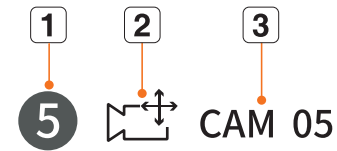


Name	Description
<b>1</b> Channel information	Displays channel information (channel number, video window assignment, and color indication).
<b>2</b> Camera type	Displays a normal camera.
	Displays a PTZ camera.
Camera status	Displays the camera error status.
<b>3</b> Camera name	Displays the name set for the camera.

- If a camera connection error occurs, it is disabled in the list.
- The camera status display information changes according to the network connection status and settings.


## CHECKING THE ALL CAMERA STATUS

You can check the status of all cameras connected to the recorder.

### Live Status

Click the  > button. You can check the status and transmission information of the camera connected to each channel.

- To change the profile setup, click the <Camera setup> button. For details on how to set up the profile, refer to the "Setup > Setting the Camera > Setting the Profiles" page in the Table of Contents.

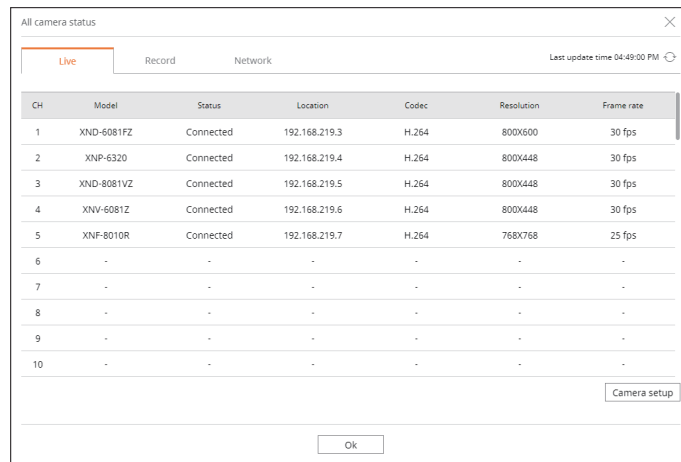


CH	Model	Status	Location	Codec	Resolution	Frame rate
1	XND-6081FZ	Connected	192.168.219.3	H.264	800X600	30 fps
2	XNP-6320	Connected	192.168.219.4	H.264	800X448	30 fps
3	XND-8081VZ	Connected	192.168.219.5	H.264	800X448	30 fps
4	XNV-6081Z	Connected	192.168.219.6	H.264	800X448	30 fps
5	XNF-8010R	Connected	192.168.219.7	H.264	768X768	25 fps
6	-	-	-	-	-	-
7	-	-	-	-	-	-
8	-	-	-	-	-	-
9	-	-	-	-	-	-
10	-	-	-	-	-	-

### Record Status

Click the  > button, followed by the <Record> tab.

You can check the profile, recording type, input/recording rate, and setting/input/recorded data rate by channel.

- Use <Current  Max> to check the current recording status and maximum recording setting value.
- To change the profile setup, click the <Record Setup> button.

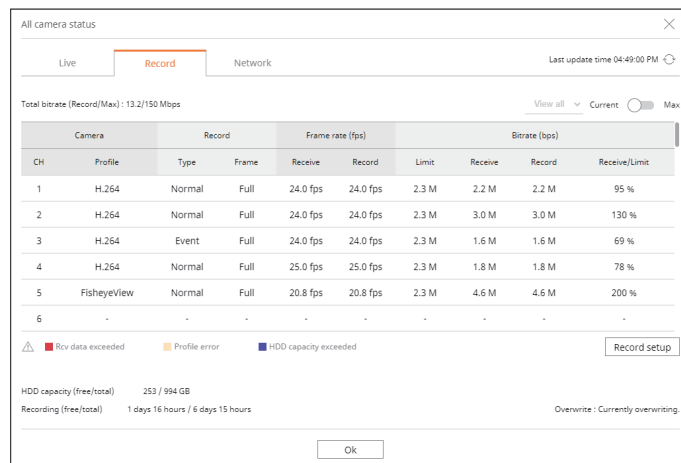


CH	Camera	Record		Frame rate (fps)			Bitrate (bps)		
		Profile	Type	Frame	Receive	Record	Limit	Receive	Record
1	H.264	Normal	Full	24.0 fps	24.0 fps	2.3 M	2.2 M	2.2 M	95 %
2	H.264	Normal	Full	24.0 fps	24.0 fps	2.3 M	3.0 M	3.0 M	130 %
3	H.264	Event	Full	24.0 fps	24.0 fps	2.3 M	1.6 M	1.6 M	69 %
4	H.264	Normal	Full	25.0 fps	25.0 fps	2.3 M	1.8 M	1.8 M	78 %
5	FisheyeView	Normal	Full	20.8 fps	20.8 fps	2.3 M	4.6 M	4.6 M	200 %
6	-	-	-	-	-	-	-	-	-

## Network Status


Click the  > button, followed by the <Network> tab.

You can check the status of network bandwidth currently being received/transmitted.

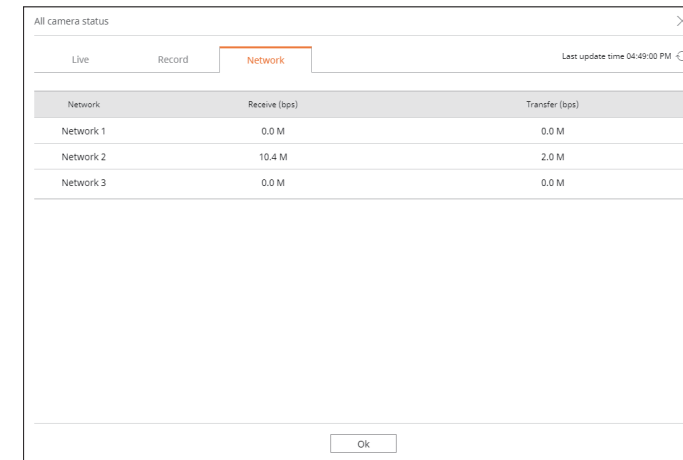


Network	Receive (bps)	Transfer (bps)
Network 1	0.0 M	0.0 M
Network 2	10.4 M	2.0 M
Network 3	0.0 M	0.0 M

## CHANGING THE PATTERN OF SPLIT SCREEN


Click the  > button and select the desired split screen.


The selected split screen is applied to the video window.

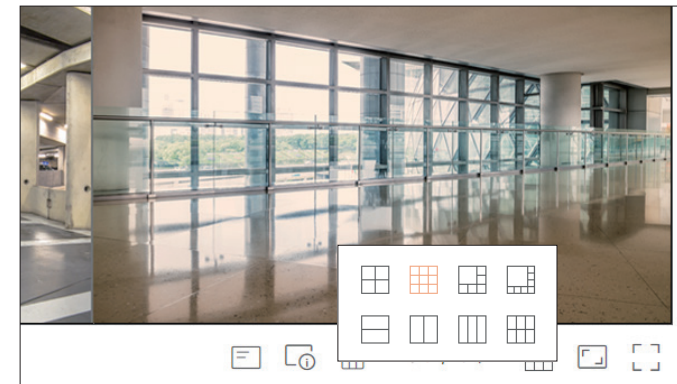


## CHANGING OVERALL CHANNEL ASPECT RATIO

Video screen ratio for all channels can be changed in live split screen mode.

Click <  > at the bottom of the screen. It changes to the actual proportion of the video.

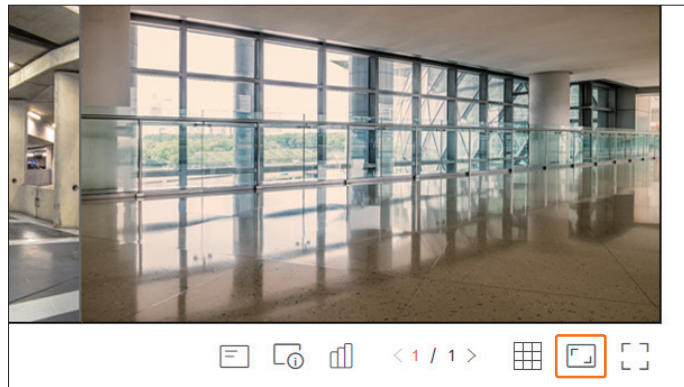



If you want to go back to the previous screen ratio, click <  > again.

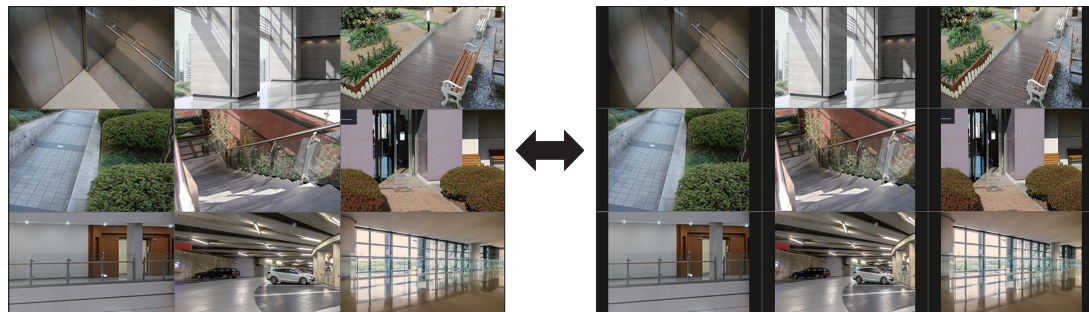


## FULL SCREEN MODE

You can change to full screen mode, which has no top/bottom/left/right areas of the live screen.

Click <  > at the bottom of the screen.

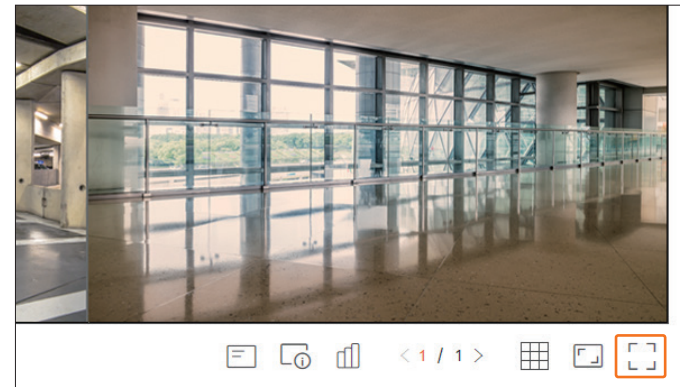

To exit the full screen, press the **[ESC]** key on the keyboard or click <  > at the bottom of the full screen mode.

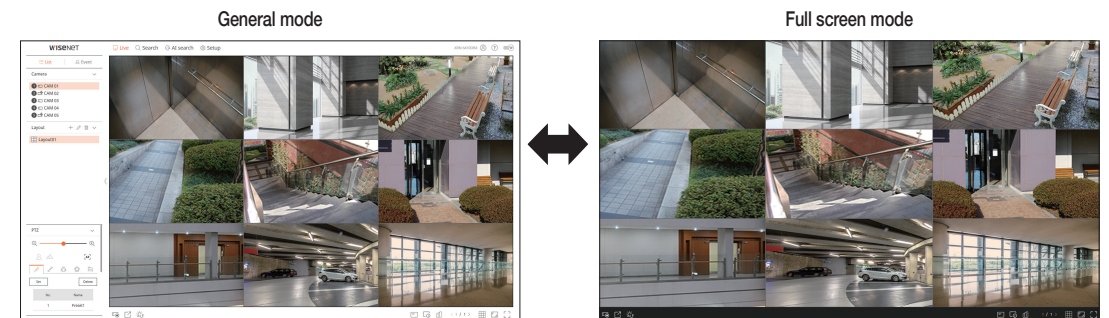


## SETTING UP THE LIVE LAYOUT

This section outlines how to select a series of channels based on their purpose/accessibility and monitor them in a single layout.

Live > List

### Check Layout List

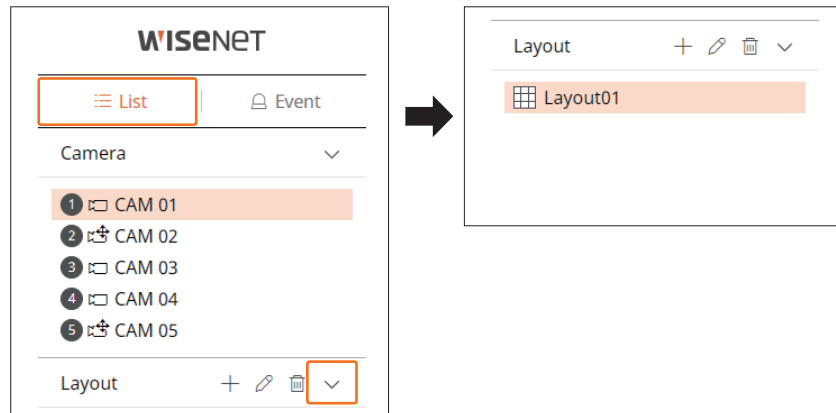

- + : Create a new layout.
- ✎ : Change the channel or name of the layout.
- 📄 : Save the changed layout.
- 🗑️ : Delete the added layout.
- ^ / v : Open or close the layout list.

### Add Layout and Set Name

1. Click the < + > button.
2. Set the name of the layout.
3. Double-click a channel to display on the layout screen from the device list.
4. Click < 📄 > to save the set layout.

- ✎ : The default layout of the live viewer consists of a 4-split screen.
- Each layout is saved separately by the user.

## Change of Layout Channel and Name

1. Click < ✎ > after selecting a layout.
2. Add or delete channels or rename layouts.
3. Click < 📄 > to save the changed settings.

## Delete Layout

Click < 🗑️ > after selecting the layout to delete.

## REAL-TIME EVENT MONITORING


Real-time events that occurred on the device can be checked in the live video window and event list.

- AI browse events are only available for products that support AI.


Live > Event

### Event Type and Camera Settings

Set the event type and camera to be displayed in the event list.

To search for a specific event, click <  > to select the event type and camera to browse.

- Event : Displays only selected events in the event list.
  - Common event : Searches for event types that have occurred in general cameras such as motion detection and IVA.
  - AI event : Searches for AI event types such as face, person, and vehicle.
- Camera : Displays events for the selected camera only.

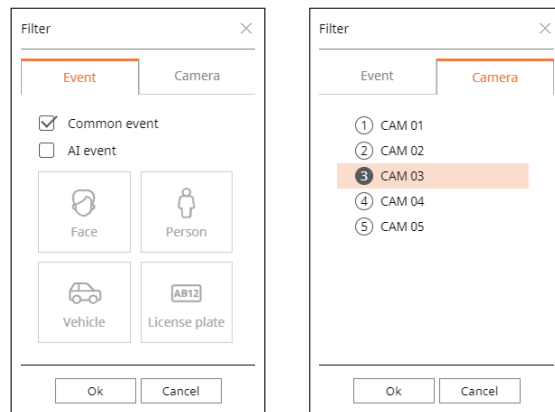




- The Safari browser does not support this feature.

## Check Event List

When new events occur, the list of events will be updated accordingly.

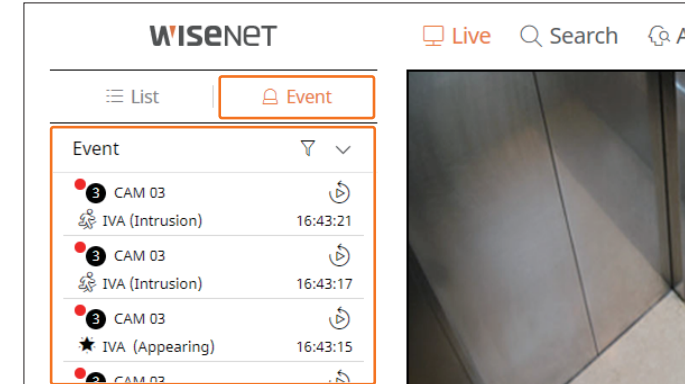- The specified channels and events are displayed in the list according to the event rule setup. For details, refer to the "Setup > Setting the Event > Event rule setup" page in the Table of Contents.




-  : Select the event type and camera.
-  : Open or close the Event list.

## Event Instant Viewer

Select an event to check from the event list, and click < ⏮ > to play the recorded video at the time the event occurred.

- Instant viewer can play an event video for 1 minute.
- For AI events, the best shot and details of the event that occurred are displayed.
- AI event recognition is only available when connected to a Wisenet AI camera. To enable the AI function, set the "Object detection" function in "Setup > Event > Event setup".

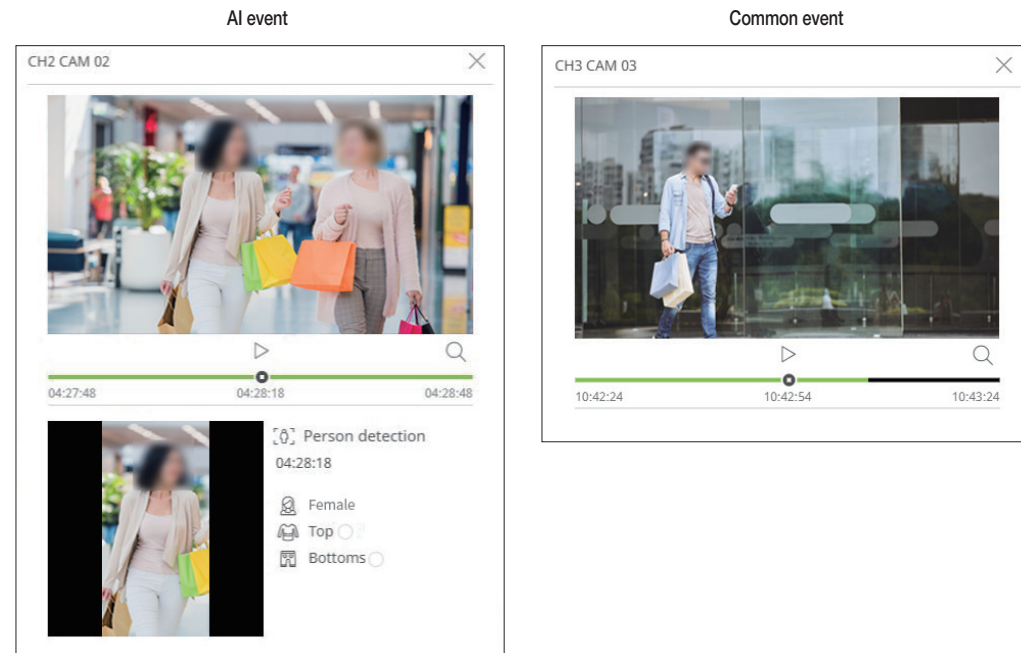

- ▶/|| : The video is played/stopped.
- 🔍 : Moves to the Search menu.
- ✕ : Instant Viewer playback ends.

## Stop Alarm Output


When an event occurs, an alarm can occur. Click < 🔔 > at the bottom of the screen to stop the alarm output if necessary.

For details, refer to the "Setup > Setting the Event > Event rule setup" page in the Table of Contents.

## LIVE SCREEN MENU

After selecting the desired channel on the split mode, roll the mouse cursor over the screen to see the live screen menu. The live screen menu appears differently depending on the recorder operation status or the type of the registered camera.

- Each function may be restricted depending on the type of camera and the user's authority.

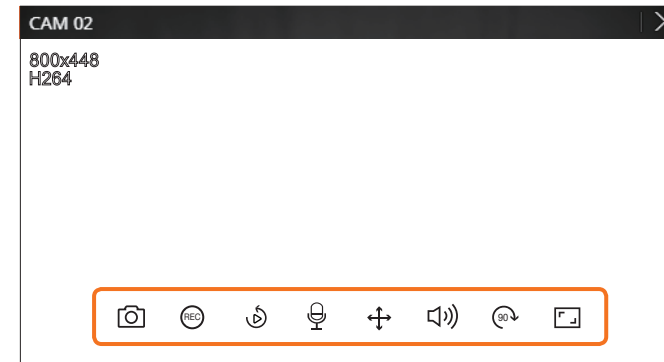

Menu	Description	
	<b>Capture</b>	You can take a screenshot of the selected channel.
	<b>PC REC</b>	Images can be saved on a PC.
	<b>Instant viewer</b>	During monitoring, you can rewind 1 minute before playback.
	<b>Microphone</b>	Turns the microphone on or off on your PC.
	<b>PTZ</b>	If the network camera connected to the selected channel supports the PTZ function, it changes to the PTZ control mode.
	<b>Audio</b>	Turns the audio on or off when the audio is connected.
	<b>Video rotation</b>	Rotates the video to display.
	<b>Channel aspect ratio</b>	Shows the video in actual proportions.

## CAMERA VIDEO CONTROL

By using the function icon in the video window, you can easily enable functions such as screenshot, video rotation, and PTZ control.

### Capture

Select a channel to capture video and click the < [camera icon] > button.  
The captured image is saved as .png file in the download folder.

### PC Recording


You can record video on your PC while monitoring.

1. Select the desired channel and click the < [REC] > button to start PC recording.
2. To end the PC recording, click the < [REC] > button.  
The recording ends, and the recorded video is saved as .avi file in the download folder.

### Instant Viewer

During monitoring, you can rewind 1 minute before playback.

Select the desired channel and click < [rewind icon] >.  
The Instant Viewer screen appears.

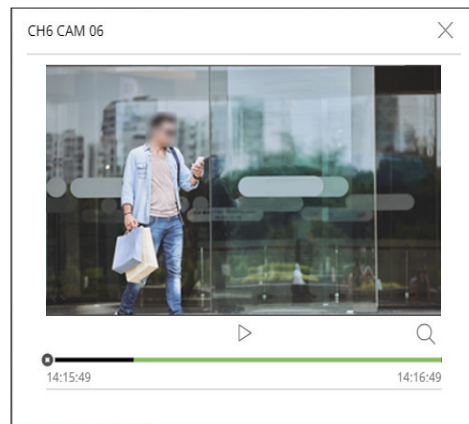

- [play/pause icon]: The video is played/stopped.
- [search icon]: Moves to the playback screen.
- [close icon]: Instant Viewer playback ends.

### Microphone Output

You can turn the microphone of the selected channel on or off in the live screen.

Select the desired channel and click < [microphone icon] >.


## PTZ Mode

You can run PTZ control of the selected channel.

Select the desired channel and click < [PTZ icon] >.

Enters the PTZ control mode.

- [PTZ icon] : Depending on the camera, the PTZ control function and speed may be different.

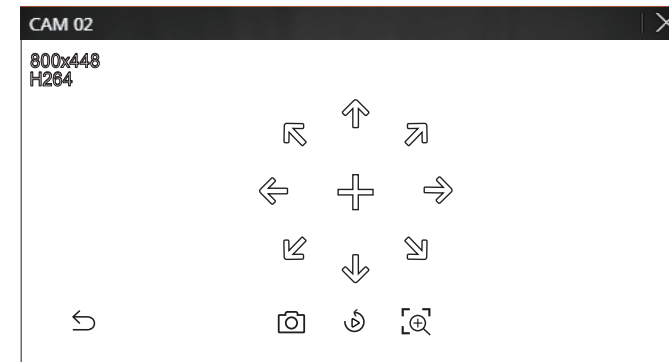

- [left arrow icon]: The PTZ mode is closed.
- [camera icon]: Captures video of the current state.
- [refresh/undo icon]: Go to the instant viewer.
- [zoom-in icon]: Click the Digital zoom icon and use the mouse wheel to zoom in or out on the video.  
Digital zoom ends when the video screen is reduced to the original size.

### Adjusting the Camera Direction

When you rolls over the mouse to < [crosshair icon] >, the 8-way key appears, and when the mouse leaves the area of the direction key, the direction key disappears. You can fine-tune the camera direction by clicking the 8-direction key once. Keep clicking the arrow keys to move in the desired direction and release the mouse to stop.

To quickly adjust the direction of the camera, click < [crosshair icon] > and drag. The screen moves quickly in the desired direction. You can adjust the screen movement speed according to the drag distance.



## Performing Digital Zoom

You can zoom in or out using the mouse wheel.

If you scroll up using the mouse wheel, the selected video screen is enlarged by 10%, and a thumbnail window is displayed.

- Scrolling up/down using the mouse wheel will zoom in/out the video screen by 10%.
- Digital zoom ends when the video screen is reduced to the original size.
- In PTZ mode, click the < [⊕] > button to run digital zoom.



## Audio Out

You can turn the sound on/off corresponding to the channel in Live mode.

Select the desired channel and click < [🔊] >.

Audio output can only be turned on in one channel. The audio output of other channels will be automatically turned off.

- If you have configured the audio output settings properly but the audio or voice is not output, check if the connected network camera supports the sound signal and if you have configured the sound settings as appropriate. The sound icon can be displayed if the sound signal fails to output from noise.
- Only the channel where <Audio> is set to <ON> in "Setup > Camera > Channel setup" displays the audio icon ([🔊]) in Live mode that you can use to turn the sound on/off.

## Video Rotation

You can rotate the live video screen.

Select the desired channel and click < [↻] >.

Each click of the button will rotate the video 90 degrees clockwise.

## Channel Aspect Ratio

You can change the aspect ratio of each channel.


Select the desired channel and click < [⊞] >.

It changes to the actual proportion of the video.

## PTZ CONTROL

### PTZ Control Menu

If the connected network camera is a PTZ camera, the < [📏] > icon is displayed in the camera list. When the camera channel is selected, you can control the PTZ.

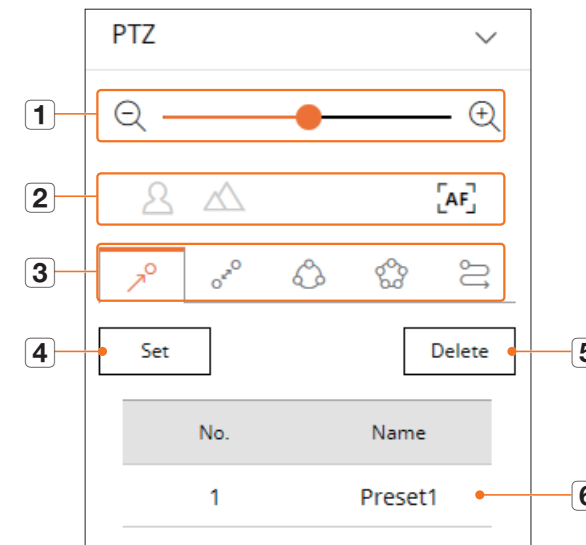

	Name	Description
1	[📏]	Zoom out/Zoom in Activate the Zoom operation of the PTZ camera.
2	[👤]	Short distance/Long distance You can adjust the focus manually.
	[AF]	Auto focus You can adjust the focus automatically.
3	[📍]	Preset Set the preset position to move the camera, and then select the desired preset to move to the set position.
	[↔️]	Swing Swing is a monitoring function that moves between two preset points and enables you to trace the motion.
	[👥]	Group The group function enables you to group various presets before calling them in sequence.
	[🔄]	Tour Monitor all the groups created by a user in turn.
	[📄]	Trace Tracking remembers the trace of movements that you instructed and reproduces it for your reference.
4	Set	The preset you set is saved and displayed in the list.
5	Delete	Deletes the selected preset list.
6	Preset List	Shows a list of saved presets.

## Using Digital PTZ (D-PTZ) function


1. Register a camera that supports the D-PTZ profile.
  - In cameras that support the D-PTZ profile, you can use the D-PTZ function.
2. Both cameras that support general PTZ and cameras that support D-PTZ can control the live image using some of the <PTZ control> function menus.
  - For more information about the supported functions, please refer to the camera manual.

## Preset


Preset is a set of saved data specifying the locations of a PTZ camera. A single PTZ camera can save up to 300 locations.

### To add a preset

1. Select the desired channel and click <⌕>.
  - The PTZ control screen appears.
2. Use the arrow keys to adjust the camera to the point.
3. Click <⌕>.
4. If you click <Set>, the "Preset setup" window will appear.

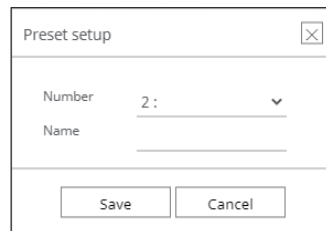

5. Click <2: > to select the Preset Order to set.
6. Enter the Preset name.
7. Click <Save>.
  - The preset setting will be saved.

 ▪ If you replace a camera that saves your preset settings with a different one, you must configure the preset settings again.

### To delete a registered preset

1. Click <⌕>.
2. Select the preset to delete, and click <Delete>.
  - The selected preset will be deleted.

## Running Preset

1. Click <⌕>.
2. Double-click the preset you want to run from the list.
  - The camera lens moves to the set position.

## Running Swing (auto pan), Group (scan), Tour, or Trace (pattern)


The running method of each function is the same as the preset operation method. For details on how to use it, refer to the camera's user manual.

 ▪ Depending on the camera's capabilities, only some features may be available.

## EXPORTING VIDEO

You can export the recorded video by manually inputting the desired channel, date, and time.

1. Click the <⌕> button.

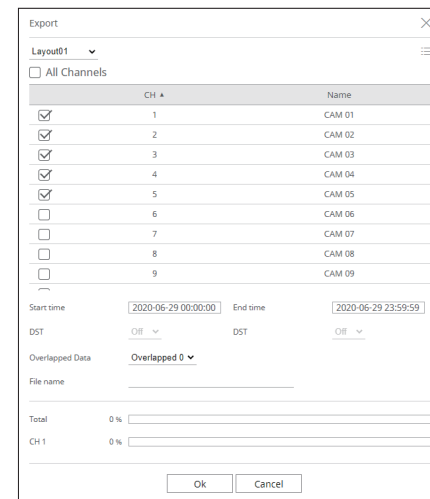





2. Select a layout to export and select the desired channel.
3. Set the start date/time and end date/time.
  - After setting whether to enable DST, select the time overlap data.
4. Enter a file name to save, and then click the <OK> button.
5. When the export is complete, a confirmation window appears.
  - The exported video is saved as .avi file in the download folder.







# search viewer

You can search and play the recorded video stored in the recorder by connecting the recorder remotely.

## SCREEN LAYOUT OF THE SEARCH VIEWER




Name	Description
1	<b>Menu</b> Click each menu to go to the corresponding menu screen.
2	<b>Search menu tab</b> Shows detailed search menu.
3	<b>Select channel</b> Displays the search channels.
4	 Saves the current video of the selected channel in the specified path.
	 Turns on/off the audio connected to each channel.
	 The screen of the selected channel is rotated 90 degrees clockwise.
	 Shows the video in actual proportions.

Name	Description
5	 Turns on/off the section setup.
6	 Saves the video of the selected channel in the designated path in AVI format.
7	<b>Calendar</b> The date of the recorded video is displayed in orange, and the current date is displayed in a orange circle. Click the date in orange to view the recorded video information on the time line.
8	<b>Play adjustment</b> Select a search result to open the play screen for that data.
9	 It changes to full screen from the current Split Mode. To exit full screen, press the [ESC] key on your keyboard. ■ MAC Safari does not support full screen.
10	 Shows the status of all cameras connected to the recorder.
11	 Displays the information on the OSD screen in the video window.
12	<b>Event list</b> Displays an Event list.
13	 Exports the Event list to a file.

## TIME SEARCH

You can search the recorded data by the desired date and time conditions.


- The time displayed will be based on the time zone and daylight saving time (DST) applied time zone, so it may be displayed differently depending on whether the data time zone recorded at the same time and daylight saving time (DST) is applied.

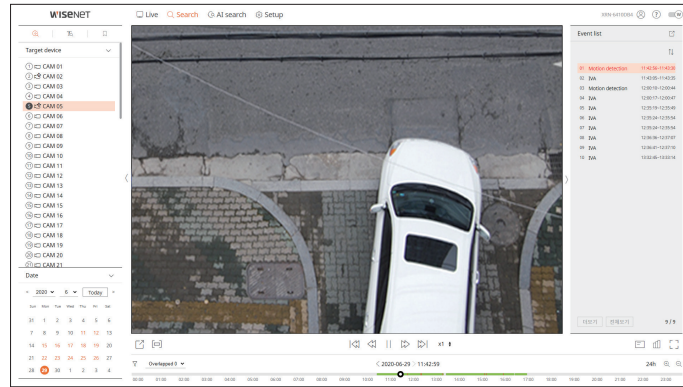

- Select <🔍> in the <Search> menu.
- Select a channel to search.
- Select the year and month to search.  
Dates with data will be shown in orange and current dates will be shown in orange circles.
- Select a date to search from the calendar.  
The first video of the searched data of the day will be displayed in the video window and the data will be displayed in the time line.
  - Click <Today> to search for today's date. Today's date will be selected.
  - The displayed color differs depending on the type of recording data.
    - Light green : Normal recording video
    - Red : Event video
  - 🔍 : You can filter the event items to view the time line.
  - Overlapped : You may check the timeline by setting the overlapping section caused by time change.
  - The search results will be displayed in the event list. Click the desired event list to play.

## TEXT SEARCH


You can search the data input to the POS device connected to the recorder.

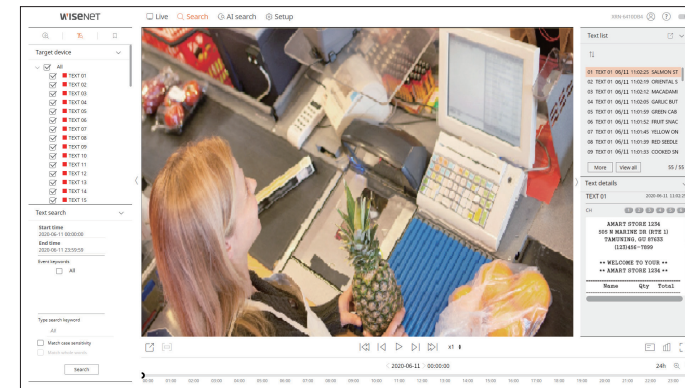


- Select <🔍> in the <Search> menu.
- Select a POS device to search.
- Select the date and time to search.
- Set the event keywords and search condition.
  - Event keywords : You can search for text with preset event keywords. For details, refer to the "Setup > Setting the Device > Text" page in the Table of Contents.
  - Type search keyword : Enter the text you want to search.
  - Match case sensitivity : Searches are case-sensitive when checking.
  - Match whole words : Searches for data that exactly matches the characters entered.
- Click the <Search> button.  
The search results will be displayed in the text list. if you select the desired list, you can check the recorded video and details.


## BOOKMARK SEARCH

You can search for bookmarked data.

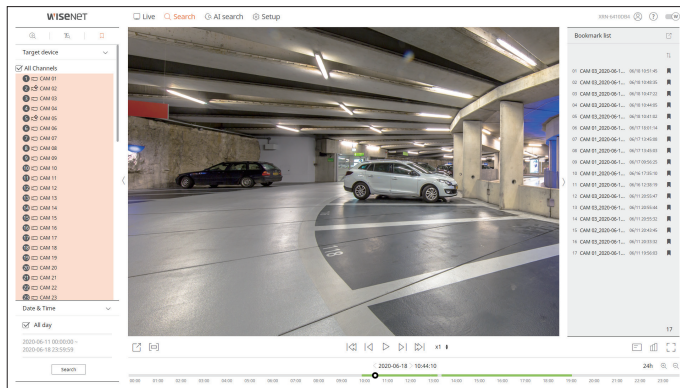

1. Select  in the **<Search>** menu.
2. Select a channel to search.
3. Select the date and time to search.
4. Click the **<Search>** button.

The bookmark search results will be displayed. Click the desired bookmark list to play.


-  Bookmarked images will be stored without being overwritten during repeated recording. However, when the automatic deletion is set, it will be deleted according to the set period.
- When the bookmark is released, the video will not be saved. If necessary, before releasing the bookmark, export the video.
- Up to 100 bookmarks can be specified.

## SEARCH RESULTS EXPORT

Search results of events, texts and bookmarks can be exported to a file.

Example) Bookmark search result export

1. Click  in the search results list.

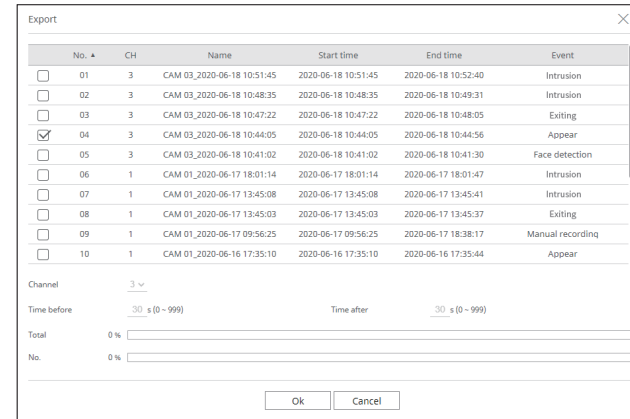


2. Select the desired list and click **<OK>**.



- The exported video is saved as .avi file in the download folder.


# AI search viewer

If there is AI data recorded by the camera, you can search for images in various conditions such as people, faces, and vehicles.
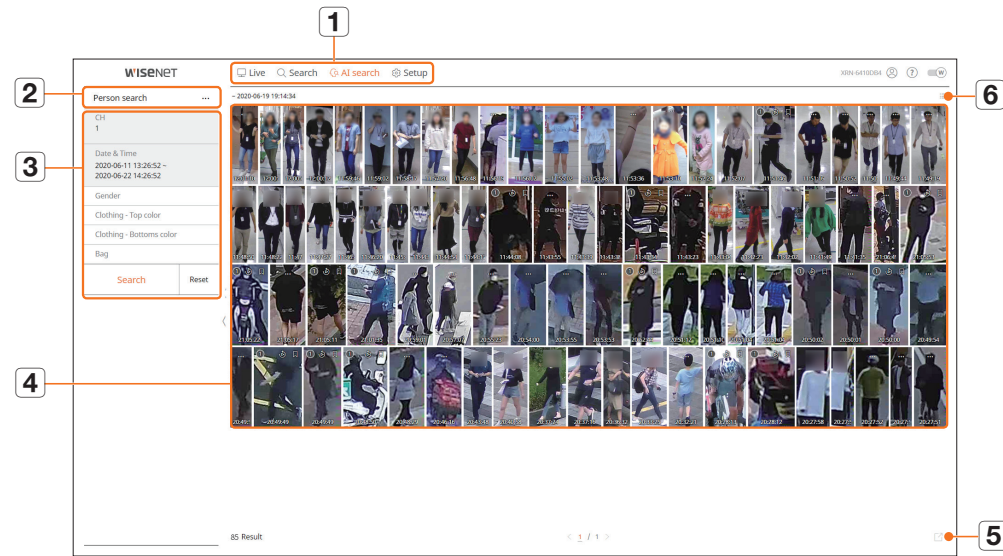
## SCREEN LAYOUT OF THE AI SEARCH VIEWER




Name	Description
<b>1</b>	<b>Menu</b> Click each menu to go to the corresponding menu screen.
<b>2</b>	<b>Search menu tab</b> Click the menu tab to display the detailed search menu. Click Search menu to go to the corresponding Search screen.
<b>3</b>	<b>Search conditions</b> You can set various search conditions, such as date/time/gender.
<b>4</b>	<b>Search results</b> Displays search results
<b>5</b>	 Exports search results to a file.
<b>6</b>	 Displays the search results as a list or thumbnail.

- Click **<Reset>** to initialize the search conditions and results.
- You can specify a bookmark by clicking the bookmark () in the search results list. You can check the specified video in the bookmark search menu.

## PERSON SEARCH


In the recorded data, you can search for a person by any condition you want, such as gender, top/bottom color.

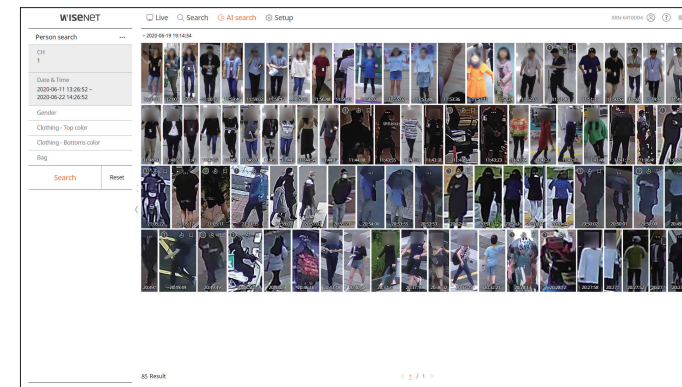

- Select **<Person search>** in the **<AI search>** menu.
- Select a channel to search.
- Select the date and time to search.
- Select a detailed search option.
  - Person search options : **Gender, Clothing-Top color, Clothing-Bottoms color, Bag**
    - Click the option to display the option selection window. Select the desired search option.
    - If no details are set, all conditions will be selected and searched.
- Click the **<Search>** button.
  - Channel : Displays the recorded channel.
  - Camera name : Displays the camera name.
  - Attribute : Displays the recognized search result attributes.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
- Click **<👁>** in the search list to display the instant viewer.
- Click **<🔍>** to go to the playback screen.

## FACE SEARCH


From the recorded data, you can search faces according to your desired conditions such as gender and age.

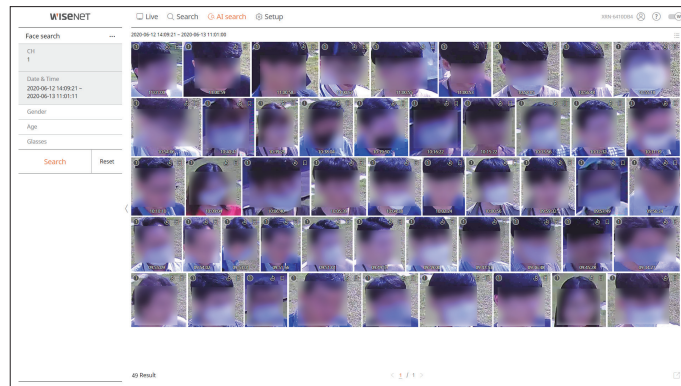

1. Select **<Face search>** in the **<AI search>** menu.
2. Select a channel to search.
3. Select the date and time to search.
4. Select a detailed search option.
  - Person search options : **Gender, Age, Glasses**
    - Click the option to display the option selection window. Select the desired search option.
    - If no details are set, all conditions will be selected and searched.
5. Click the **<Search>** button.
  - Channel : Displays the recorded channel.
  - Camera name : Displays the camera name.
  - Attribute : Displays the recognized search result attributes.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
6. Click **<⌂>** in the search list to display the instant viewer.
7. Click **<Q>** to go to the playback screen.

## VEHICLE SEARCH


You can search the vehicle by setting the vehicle type and color conditions from the recorded data.

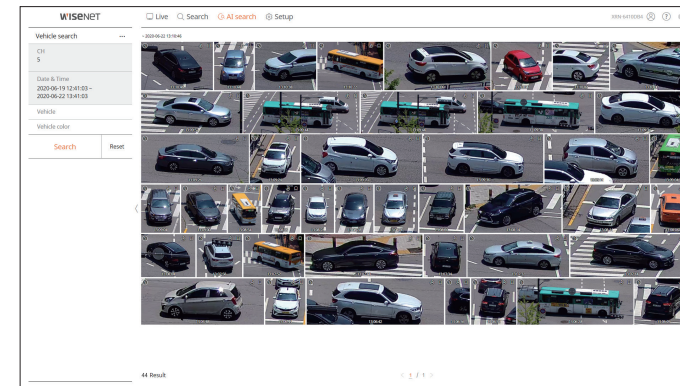

1. Select **<Vehicle search>** in the **<AI search>** menu.
2. Select a channel to search.
3. Select the date and time to search.
4. Select a detailed search option.
  - Vehicle search options : **Vehicle, Vehicle color**
    - Click the option to display the option selection window. Select the desired search option.
    - If no details are set, all conditions will be selected and searched.
5. Click the **<Search>** button.
  - Channel : Displays the recorded channel.
  - Camera name : Displays the camera name.
  - Attribute : Displays the recognized search result attributes.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
6. Click **<⌂>** in the search list to display the instant viewer.
7. Click **<Q>** to go to the playback screen.

## LP SEARCH

You can search for the license plate number recognized in the recorded data.

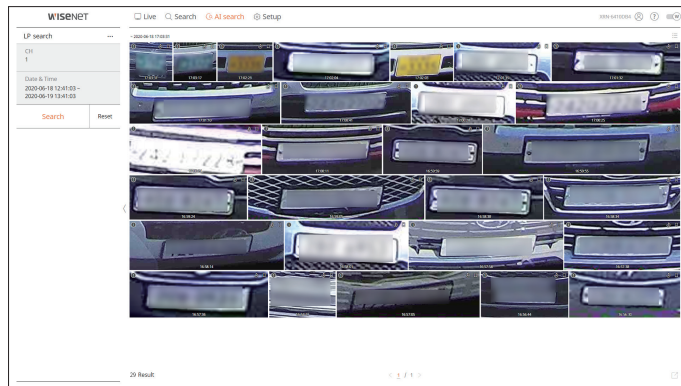


1. Select <LP search> in the <AI search> menu.
2. Select a channel to search.
3. Select the date and time to search.
4. Click the <Search> button.
  - Channel : Displays the recorded channel.
  - Camera name : Displays the camera name.
  - Time : Displays the start time of the recorded video.
  - Play : Plays the recorded video with an instant viewer.
  - Bookmark : Specifies a bookmark to the recorded video.
5. Click <🔍> in the search list to display the instant viewer.
6. Click <🔍> to go to the playback screen.

## SEARCH RESULTS EXPORT

Search results such as people, faces, and vehicles can be exported to a file.

### Example) Person search results export

1. Click <📄> in the search results list.

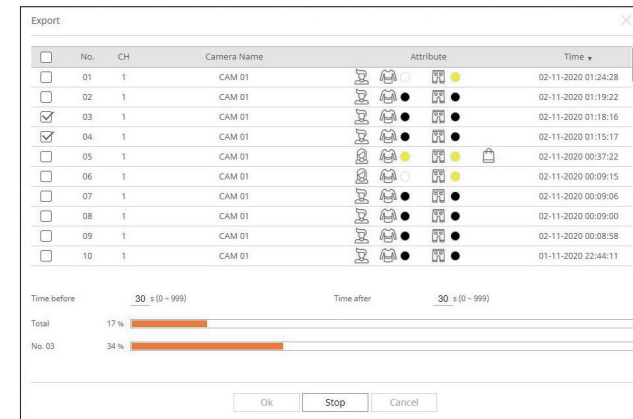

2. Select the desired list and click <OK>.
  - The exported video is saved as .avi file in the download folder.




## PLAY SEARCH RESULTS


You can play the recorded data and export the video you want during playback.

### To Adjust the Time Line

You can move the playback position and zoom the time line in and out.




- Click the desired play position in the time line.  
The playback start position will be moved.
  - Click the start point on the left side of the time line to move the playback position to the start point of the first video.
  - Place your mouse over the time line to see the corresponding thumbnail of the recorded video.
- Click <⊕>, <⊖> to zoom in or out the time display magnification. When the time line is enlarged, a scroll bar will appear at the bottom.
  - You can use the mouse wheel over the time line to zoom in or out on the time scale.
  - The time line magnification of the time line will be displayed at the top right of the time line.
- To see the time line before or after zooming in, zoom in and drag the time line left or right.




## EXPORT VIDEO BY SECTION SETUP

You can select the desired section from the time line or search list during video playing and export it to a file.

1. Click the <[ ]> button
2. Select the start and end points of the desired section in the time line with the mouse.




3. Click the <[ ]> button.

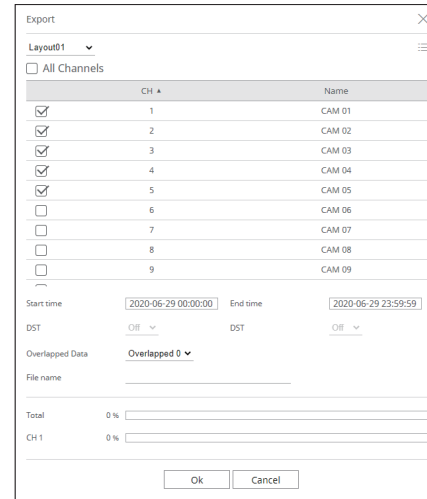


4. Select a layout to export and select the desired channel.
5. Set the start date/time and end date/time.
6. Enter a file name to save, and then click the <OK> button.
7. When the export is complete, a confirmation window appears.
  - While exporting, click the <Stop> button to stop the export.

## Play Button Name and Function

### Paused state

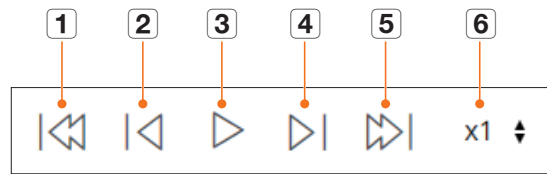


### Playback state

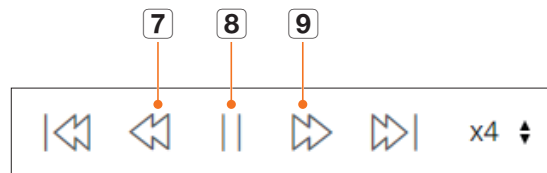

Name	Description
<b>1</b>	<b>Previous event</b> Go to the previous event video.
<b>2</b>	<b>Step backward</b> Move backward one frame
<b>3</b>	<b>Play</b> Play the video.
<b>4</b>	<b>Step forward</b> Moves forward one frame or more.
<b>5</b>	<b>Next event</b> Go to the next event video.
<b>6</b>	<b>Speed</b> Select the video playback speed. Speed : x1/8, x1/4, x1/2, x1, x2, x4, x8, x16, x32, x64, x128, x256
<b>7</b>	<b>Backward X times playback</b> It is used for reverse playback. Speed : -x1/8, -x1/4, -x1/2, -x1, -x2, -x4, -x8, -x16, -x32, -x64, -x128, -x256 ▪ Depending on the split screen, the maximum speed may be limited.
<b>8</b>	<b>Freeze</b> Pause the video.
<b>9</b>	<b>Forward X times playback</b> It is used for forward playback. Speed : x1/8, x1/4, x1/2, x1, x2, x4, x8, x16, x32, x64, x128, x256 ▪ Depending on the split screen, the maximum speed may be limited.

You can configure the Recorder settings remotely on the network.

## SCREEN LAYOUT OF THE SETUP VIEWER

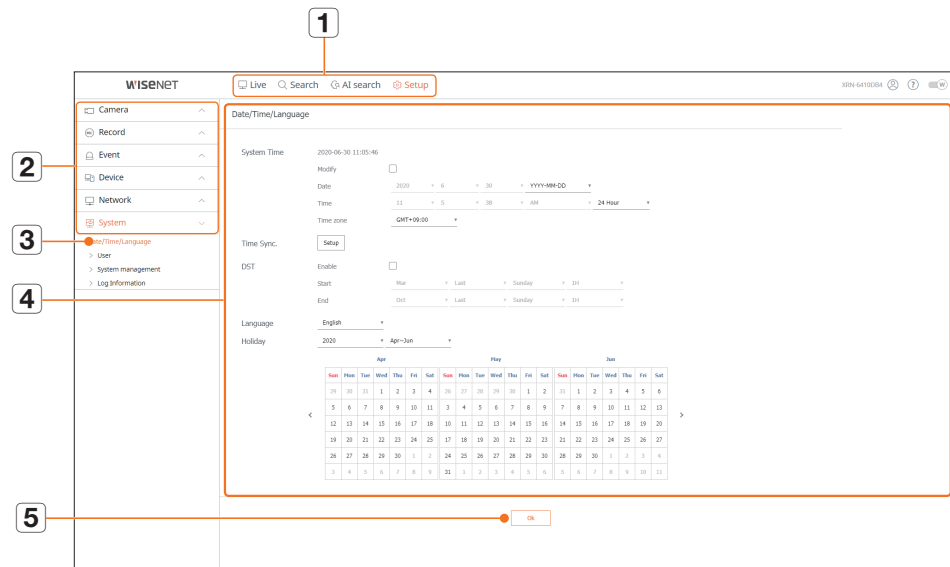

Name	Description
1	<b>Menu</b> Click each menu to go to the menu screen.
2	<b>Top menu list</b> Configure the settings or select a parent item to change the existing settings.
3	<b>Sub-menu list</b> Among the sub-menus of selected parent menu, select a desired item to set.
4	<b>Detailed Menu</b> Click desired item's input field to change and enter a desired value.
5	<b>Ok</b> Apply the modified settings.


## SETTING THE CAMERA

You can check a list of cameras that are connected to the Recorder and configure the necessary settings. For details, refer to the "Setup > Setting the Camera" page in the Table of Contents.

### Camera Register

You can add a network camera(s).


#### Setup > Camera > Camera register

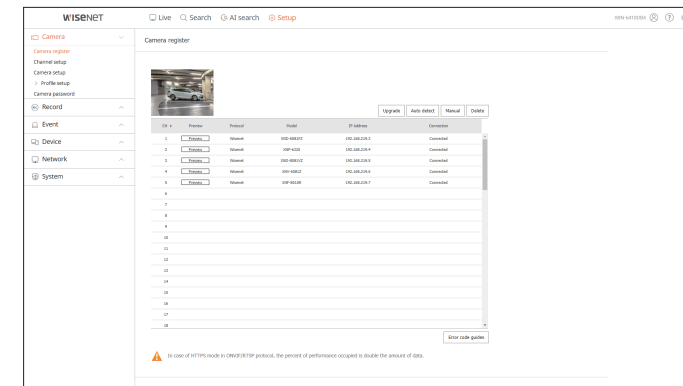

### Channel Setup

You can configure the video settings for each channel.


#### Setup > Camera > Channel setup

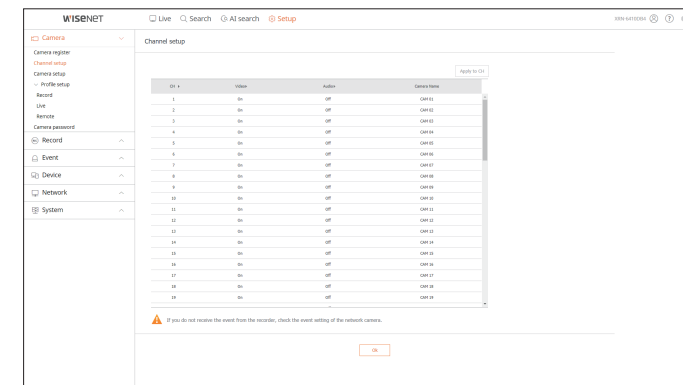

## Camera Setup

You can change the settings of a connected network camera.


Setup > Camera > Camera setup

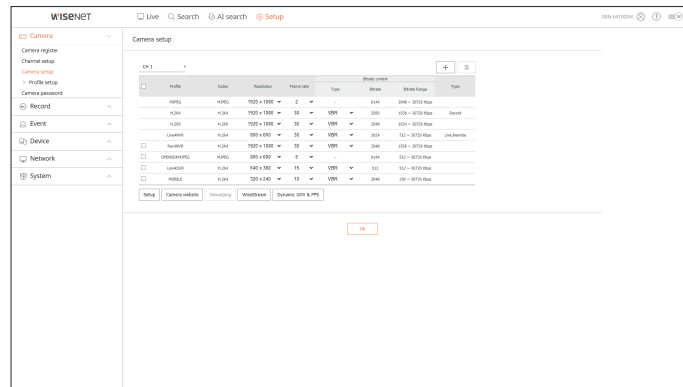

- When you click the <Camera website> button, a new camera web browser window is opened.
  - This is not supported if the camera is connected to the RTSP protocol.
  - This is not supported if the camera is connected to DDNS, URL, or MAC Address.
  - It supports the version specified below or later for each Q/P/X series camera. (QND-7010R series : 1.04, QND-7080R series : 1.02, QND-6010R series : 1.02, QND-6070R series : 1.01, P series : 1.01)
  - It supports only when the camera is connected to IPv4 and is not set to HTTPS.
  - When you are connecting to the camera web page on a closed network, a camera that does not support the universal web will not be able to output an image.
  - The cam proxy port's default settings are automatically set in sequence as many as the number of channels supported by Recorder. If you want to change the proxy port, then select the port setup menu.
  - 32 channels (10001-10032), 64 channels (10001-10064)

### Example) Defaults of cam proxy ports for each product

- XRN-3210B4 (32 channels) : 10001-10032
- XRN-6410DB4/XRN-6410B4 (64 channels) : 10001-10064
  - When connecting outside the closed network as shown in the figure, the port forwarding setting of the camera proxy port is required for the router.

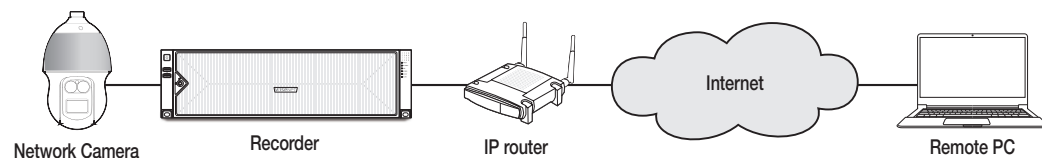

- If there are multiple Recorders within the closed network, each cam proxy port should be set using a different port.
- If DDNS and Quick Connect are enabled, port forwarding will be automatically set.
- Chrome, Edge and Safari (Mac OS) browsers are supported.


## Profile Setup

You can set the profile for a network camera.

Setup > Camera > Profile setup


## Record

You can set the recording profile for a network camera.

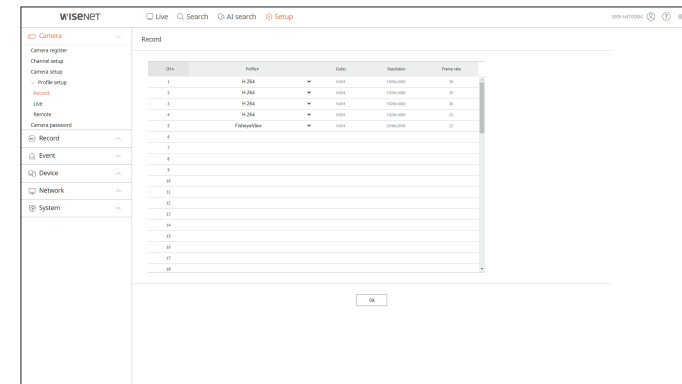


## Live

You can change the live transfer settings of the network camera.

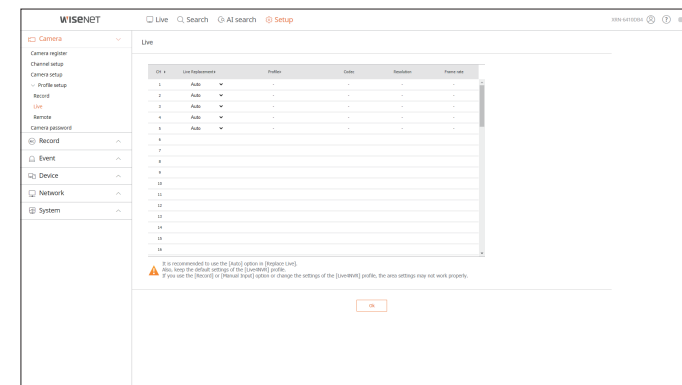

## Remote


You can set the video profile transmitted to the network and the expansion monitor.

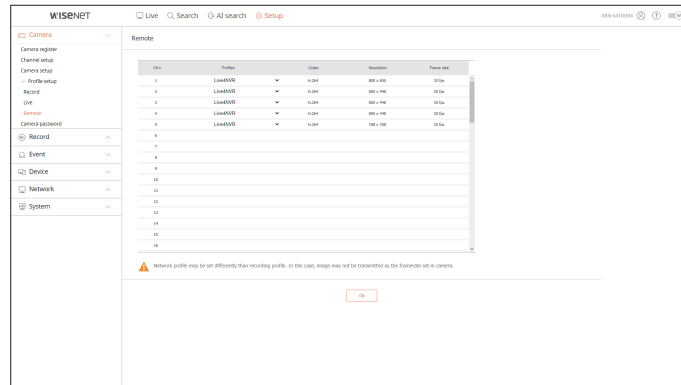

## Camera Password

You can change the passwords of all registered cameras at once.

### Setup > Camera > Camera password

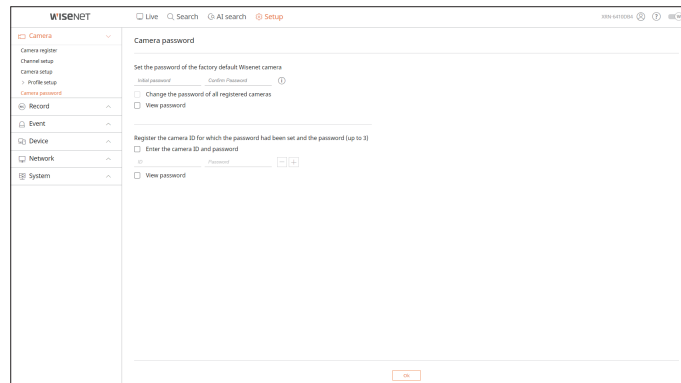


## SETTING THE RECORDING

For details, refer to the "Setup > Setting the Recording" page in the Table of Contents.

### Recording Schedule

If you set a recording schedule for a specific date and time, the recording will start at that specific time.


#### Setup > Record > Recording schedule

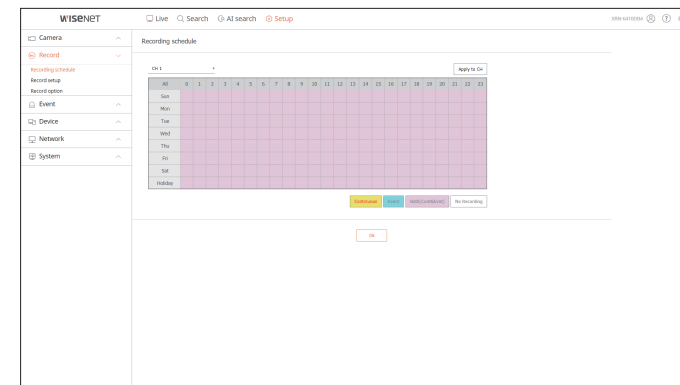

### Record Setup

Select a type of the normal/event recording frame rate for each channel.

#### Setup > Record > Record setup

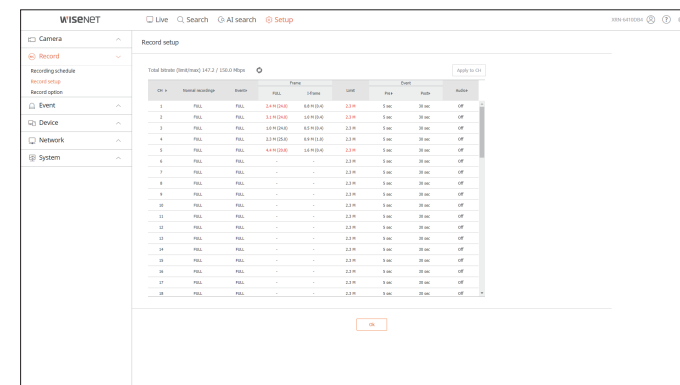


## Record Option

You can set the hard disk recording option.

- You can set the recording duration separately for each channel.

### Setup > Record > Record option

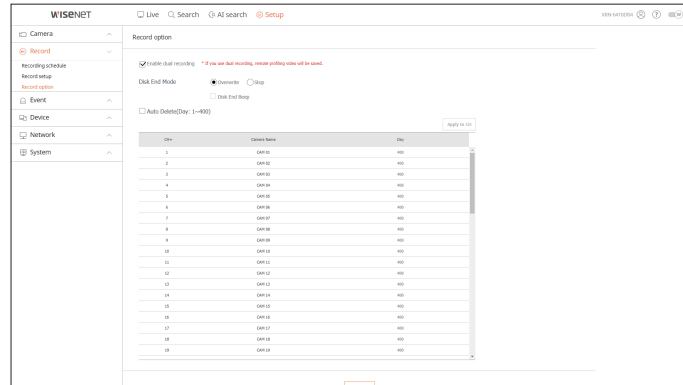

## SETTING THE EVENT

For details, refer to the "Setup > Setting the Event" page in the Table of Contents.

## Event Setup


You can set detailed settings for each channel's event detection mode.

### Setup > Event > Event setup

## Object detection


You can change the AI object detection event setup.

- The object detection function is displayed only when connected Wisenet AI camera.

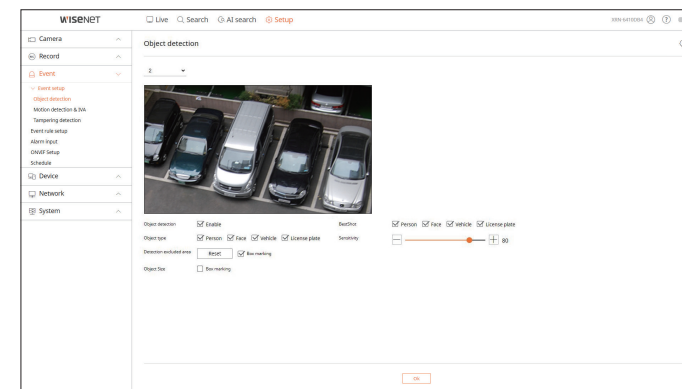


## Motion detection & IVA

You can change the motion detection and intelligent video analytics event setup.

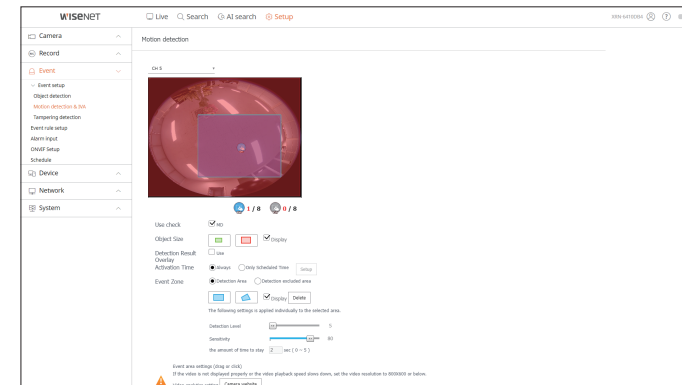

## Tampering detection


You can change the tampering detection event setup.

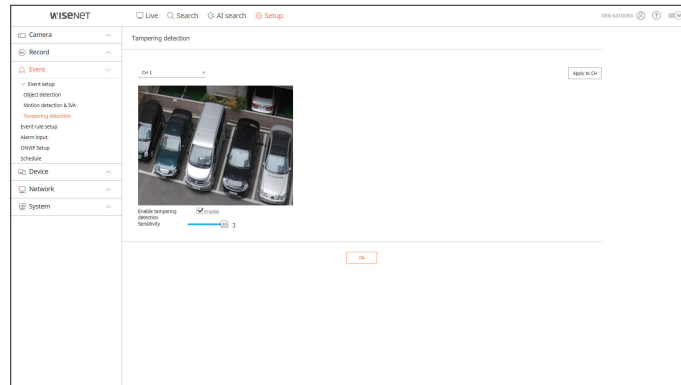

## Event Rule Setup

You can set the event trigger and action rule to output an alarm when an event occurs.


### Setup > Event > Event rule setup

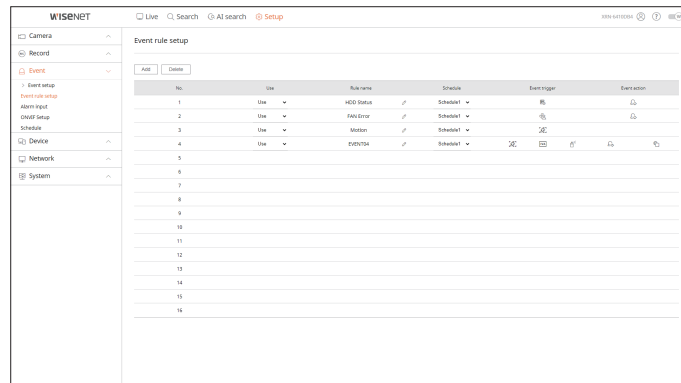

## Alarm Input

You can set the operation of the alarm sensor.


### Setup > Event > Alarm input

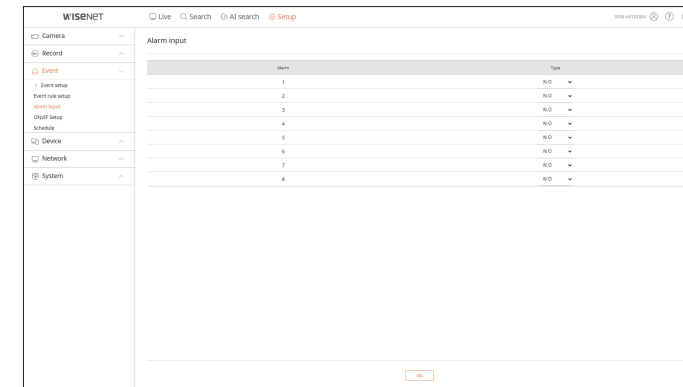

## ONVIF Setup

You can set the camera registered with the Onvif protocol.


### Setup > Event > ONVIF setup

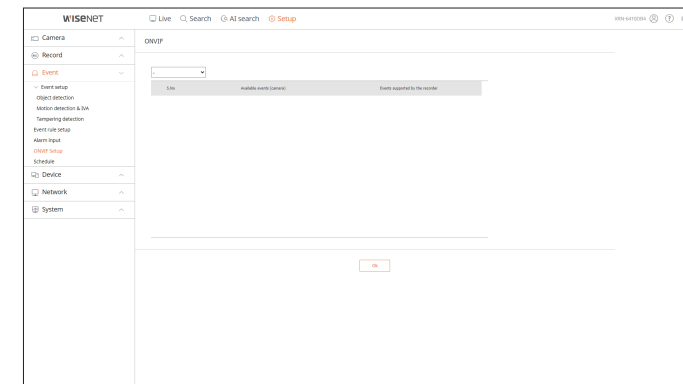

## Schedule

Whether to output an alarm can be scheduled according to the day and time.  
The initial setting will be an event sync, and an alarm will be sent only when an event occurs.

### Setup > Event > Schedule

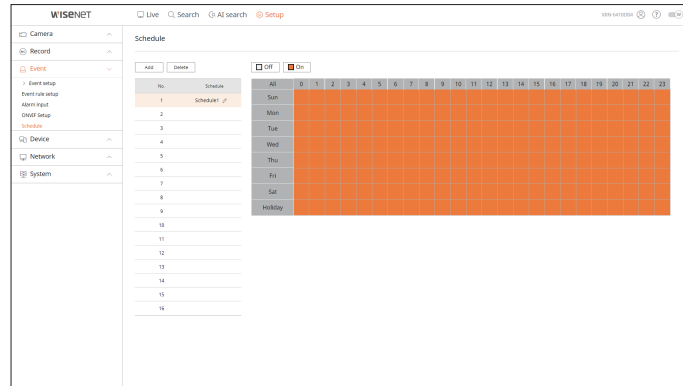

## SETTING THE DEVICE

You can check a list of devices that are connected to the Recorder and configure the necessary settings.  
For details, refer to the "**Setup > Setting the Device**" page in the Table of Contents.


### Storage Device

You can check and change the settings related to the data storage device.

### Setup > Device > Storage device

### Device/Format


You can check a storage device, amount of use, type of use and status of storage device.

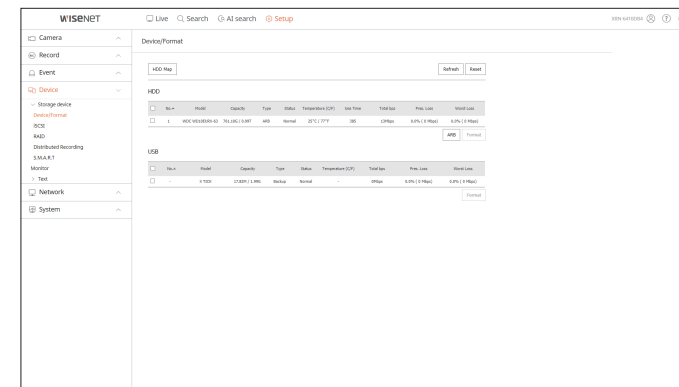

- ARB : Video that was not recorded due to disconnection from the camera can be backed up after the connection with the camera is re-established.  
Press the button and an **<Auto Recovery Backup>** window is opened.  
For details, refer to the "**Setup > Setting the Device**" page in the Table of Contents.

### iSCSI


When connecting an iSCSI device to the recorder, you can search for the iSCSI device and connect and disconnect it.

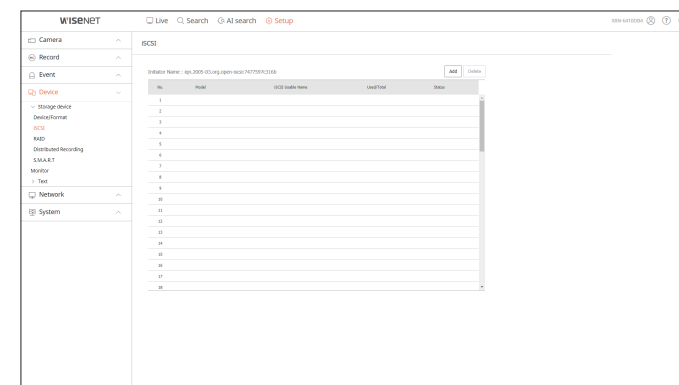




## RAID

You can set the RAID (Redundant Array of Independent Disks) mode.

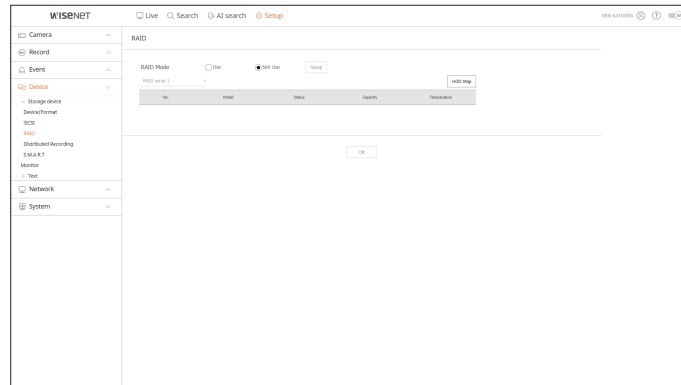


## Distributed recording

By allocating a certain portion of HDDs to each group, you can distribute the amount of recording for optimal saving.

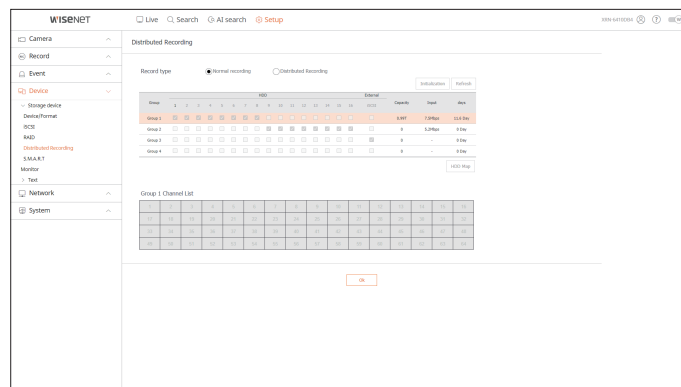

## S.M.A.R.T


You can check the connection status and details of the hard disk mounted in the recorder.

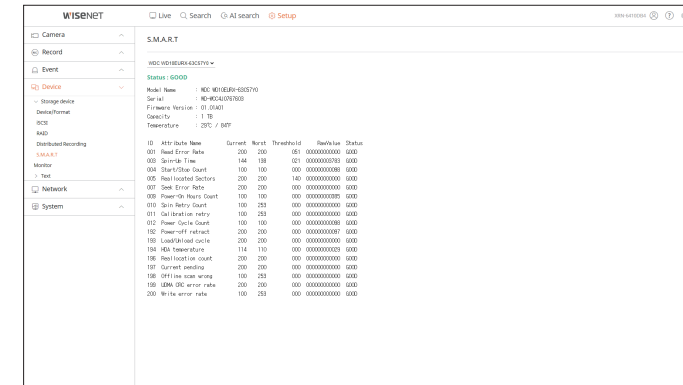

## Monitor

You can set the information displayed on the monitor as well as the output system.

### Setup > Device > Monitor

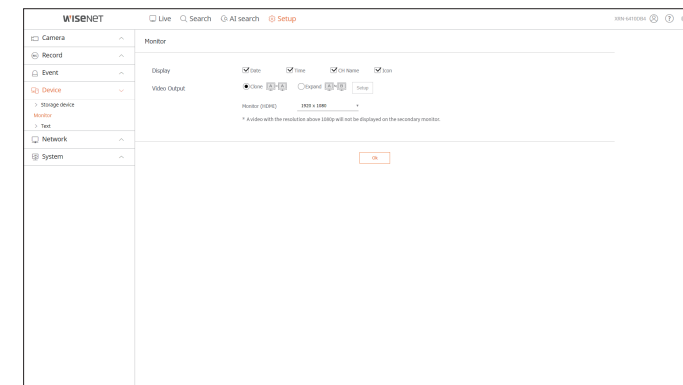

- If the screen does not work properly, see "**Troubleshooting (FAQ)**" in the Appendix.
- The Monitor Setup settings control the monitor connected to the Recorder.
- Video exceeding the resolution of 1080p will not be displayed from the secondary monitor.


## Text

You can set the device text display and event text settings.

Setup > Device > Text


## Device

Relevant values of a device connected to Recorder can be set.

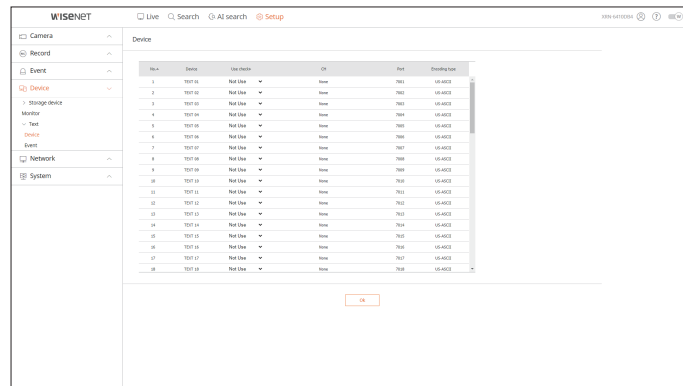

## Event

It is possible to set total amount conditions and keywords to display events of a text device.

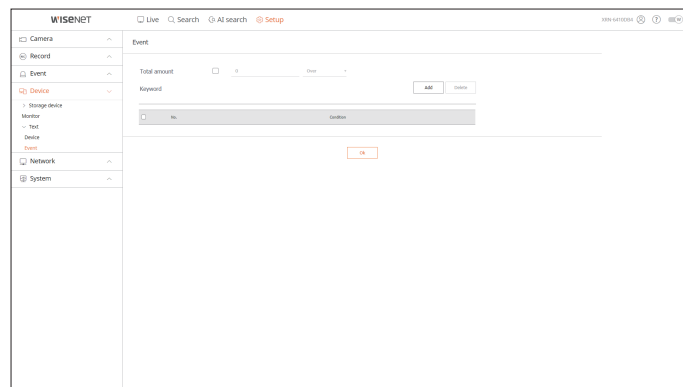

## SETTING THE NETWORK

For details, refer to the "Setup > Setting the Network" page in the Table of Contents.


## Interface

A remote user can access the Recorder via the network to check the current mode and the IP address.

Setup > Network > Interface


## Network

Specify the network connection path.

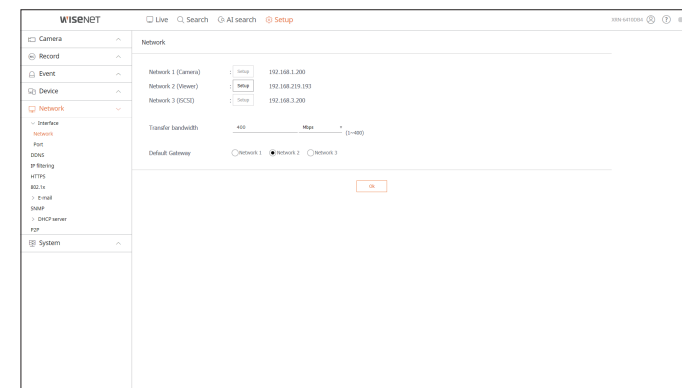

## Port


You can configure the protocol related settings.

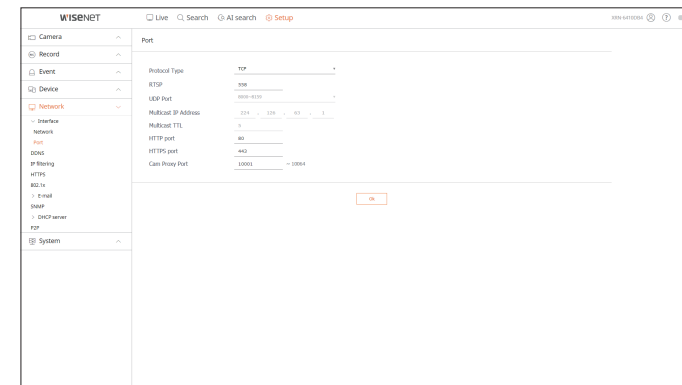

## DDNS

You can set DDNS.


### Setup > Network > DDNS

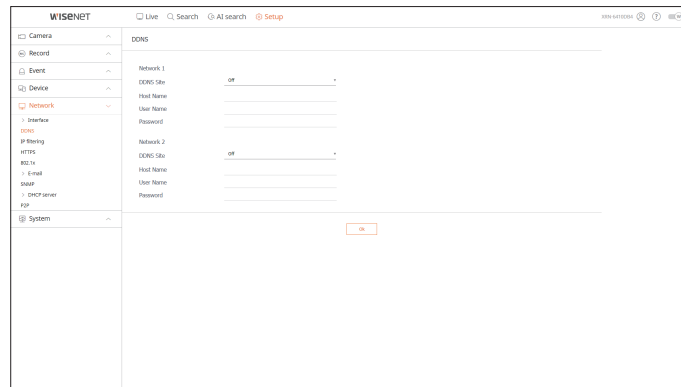

## IP Filtering

You can prepare the list of IP address to allow or block accesses to a specific IP address.


### Setup > Network > IP filtering

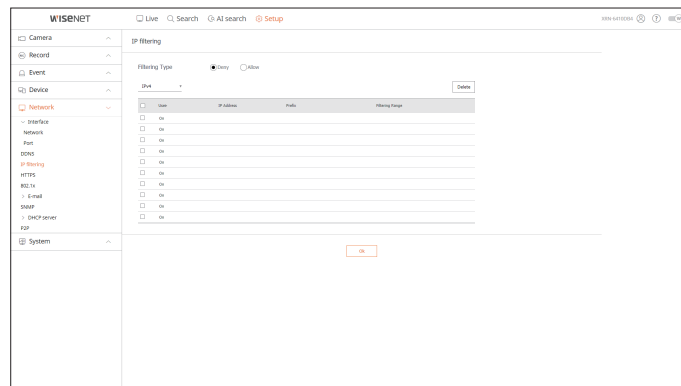

## HTTPS

You can select a security connection system or install public certificates.

### Setup > Network > HTTPS

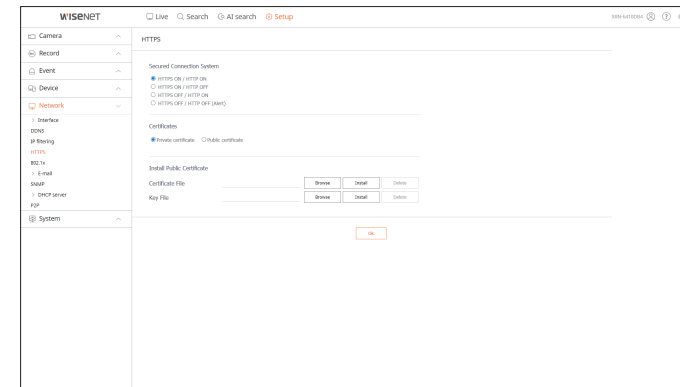


- While using HTTPS, if you want to switch to HTTP, then abnormal operation can take place as the browser contains the setting values. You need to change the URL to HTTP and reconnect or initialize the cookie setting of the browser.

## 802.1x

When connecting to a network, you can select whether to use the 802.1x protocol and install a corresponding certificate.

### Setup > Network > 802.1x

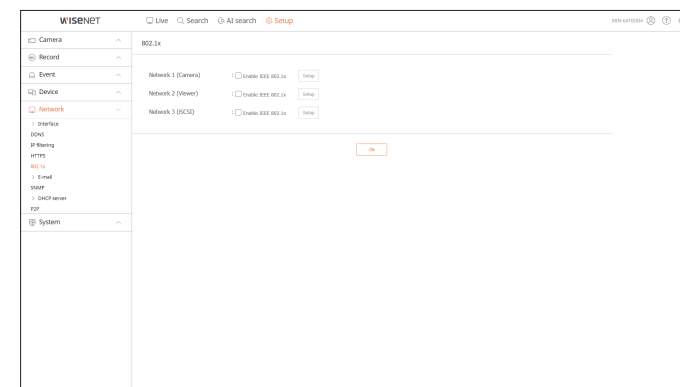


## E-mail

You can specify the SMTP server that sends a mail if an event occurs and set the recipient group and users.

Setup > Network > E-mail


## SMTP

You can set the server that sends mails and specify if you use the authentication process.

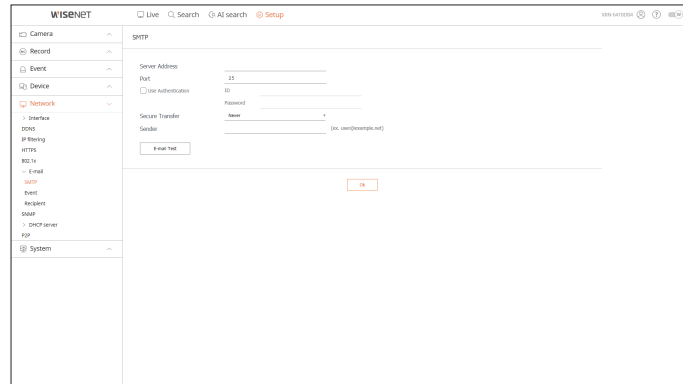


## Event

You can set the event interval and specify which events the server sends mails for.

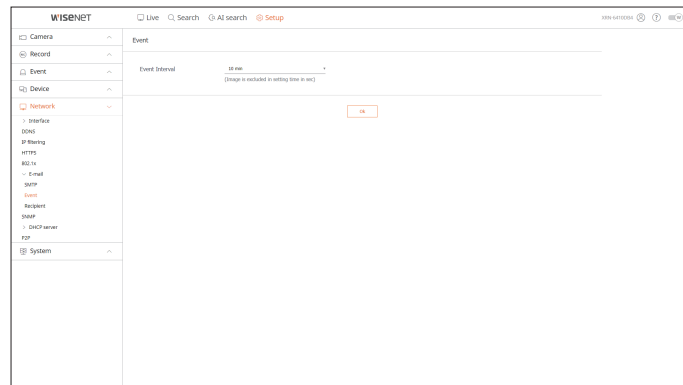

## Recipient


You can set groups and recipients to receive emails.

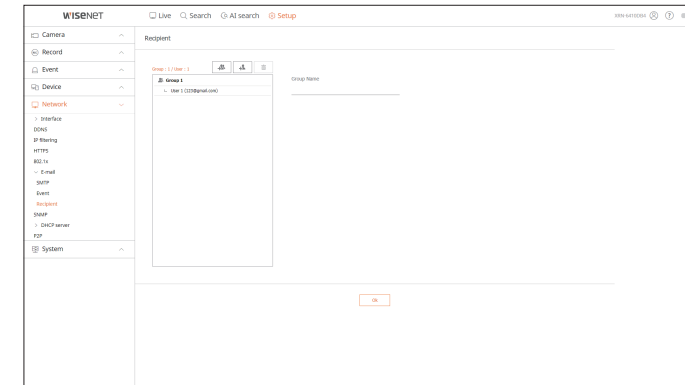

## SNMP

Using the SNMP protocol, the system or network administrator can remotely monitoring the network devices and sets the environment.

Setup > Network > SNMP

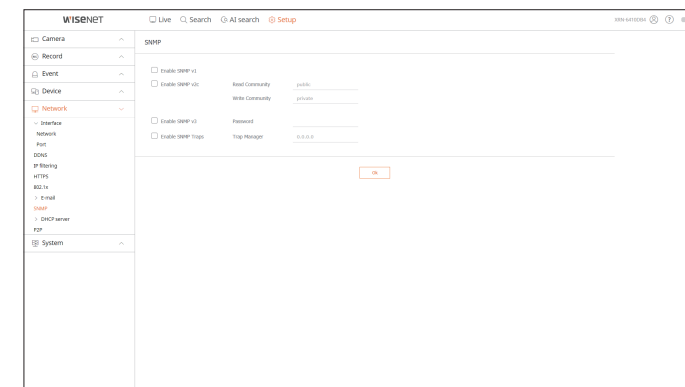


## DHCP Server

You can set the network camera IP address and check the details by setting up a DHCP server.

Setup > Network > DHCP server


### Network

You can set the internal DHCP server and assign an IP address to the network camera.

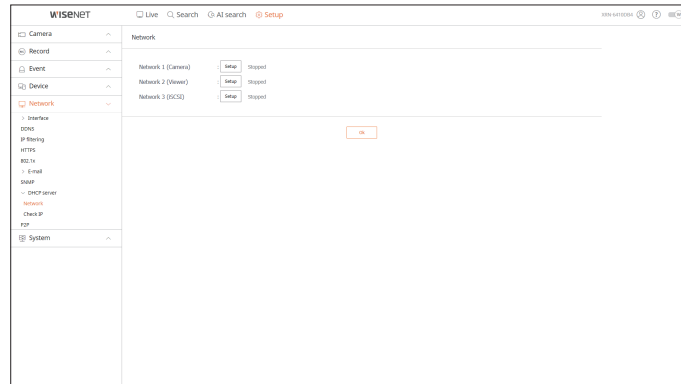

### Check IP

You can check the IP and MAC currently used through the DHCP server, and the connected network port.

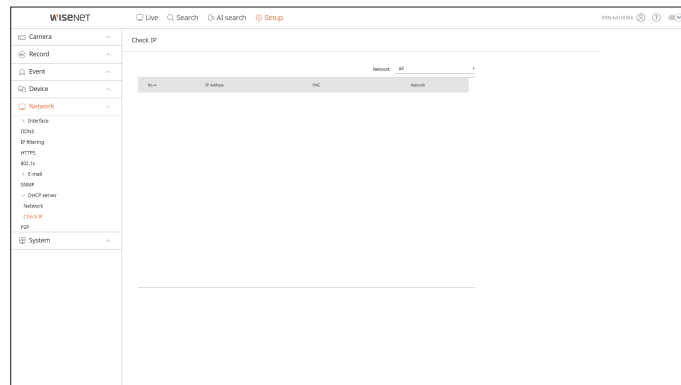


## P2P

This function is only available for products that support P2P.

If you want to use P2P service, check the <Enable P2P> box.

You need to scan the QR code on the screen to use the P2P service.

Setup > Network > P2P

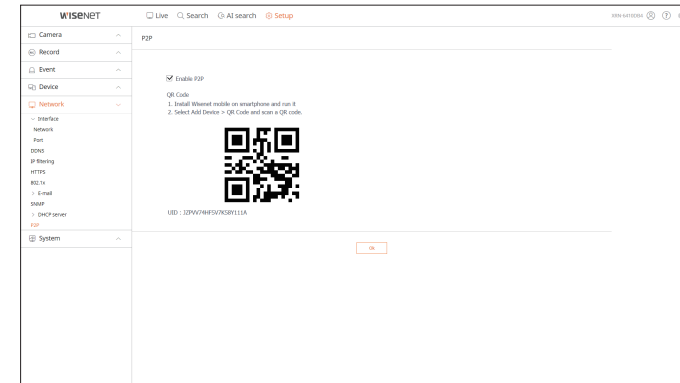

## SETTING THE SYSTEM


You can configure the various settings of the Recorder system.

For details, refer to the "**Setup > Setting the System**" page in the Table of Contents.

### Date/Time/Language

You can check and setup the current Date/Time and time related properties, as well as the language used for the interface on the screen.

#### Setup > System > Date/Time/Language

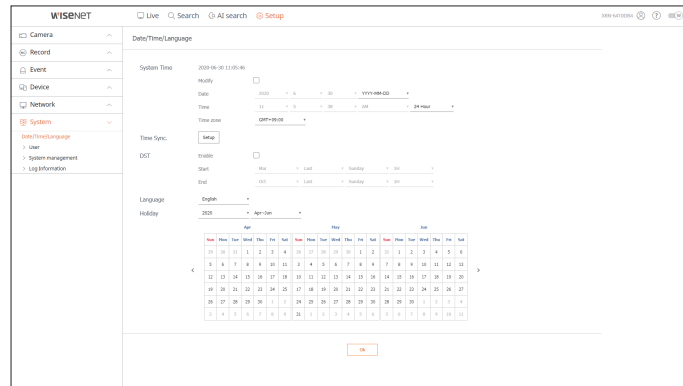

### System Time

Set the date and time.

### Time Sync.

Set the time synchronization.

### DST

During the summer, Daylight Saving Time (DST) advances clocks one hour forwards from the standard local time zone.

### Language

Select a preferred language for the Recorder.

### Holiday

A user can select specific dates as holidays according to their own preferences.


## User

You can manage users, such as adding or deleting users and granting different authorities for each user.

#### Setup > System > User

### Administrator


You can change the admin ID or the password.

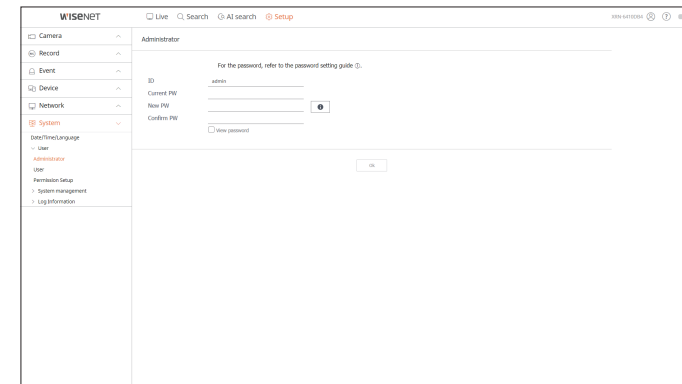

- ID allows alphanumeric characters only.
- If the admin ID is not used for access, you cannot change the ID.
- If the ID being used is changed, you will be automatically logged out.


### User

You can add, change or remove a user or users.

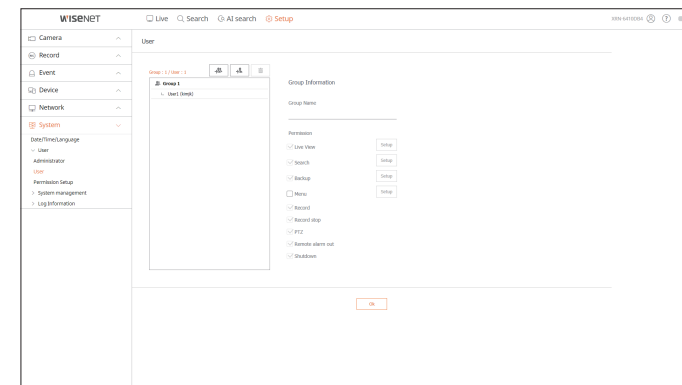

## Permission setup

You can set the user permission.

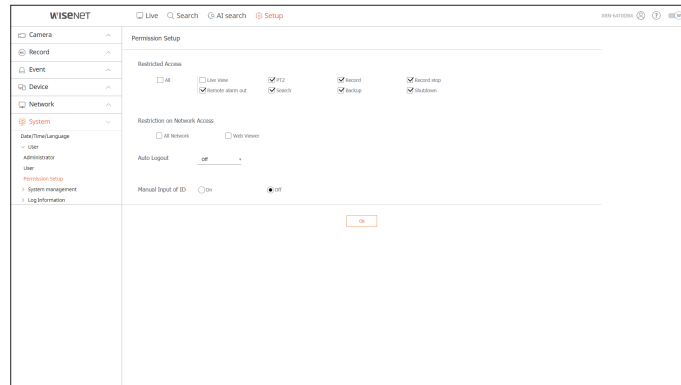

## System Management

You can check the current system version and update to a new version, export data, setting initialization, and more.


Setup > System > System management

## System information

You can see information of the current system.

Check the model name, software version, and MAC address.


You can search for a file from the storage device connected to the PC to perform an upgrade.

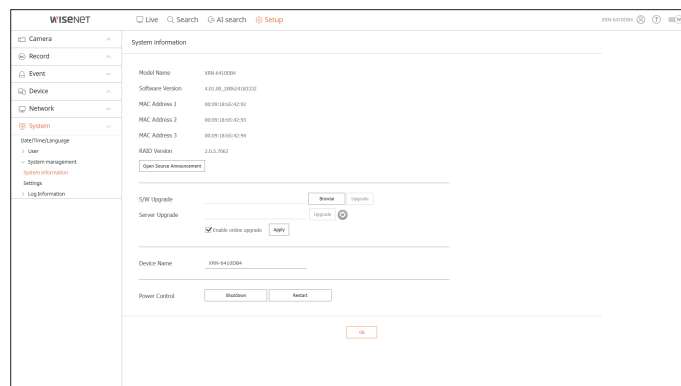

## Settings

Using a storage device, you can apply the current configuration of Recorder to another Recorder.

Press the Initialization button to return the network settings to their factory default state. Items in the <Exclusion Setting> category are excluded from the initialization.

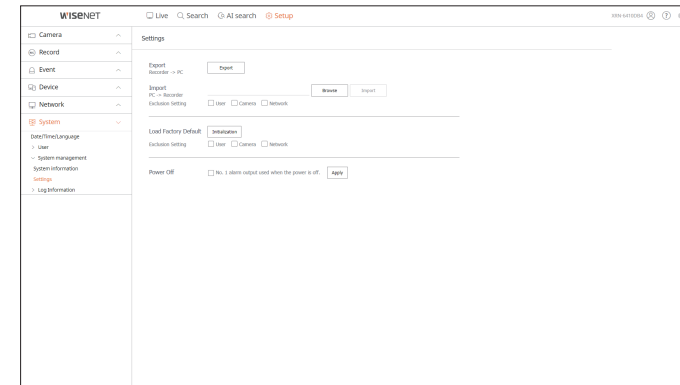


## Log Information

You can check the log information related to system, events, and export.

Setup > System > Log information

## System log

System related log information such as system startup, system shutdown, and menu setting change can be retrieved.

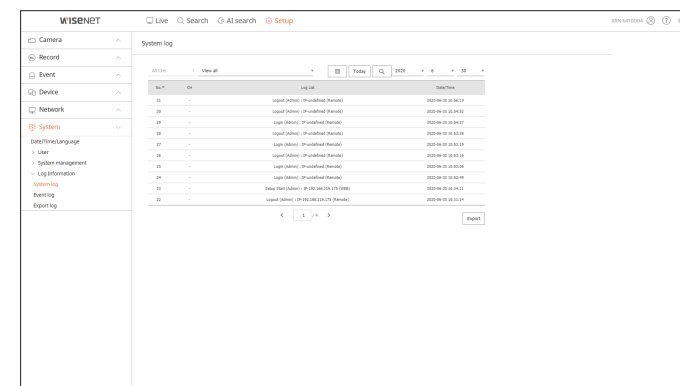

## Event log

The event log lists recorded events, such as sensor events, camera events, or image losses.

The screenshot shows the WISENET Event log interface. The left sidebar contains a navigation menu with categories: Camera, Record, Event, Device, Network, System, Data/Time/Language, User, System management, Log/Alarm, System log, Event log, and Export log. The main area displays the Event log with a table of entries. The table has columns for ID, Type, Log ID, and Date/Time. The entries are as follows:

ID	Type	Log ID	Date/Time
007	3	000-000-01-00-00-00	2020-08-08 11:02:04
008	3	000-000-01-00-00-00	2020-08-08 11:02:04
009	3	000-000-01-00-00-00	2020-08-08 11:02:04
010	3	000-000-01-00-00-00	2020-08-08 11:02:04
011	3	000-000-01-00-00-00	2020-08-08 11:02:04
012	3	000-000-01-00-00-00	2020-08-08 11:02:04
013	3	000-000-01-00-00-00	2020-08-08 11:02:04
014	3	000-000-01-00-00-00	2020-08-08 11:02:04
015	3	000-000-01-00-00-00	2020-08-08 11:02:04
016	3	000-000-01-00-00-00	2020-08-08 11:02:04
017	3	000-000-01-00-00-00	2020-08-08 11:02:04
018	3	000-000-01-00-00-00	2020-08-08 11:02:04
019	3	000-000-01-00-00-00	2020-08-08 11:02:04
020	3	000-000-01-00-00-00	2020-08-08 11:02:04

## Export log

You can search the user who performed the export and the execution time and details (time, channel, device, file type).

The screenshot shows the WISENET Export log interface. The left sidebar is the same as in the Event log screenshot. The main area displays the Export log with a search filter set to 'user'. The table has columns for ID, Type, and Date/Time. The entries are as follows:

ID	Type	Date/Time
007	3	2020-08-08 11:02:04
008	3	2020-08-08 11:02:04
009	3	2020-08-08 11:02:04
010	3	2020-08-08 11:02:04
011	3	2020-08-08 11:02:04
012	3	2020-08-08 11:02:04
013	3	2020-08-08 11:02:04
014	3	2020-08-08 11:02:04
015	3	2020-08-08 11:02:04
016	3	2020-08-08 11:02:04
017	3	2020-08-08 11:02:04
018	3	2020-08-08 11:02:04
019	3	2020-08-08 11:02:04
020	3	2020-08-08 11:02:04



## SEC BACKUP VIEWER

You can play a file that is backed up in the format of SEC.

Backup in SEC format produces backup data file, library file and self-executable viewer file.

If you run the backup file viewer, the backup data file will be played.


### Recommended System Requirements

PCs with a lower specification than the recommended below may not fully support forward/backward and highspeed playback.







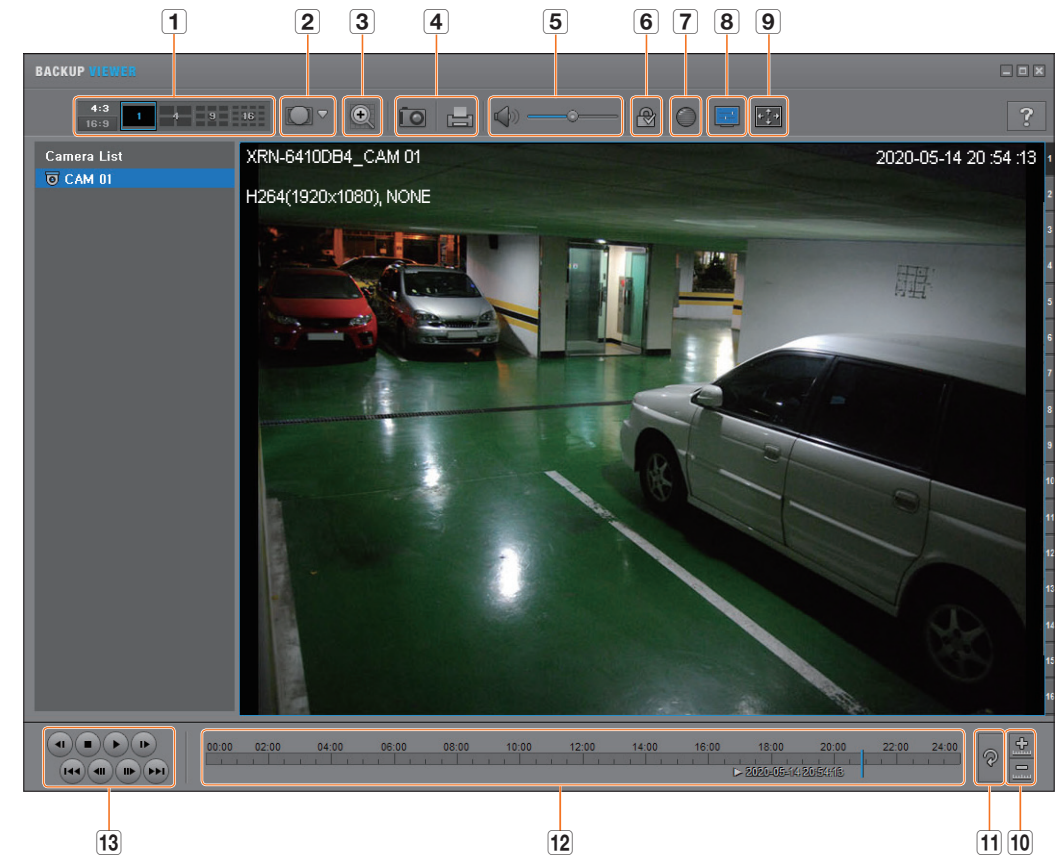






### PC Specifications

Name	Minimum requirements	Recommended
CPU	Intel Pentium 2.5GHz or more	Intel i7(3.5GHz) or more
RAM	4GB or more	8GB or more
HDD	200GB or more	500GB or more
VGA memory	512MB or more	1GB or more
Display resolution	1280x1024 or higher	1920x1080 or higher
OS	Windows 7, 8, 10	

## Screen Layout of the Backup Viewer




Name		Description
1	Split screen	Selects screen ratio to display.
		The screen is changed to a split screen.
2	Fisheye view mode	If <  > is pushed, it is possible to change to a fisheye installation type. It is possible to select wall/ground/ceiling mode according to the installation place.
		The fisheye view mode on the current screen can be changed independently on each split.
3	Digital Zoom	<p>Enlarge the image by up to 100 times as big as the current one. Press the Zoom In (  ) button to enlarge the image; press the Zoom Out (  ) button to shrink the image. You can also use the slide bar (  ) in the pop-up window to zoom in/out.</p> <p>Press (  ) on a size-changed video to restore the default zoom factor (100%). If you enlarge the image by more than 200%, the enlarged area will be marked on the digital zooming screen. Click on the marked area and move it to a desired position. The digital zooming is applied to all backup viewer. When the digital zooming is canceled, the video size will restore the default rate of 100%.</p>

Name		Description
4	Screen Printout	 Saves the current video's image as in an image file. Supports JPEG file format.
		 Prints out the current screen. You should have installed the appropriate printer driver before you can print out the screen.
5	Audio	 A toggle button. Each time you press this button, the audio output will toggle between activated and deactivated.
		 You can adjust the volume level from 0 to 100.
6	Watermark	 Press the button to enable file tampering detection, to detect data file forging.
7	Deinterlace	 You can enable the De-interlace function.
8	Show OSD	 Check the OSD checkbox to display the OSD information on the backup playback screen. Information such as backup date, day of the week, time, model name, and channel number will be displayed on the screen.
9	Maintain aspect ratio/Full screen	 Maintains the aspect ratio of the playback screen.
		 Plays the video on a full screen.
10	Enlarge/Reduce Timeline	 Collapses the time range that is displayed on the range bar of the storage time. You can collapse the range bar until the overall range is shortened to 24 hours.
		 Enlarges the time range that is displayed on the range bar of the storage time. You can enlarge the range bar until the overall range is extended to 1 minute.
11	Restore Timeline	 Restores the timeline to the default.
12	Display of storage time range	Displays the time range of a stored video file. You can move the gridline of the range bar to select a time point to play.
13	Playback Control	 You can adjust the video playback of the timeline.

## USE JOYSTICK


The function is only available for the product that supports a joystick. For products that support joy stick, see page 4 "Products supporting each feature" of the Product Specification Manual.

The SPC-2000 joystick is operated as follows :

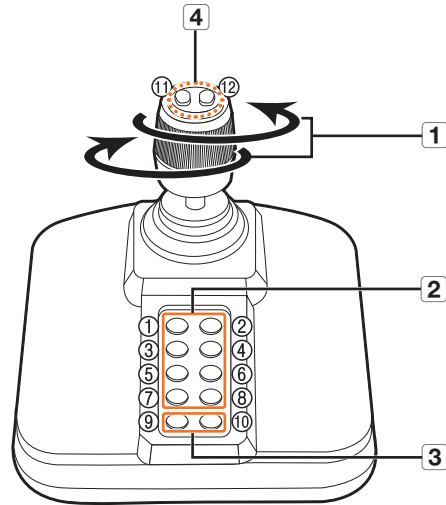


Name	Description
1	<b>Up/Down/Left/Right</b> In PTZ mode, the camera can be panned, tilted, and controlled in 8 directions. The Web Viewer only supports the PTZ mode. In Screen mode, the top/bottom/left/right tile can be selected. <ul style="list-style-type: none"> <li>When you press the Near/Far button while controlling with the joystick, you can perform control simultaneously.</li> </ul>
	<b>Rotation</b> In PTZ mode, the screen is zoomed in when it is rotated clockwise and zoomed out when it is rotated counterclockwise.
2	<b>1~8</b> In PTZ mode, presets number 1~8 are run. Screen mode works as follows. 1 : Changing live layout / 2 : Search 3 : Export / 4 : Zoom mode 5 : Freeze mode / 6 : Audio 7 : Alarm / 8 : Rec
3	<b>9</b> It allows to exit PTZ mode in PTZ mode. The Web Viewer won't be able to stop the PTZ on its own. This is used to change to PTZ mode from screen mode.
	<b>10</b> It allows to exit PTZ mode in PTZ mode. The Web Viewer won't be able to stop the PTZ on its own. Goes back to the previous screen in the Screen mode.
4	<b>11,12</b> In PTZ mode, Focus Near/Far operation is run. When using the screen mode, the same operations can be done by moving the mouse.

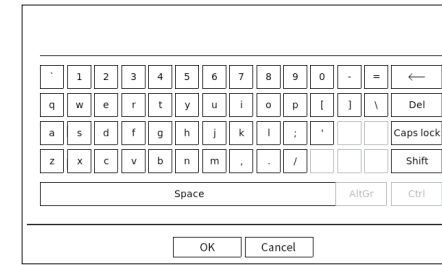

## USING VIRTUAL KEYBOARD



- For alphanumeric inputs, the virtual keyboard window appears.
- Using a mouse, click on the desired character tab.
- Select <OK>.
  - Entered word is applied.
  - If you want to enter a special character or uppercase letters, select <Caps Lock> or <Shift>.
  - Using the virtual keyboard is the same to a normal keyboard use in your region.
  - Your ID can contain any combination of upper/lowercase alphabet letters and numbers.
  - If the password length is 8 to 9 digits, you can combine at least three different types of the following characters : upper/lowercase alphabets, numbers, and special characters.
  - If the password length is 10 digits or more, you can combine at least two different types of the following characters : upper/lowercase alphabets, numbers, and special characters.

**TROUBLESHOOTING**

Problem	Action
Live video will be slow or cut off.	<ul style="list-style-type: none"> <li>The frame number set for multiple data transmission set in camera or network environment could differ from the actual rate of transmission. Click &lt;  &gt; at the bottom of the screen to check the number of incoming frames per channel and the actual number of frames played. Basically, when you register a camera, the Live4NVR profile is created and the rate is set to H.264 800*448 30fps. If necessary, go to “<b>Setup &gt; Camera &gt; Profile &gt; Edit</b>” and change the number of frames.</li> <li>If you keep seeing video slow down or cut off, then check the network environment or camera condition.</li> </ul>
The system does not turn on and the indicator on the front panel does not work at all.	<ul style="list-style-type: none"> <li>Check if the power supply system is properly connected.</li> <li>Check the system for the input voltage from the power source.</li> <li>If the problem persists even after you have taken the above actions, check the power supplier and replace it with a new one if necessary.</li> <li>Check inside if the cables are properly connected. (SMPS, FRONT)</li> </ul>
The video input is okay, but the videos of some channels are not properly displayed or are abnormally displayed (e.g. black screen, B/W screen).	<ul style="list-style-type: none"> <li>Check if the camera is properly supplied with power.</li> <li>Check the state of the cable connected to the camera and reconnect it after replacing or disconnecting it.</li> <li>Check the video output connecting the camera's Web Viewer.</li> <li>Check if the network port is properly connected and the network setting is set correctly.</li> <li>Change the hub supporting Gigabit, it may solves.</li> </ul>
The screen displays the logo image repeatedly.	<ul style="list-style-type: none"> <li>This may occur from a problem with the main board, or the related software is corrupt. Contact the nearest service center for more information.</li> </ul>
The Channel button does not work on the Live screen.	<ul style="list-style-type: none"> <li>The Channel button does not work if the current screen is in the event monitoring mode.</li> </ul>
The cursor will not move to the Start button when I start the calendar search.	<ul style="list-style-type: none"> <li>Check if the channel and the date that you want to play are marked with the V symbol. Both channel and date should be checked before you can start playing with the Start button.</li> </ul>

Problem	Action
No video is played on the connected monitor.	<ul style="list-style-type: none"> <li>Check if the necessary cables are connected to the monitor properly.</li> <li>Some monitors do not support the Recorder output (HDMI1 or HDMI2). Check the monitor resolution. HDMI1 : 3840x2160(30 Hz), 1080P, 720P, 1280x1024, HDMI2 : 1920x1080, 1280x720, 1280x1024, 1024x768</li> </ul>
Logo screen on bootup stalls in the [  ] state.	<ul style="list-style-type: none"> <li>The HDD may have problems. Visit your nearest customer service center to check the HDD.</li> </ul>
No response controlling PTZ in the live viewer.	<ul style="list-style-type: none"> <li>Check the registered Camera if it support PTZ function.</li> </ul>
The camera is not connected or the PC fails to connect to the product.	<ul style="list-style-type: none"> <li>Check if the network cable is connected properly.</li> <li>Ensure that you have set Network - Connection Mode.</li> <li>Check the IP setting of the PC or camera.</li> <li>Try the Ping Test.</li> <li>Check if there is a different device near the product uses the same IP.</li> </ul>
I registered a camera, but the web viewer does not show live video.	<ul style="list-style-type: none"> <li>After registering a camera, a user need to edit/save the desired layout, before the screen split mode and live screen fit for the setting appears.</li> </ul>
The input camera image is too bright or too dark.	<ul style="list-style-type: none"> <li>Check the registered camera settings in “<b>Setup &gt; Camera &gt; Camera setup</b>”.</li> </ul>
The time setup window will pop up.	<ul style="list-style-type: none"> <li>This message is displayed if there occurs a problem with the time setting of the internal clock or an error in the clock itself. Contact the retailer or the service center for more information.</li> </ul>
The time bar is not displayed in Search mode.	<ul style="list-style-type: none"> <li>The timeline can switch between normal and extension mode. In extension mode, the time bar may not be displayed in the current timeline. Switch to normal mode or use the left or right button to navigate through the time bar.</li> </ul>
The "NO HDD" icon and an error message are displayed.	<ul style="list-style-type: none"> <li>If you do not format your purchased HDD at all or in a format supported by Recorder, a “NO HDD” icon (  ) will be displayed at the top left. When the “NO HDD” icon is displayed, go to “<b>Setup &gt; Device &gt; Storage device</b>” and check the HDD connection status and format the HDD.</li> <li>If the problem persists in a normal condition, contact the nearest service center to have the HDD checked by the service personnel.</li> </ul>
I have installed an additional HDD on the Recorder but it does not recognize the HDD.	<ul style="list-style-type: none"> <li>See the compatibility list to check if the additional HDD is supported by the Recorder. For the compatibility list, contact the retailer where you purchased the Recorder.</li> </ul>
I have connected an external storage device (USB Memory, USB HDD) to the Recorder but the Recorder seems not to recognize it.	<ul style="list-style-type: none"> <li>See the compatibility list of external storage devices to check if the connected device is supported by the Recorder. For the compatibility list, contact the retailer where you purchased the Recorder.</li> </ul>

Problem	Action
If I press the ESC key in full screen mode of the Web Viewer, the system does not switch to a normal split mode.	<ul style="list-style-type: none"> <li>Press the ALT+TAB keys to select 'ACTIVE MOVIE' and press the ESC key again. The system will switch to a normal split mode.</li> </ul>
It is difficult to configure the network for default search, export, and router use.	<ul style="list-style-type: none"> <li>For more information, refer to the user manual.</li> <li>If you want to check the basics of the product for a quick start, refer to the Quick Guide (export, search).</li> <li>If you use the router for network connection, refer to the "Connecting and Setting the Network" of the Quick Guide.</li> </ul>
I forgot the password.	<ul style="list-style-type: none"> <li>Contact the Recorder administrator for help.</li> </ul>
Exported data cannot be played on a PC or recorder.	<ul style="list-style-type: none"> <li>When setting the file format for exporting, first decide whether the device to be played is a PC or a recorder before setting.</li> <li>When playing on a PC, the export file format must be SEC.</li> <li>When playing on a recorder, the export file format must be recorder.</li> </ul>
Recording does not work.	<ul style="list-style-type: none"> <li>If your player does not display a Live image at all, that indicates recording does not work so first check if you see an image on the screen.</li> <li>Recording does not work if the recording settings are not properly configured. Scheduled Record : Specify a desired time in "Setup &gt; Record &gt; Recording schedule". Recording will start at the specified time. <ul style="list-style-type: none"> <li>&lt;Continuous&gt; Record : Recording will proceed in any conditions at the specified time.</li> <li>&lt;Event&gt; Record : When an event occurs, recording will perform only if the event is of alarm, motion detection and video loss. If there is no event found, recording will not perform.</li> <li>&lt;Continuous/Event&gt; Record : If there is no event found, continuous recording will perform. Whereas, if an event occurs, event recording will perform.</li> </ul> </li> </ul>
The image quality of the recording data is not good.	<ul style="list-style-type: none"> <li>Increase the resolution and quality level in "Setup &gt; Camera &gt; Profile &gt; Record". <ul style="list-style-type: none"> <li>Resolution : Select a bigger size when specifying the recording size. The recording image in the CIF format shows a deteriorated quality as it is enlarged from a small-sized image.</li> <li>Frame rate : Set the level of frame rate high.</li> </ul> </li> <li>If you increase the resolution and the recording quality, the data size increases accordingly. So the HDD will be filled faster. Overwriting will overwrite the existing data so recording will proceed at a shorter interval.</li> </ul>

Problem	Action
Frame rate of the actual recording does not match that of configured to the camera.	<ul style="list-style-type: none"> <li>If multiple profiles were applied to one camera for video transmission, the actual video stream can be serviced by the camera at a lower frame rate than specified. Configure your camera to use one profile for data streaming as possible. For example, if you set the same profile for recording and network profiles, the actual recording is made at the specified frame rate. Still, live video display using split screen mode may apply yet another profile to camera in accordance with the used screen mode. Note that allowed limit bitrate for recording / recording settings should be set to be bigger values than that of camera's feed.</li> </ul>
In the recording setting screen, the permitted level for a specific channel is displayed in orange.	<ul style="list-style-type: none"> <li>If the input data is greater than the permitted level for each channel, it is displayed in orange. Set the permitted data limit to higher than the amount of input data.</li> <li>If the sum of input data for each channel exceeds the limit, the alarm icon will be displayed. In this case, the channel exceeding the input limit does not record the entire frame, but it records the main frame only (one or two per sec).</li> </ul>
In the live screen, the [RES] icon is displayed and the message window saying "Record data size exceeded limitation. Only key frames are recorded. Please check the record settings." pops up.	<ul style="list-style-type: none"> <li>If the sum of input data for each channel exceeds the limit, the alarm icon and the pop up window will be displayed. In this case, the channel exceeding the input limit does not record the entire frame, but it records the main frame only (one or two per sec).</li> <li>Set the permitted data limit to higher than the amount of input data entered in the the "Setup &gt; Record &gt; Record setup" menu.</li> </ul>
Recording is not performed in accordance with the settings.	<ul style="list-style-type: none"> <li>If the recording status displays 'Exceeds the maximum hard disc performance', set the recording size according to the recording performance specifications for each HDD condition. For details, refer to the "Setup &gt; Setting the Recording" page in the Table of Contents.</li> </ul>
The recording screen will slow down.	<ul style="list-style-type: none"> <li>Check whether the recording performance specifications for each HDD condition match the actual recording settings. For details, refer to the "Setup &gt; Setting the Recording" page in the Table of Contents.</li> <li>If the data volume of a video exceeds the playing performance, only the main frame is played.</li> </ul>
If recording loss persists continuously	<ul style="list-style-type: none"> <li>Reset the camera recording profile to let the entire recording bps size fit the recording performance for each HDD condition. For details, refer to the "Setup &gt; Setting the Recording" page in the Table of Contents.</li> <li>Check the HDD status and determine whether inspection or replacement is necessary. For details, refer to the "Setup &gt; Setting the Device &gt; Storage device" page in the Table of Contents.</li> </ul>

