


D/N 2MP HD DOME IR IP CAMERA



Instruction Manual

Part Description & Dimensions



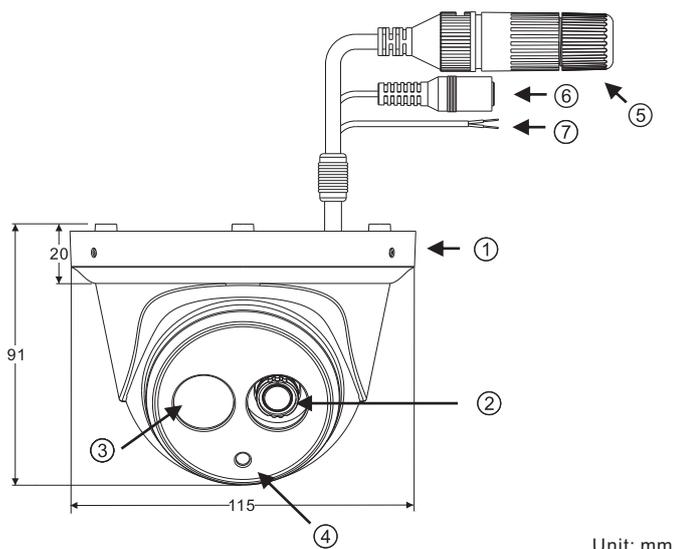


Unit: mm


- ① Upper cover
- ② Lens
- ③ Infrared LED (IR LED)
- ④ Light sensor
- ⑤ RJ-45 Ethernet connector (supports PoE)
- ⑥ Power jack (DC12V ±10%)
- ⑦ Reset Wire (strip off the wire insulation if needed; after the camera is reset, cut off the bare wire)

Installation



- Retrieve the camera and remove the bottom bracket from the upper cover with a hex key (FIG.1). Use the included screws (M4.0x25) through the holes marked as "a," and fix the camera in the desired location (FIG.2 & FIG.3).

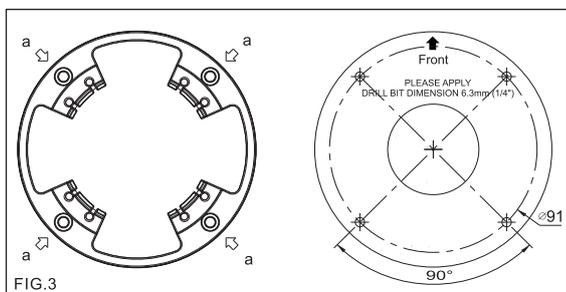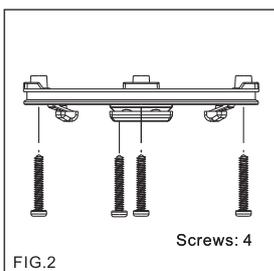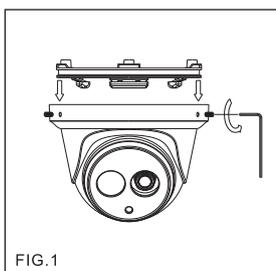


- Attach the Ethernet and power cables to the RJ-45 connector and the DC-in connector, respectively (FIG.4).

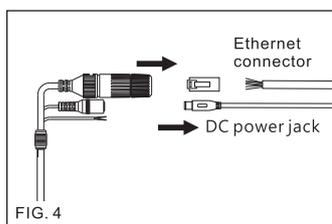


- Connect the RJ-45 Ethernet cable with a waterproof connector. First, remove the waterproof connector and unscrew the waterproof nut. Insert the Ethernet cable and connect to the RJ-45 connector with proper tools (FIG.5). Then, tighten the waterproof connector and nut before the RJ-45 connector is connected to the camera (FIG.6).

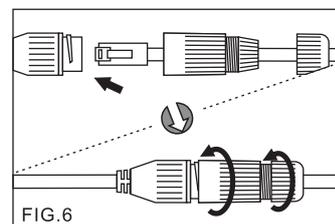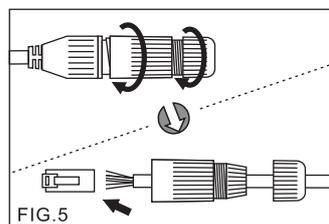

- Secure the upper cover to the bottom bracket with a hex key (FIG.7).

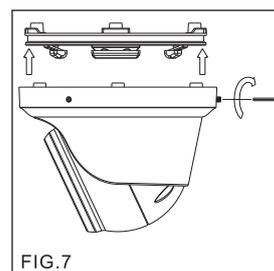

- Adjust the pan, tilt, and azimuth of the camera to the desired location (FIG.8). After the adjustment, tighten the screws to complete the installation.

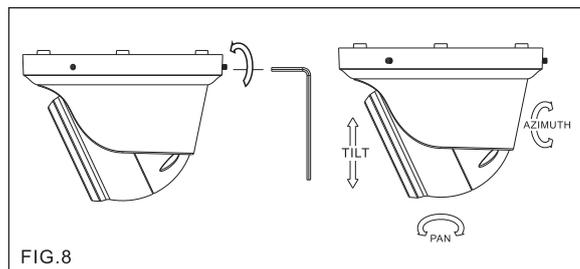


Make sure the light sensor is at the lowest side of the camera (FIG.1).


System Architectures

For connecting D/N 1080P HD IP Camera series to the network, please follow one of the system architectures:


- Use DC12V power adaptor and network switch connected to a network.

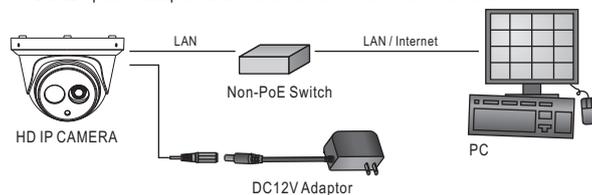

- Use with PoE of the network switch connected to the network.

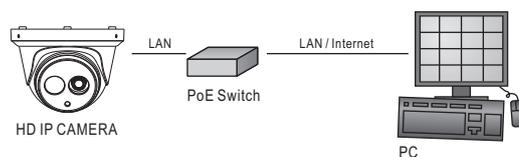

- Use PoE power injector and the network switch connected to the network.

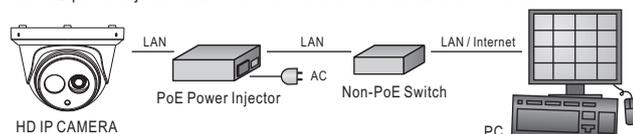

Emergency Factory Default

- To restore the hardware to factory default settings, please follow these steps:
1. Short the "RESET wire" for 10 seconds before releasing.
 2. The camera will be restored to factory default settings after approximately 90 seconds and will reboot automatically.
 3. Search for the IP device using the IPScan software.
 5. Start the IP device via an Internet browser.
 6. Enter the default username "admin" and password "pass" to operate.

NOTE: the IP address will revert to the default setting of 192.168.0.200.

Before Accessing IP Cameras

Before accessing the IP camera, make sure that the camera's RJ-45 network, audio, and power cables are properly connected. To set the IP address, consult your network administrator for an available IP address. The default IP address for each IP camera is 192.168.0.200. Users can use the default IP address to verify the camera's network connection.

Software Requirements


Universal ActiveX software components are required for online display of MJPEG or H.264 Full HD video. When you log in to the IP camera from Internet Explorer, a security warning dialog box will prompt the installation of the Universal ActiveX plug-in. Click **Install** to download it.



Configuring IP Addresses with IPScan Software

To configure an IP address using IPScan, you can copy the IPScan software from the installation CD, and paste to your computer. Alternatively, you can execute the IPScan software from the installation CD. To change the settings of the IP address, subnet mask, gateway, or HTTP port, you can follow the steps below:

1. Run the IPScan software.
2. Click **Refresh**. All available devices should be listed in the device list.
3. Select your device from the list provided.
4. Change the IP address, subnet mask, gateway, or HTTP port for the IP camera.
5. Click **Apply** to submit the settings.
6. Click **Refresh** to verify the settings.

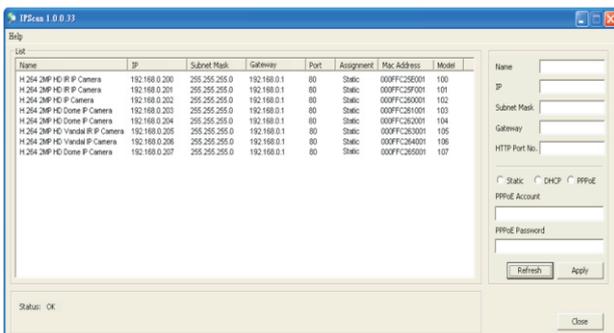


Configuring IP Addresses via Web Interface

To change an IP address via a web interface, type the default IP address (192.168.0.200) in the Internet browser and follow the steps below:

1. Log in to the H.264 Full HD IP camera with the default username "admin" and default password "pass".
2. Click **Basic Mode**.
3. Click **Network->General**.
4. Change the IP address, subnet mask, gateway, or HTTP port for the IP camera.
5. Click **Submit** to verify the settings.

Internet Browser Settings & Application Required


Make sure your Internet browser allows the signed ActiveX plug-in to work on your computer. To do this, open Internet Explorer and go to **Tools->Options->Security Settings**. Set "Download Signed ActiveX plug-in controls" to "Prompt" and "Run ActiveX control and plug-in" to "Enable".

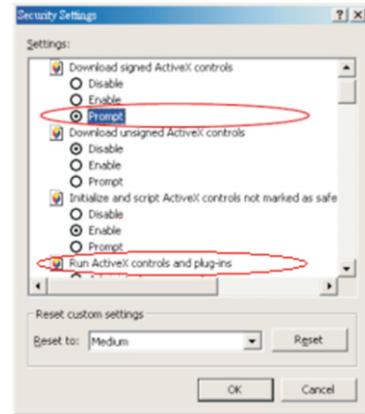

Once complete, you can access the IP camera's live video by entering the default IP address via your Internet browser. When the security warning dialog box appears, click **OK** to download the ActiveX plug-in directly from the IP camera.

Login

There are two levels of user authentication (admin and guest) that can access the IP camera. Administrator is authorized to reset basic mode settings and see live video, while the guest is only allowed to see live video.

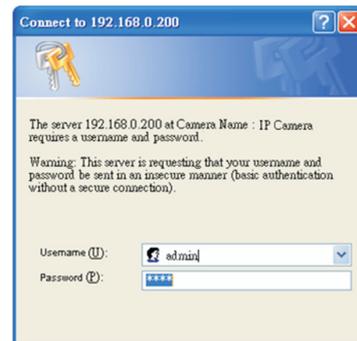

The default usernames and passwords are as follows:

	Administrator
Username	admin
Password	pass

To log on to the IP camera, please enter the username and password on the login page and click **Submit** to enter the system.