

LILIN[®]

iMEGALITE



Full HD H.264 IP Camera
iMEGALITE series



Instruction Manual

Summary

The iMEGALITE series includes Full HD IP cameras that adopt the latest compression technologies providing Triple Streaming of H.264 and JPEG in different resolutions. LILIN's Triple Streaming technology transmits digital video at various bitrates and frame rates to suit both high and low bandwidth network environments.

The iMEGALITE series cameras are equipped with progressive mega-pixel CMOS sensors providing superior video quality. LILIN's DSP technologies provide Wide Dynamic Range (WDR), 3D noise reduction, Backlight Compensation (BLC), adjustable shutter speed, and privacy mask features.

The built-in intelligent video analytics engine enables audio and motion detection. Other useful features include two-way audio, SD card recording, mobile phone live access, JPEGs sent as email snapshots, and JPEGs sent to an FTP.

The iMEGALITE series cameras have the latest technologies providing mega-pixel H.264 video, outstanding DSP capacities, built-in video analytics, and built-in PoE. All iMEGALITE cameras are ONVIF compliant.

LILIN's CMX HD software and IP cameras maximize system performance providing an integrated system solution for migrating to IP Video.

Key Features

- Full HD IP cameras capable of recording at 15 FPS
- Supports dual encoding formats of H.264 and JPEG
- Triple Streaming technology, 3 concurrent streams available
- Sense Up+ for low light conditions
- Day or night video quality scheduling
- Audio and motion detection for notification via email or FTP
- Supports 3D DNR, WDR, BLC, adjustable shutter speed and privacy mask
- Two-way audio (for two-way audio models only)
- Bitrate and frame rate adjustable on-the-fly
- Supports Android, iPad, and iPhone mobile live monitoring
- Supports dynamic DNS (DDNS) and network time protocol (NTP)
- Supports PCM/G.711
- Supports ONVIF protocol
- Supports CMX Software HD 3.6

Trademark Acknowledgments

Microsoft, Windows 2000, Windows XP, Windows Vista, Windows 7, ActiveX, and Internet Explorer are registered trademarks of Microsoft Corporation in the U.S. and/or other countries.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries. Flash, Macromedia, and Macromedia Flash Player are either trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Linux and DynDNS are registered trademarks of the respective holders.

Intel, Pentium, and Intel® Core™ 2 Duo are registered trademarks of Intel Corporation.

FFmpeg is a trademark of Fabrice Bellard, originator of the FFmpeg project.

QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Computer, Inc., used under license there from.

Other names of companies and their products mentioned in this manual may be trademarks or registered trademarks of their respective owners.

Other References

Mobile phone

For free mobile surveillance, refer to the eMobile document in the product CD or download the document from our company website.

LILIN Universal ActiveX Control

Sample codes and documents are included in the product CD and can be downloaded from our company website.

LILIN HTTP API

For non-ONVIF integration, please see the LILIN HTTP API document. We adopt HTTP API document for all LILIN IP cameras.

Caution

- Do not drop or strike the equipment
- Do not install the equipment near any naked flames or heat sources
- Do not expose this unit to rain, moisture, smoke or dust environments
- Do not cover the opening of the cabinet with cloth and/or plastic or install this unit in poor ventilated places. Allow 10cm between this unit and its surroundings
- Do not continue to operate the unit under abnormal conditions such as smoke detection, strange smell or no display on screen whilst power is turned on
- Do not touch the power connection with wet hands
- Do not damage the power cord or leave it under pressure
- To avoid unnecessary magnetic interference, do not operate this unit near magnets, speaker systems, etc.
- All connection cables should be grounded properly



Table of Content

Chapter 1	System Overview	6
Chapter 2	Before accessing IP cameras	7
Chapter 2-1	Configuring IP addresses using IP scan utility	7
Chapter 2-2	Configuring IP addresses using HTML page	7
Chapter 2-3	Internet browser settings & software components required	8
Chapter 2-4	Login	9
Chapter 3	H.264 Full HD IP camera network features	10
Chapter 3-1	IP Camera Operational HTML	10
Chapter 3-2	IP Camera Main Controls	12
Chapter 3-2-1	Two-way Audio	12
Chapter 3-2-2	Record in a Local PC	12
Chapter 4	Basic Settings.....	13
Chapter 4-1	Configuration	13
Chapter 4-2	System Settings	13
Chapter 4-3	Timer.....	14
Chapter 4-4	Video / audio settings	14
Chapter 4-4-1	Weighted Mode	15
Chapter 4-5	Basic Quality	16
Chapter 4-6	Network Settings	16
Chapter 4-6-1	DHCP Setting	17
Chapter 4-7	HTTP & RTSP Service.....	17
Chapter 4-8	DDNS Settings	18
Chapter 4-9	UPnP Settings.....	18
Chapter 4-10	Maintenance	19
Chapter 5	Advance Settings	21
Chapter 5-1	System Settings	21
Chapter 5-1-1	User Setting	21
Chapter 5-1-2	System Log.....	21
Chapter 5-2	Advance Video and Audio Settings	22

Chapter 5-2-1 Advance Video Setting	22
Chapter 5-2-2 Sense Up+	23
Chapter 5-2-3 IR Cut Removable	24
Chapter 5-2-4 Video Privacy Mask.....	24
Chapter5-2-5 Audio Setting.....	25
Chapter 5-3 IP Network Advance	25
Chapter 5-4 Event	25
Chapter 5-4-1 Motion Alarm, or Audio Detection Event	26
Chapter 5-4-2 Motion Area.....	26
Chapter 5-4-3 Audio Detection Event.....	27
Chapter 5-4-4 Alarm Input Detection Event	27
Chapter 5-4-5 Network Loss Detection Event.....	28
Chapter 5-5 Notification	28
Chapter 5-5-1 FTP Notification	28
Chapter 5-5-2 SMTP Email Notification	29
Chapter 5-5-3 Event Triggering SD Card Recording	30
Chapter 5-5-4 SD Card Recording Setting.....	30
Appendix	31
Advance Network DDNS and PPPoE Technologies	31
SD Card Compatibility List	31
Specification	32

Chapter 1 System Overview

Chapter 1-1 System Requirements

The IP camera's Full HD H.264 video compression technology provides high compression rate and superior video quality. However, the performance highly depends on both the CPU computational power of the users PC and the network bandwidth for transmitting video streaming. The following sections specify the system requirements for running a Full HD H.264 IP camera.

Chapter 1-2 Software Requirements

Merit LILIN Universal ActiveX software components are required for web interface displaying JPEG or H.264 Full HD video. When you first login to the IP camera using Internet explorer, a security warning dialog box will appear for LILIN Universal ActiveX. Click "Install" to download.




Chapter 2 Before accessing IP cameras

Before accessing the IP camera, make sure that the camera's RJ-45 network, audio, and power cables are properly connected. To set the IP address, consult your network administrator. The default IP address for each IP camera is 192.168.0.200. Users can use the default IP address to verify the camera's network connection.

Chapter 2-1 Configuring IP addresses using IP scan utility

To configure an IP address using the IP scan utility, copy the IP scan application from the installation CD to your local PC. Alternatively, you can execute the IP scan software from the installation CD directly. The IP scan utility can also be downloaded from our company website. To change an IP address, subnet mask, gateway, or HTTP port, follow the steps below:

- Run the IP scan utility
- Click "Refresh". All available devices will be listed in the device list
- Select the device item from the device list
- To edit or modify addresses, subnet mask, gateway, or HTTP port, use the box
- Click "Apply" to configure the settings
- Click "Refresh" to verify the settings

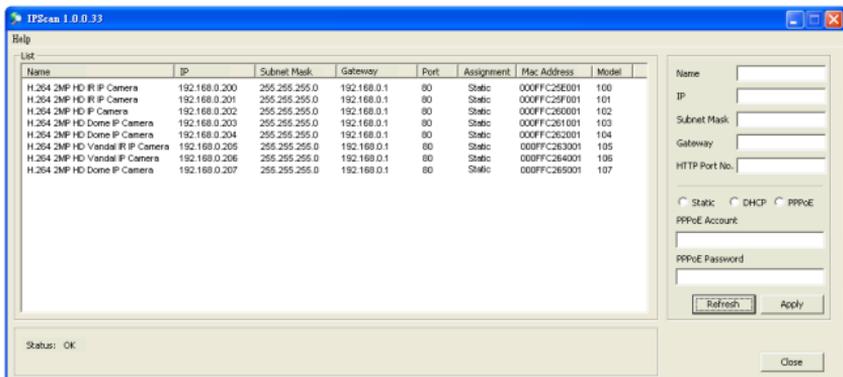

Chapter 2-2 Configuring IP addresses using HTML page


To change an IP address using a HTML page, type the default IP address (192.168.0.200)

into the Internet browser and follow the steps below:

- Login to the H.264 Full HD IP camera using default username “admin” and default password “pass”
- Click the “Basic Mode” configuration hyperlink
- Click the “Network->General” hyperlink
- To edit or modify addresses, subnet mask, gateway, or HTTP port, use the edit box
- Click “Submit”

Chapter 2-3 Internet browser settings & software components required


Make sure your Internet browser allows signed ActiveX plug-in to run on your PC. Set “Download Signed ActiveX plug-in controls” to “Prompt” and “Run ActiveX control and plug-in” to “Enable”. You can set this by Internet Explorer->Tools->Options->Security Settings.

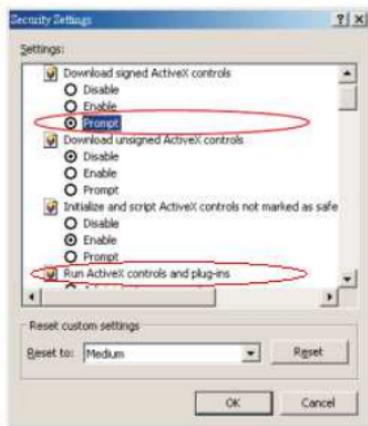

Once complete, you can access the IP camera’s live video by inserting the default IP address into your Internet explorer browser. A security warning dialog box will appear. Click “OK” to download the ActiveX directly from the IP camera.

Chapter 2-4 Login

There are several levels of user authentication including administrator and guest.

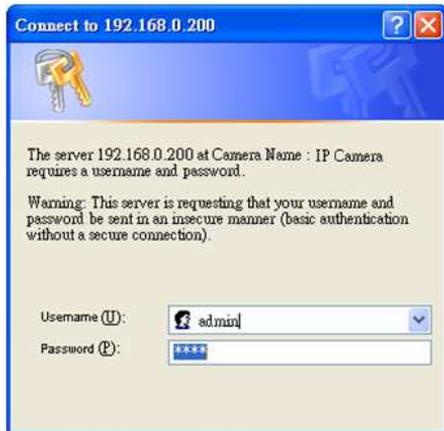

The usernames and passwords areas follows:

	Administrator	Viewer
Username	admin	guest
Password	pass	guest


To login to the IP camera, type the username and password into the HTML login page and click "Submit".

Chapter 3 H.264 Full HD IP camera network features

When logged in as an administrator there are two main features; 1) system operation and 2) configuration.


Chapter 3-1 IP Camera Operational HTML

Page layout

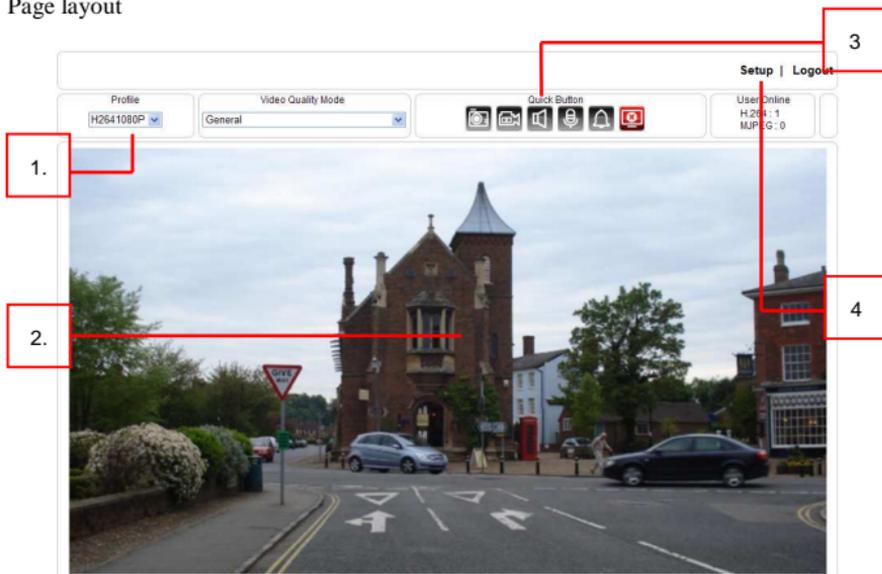


1. **Profile switching menu**—Switching from one profile to another
2. **LILIN Universal ActiveX control**—Display RTSP H.264 or JPEG network video
3. **Quick button control panel**—IP camera control panel
4. **Setup menu**—IP camera setup menu

Universal ActiveX control provides an ePTZ (electronic Pan, Tilt, and Zoom) feature option. To perform an ePTZ tour, use a computer mouse to drag the ActiveX control. The LILIN Universal ActiveX control is now in eZoom mode.

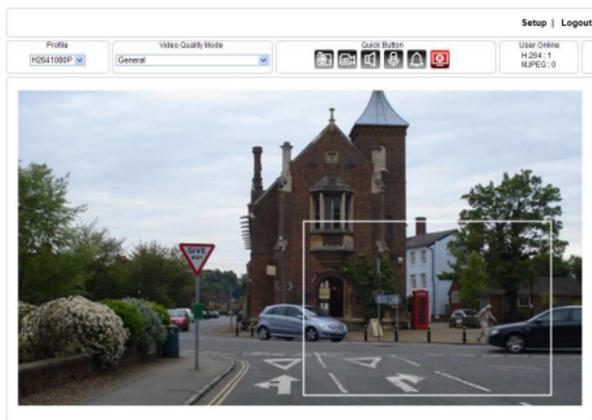

Use a computer mouse pointing to the sub-window of PIP view. Dragging the sub-window will allow ePan and eTilt actions to be performed. The mouse scroll button will allow the user to zoom in and out.

Right-mouse click on the video to disable the ePTZ feature.

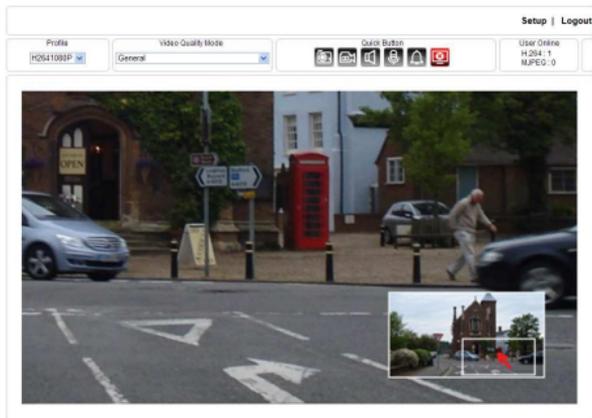

Chapter 3-2 IP Camera Main Controls

The quick control panel buttons are described below:

	Snapshot: Take a snapshot of the video
	Recording at PC
	Speaker on: Set audio on (for audio model only)
	Microphone on: Speak to remote site (for audio model only)
	Activate alarm output (for alarm model only)

Chapter 3-2-1 Two-way Audio



For models with two-way audio, click the microphone icon to speak to the remote site. To stop speaking to the remote site, click the microphone icon again.




Click the speaker icon to listen to the remote site. To stop listening to the remote site, click the speaker icon again.

Note: Only IP camera models with audio support this feature.

Chapter 3-2-2 Record in a Local PC

To record at a local PC, right-click on the LILIN Universal ActiveX control. You can specify recording paths and recording sizes.

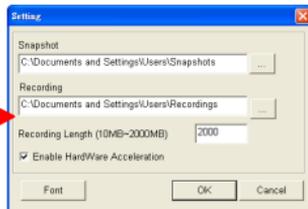

To playback the AVI video, click on Windows Media Player.

Chapter 4 Basic Settings

Live | Basic Mode | Advance Mode | Language | Logout

System

Video / Audio

Network

Maintenance

Chapter 4-1 Configuration

As an administrator, you can configure the IP camera via a standard HTML web page.

Chapter 4-2 System Settings

System settings contain the IP camera server system information including MAC address, firmware version, user and system timer. To change or use these options, follow the below instructions.

Basic >> System >> General	
MAC Address	00:0f:fc:26:22:42
Firmware Version	1.1.001e
OS Version	Linux 2.6.38
System Reboot Time	2012/11/02 18:35:08
Device Name	<input type="text" value="H.264 2MP HD IP Camera"/>
OSD Font	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
OSD Timer	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
ActiveX OSD Display	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
ActiveX OSD Name	<input type="text" value="H.264 2MP HD IP Camera"/>
Low Latency Mode	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
<input type="button" value="Submit"/>	

Firmware Version

A firmware update allows users to upgrade the IP camera's firmware remotely.

Device Name

The device name can be found using the IP scan utility. This will identify the IP cameras. To change the device name, enter the new name of the IP camera and click "Submit".

OSD Font

Camera OSD name

OSD Timer

Camera OSD time

ActiveX OSD Name

Camera OSD name only on ActiveX

Chapter 4-3 Timer

The H.264 Full HD IP camera allows users to change the system timer via a standard HTML web page. To change the camera's system timer, enter the date and time into the edit boxes. Click "Submit" to apply.

The screenshot shows a web browser window with the address bar displaying "Basic >> System >> Timer". The page content includes the following fields and controls:

- Server Time:** Tue, 23 Oct 2012 20:24:39 +0800
- Synchronize with NTP:** Radio buttons for "Every Hour" (selected) and "Off".
- Time Server:** A dropdown menu showing "time.stdtime.gov.tw".
- Time Zone:** A dropdown menu showing "(GMT +08:00) Taipei".
- Time:** A date and time picker showing "2012 / 10 / 23" and "20 : 24 : 39". To the right of the time picker is a button labeled "Synchronize with PC".
- Submit:** A button at the bottom center of the form.

Synchronize with NTP

To synchronize the Internet time system, change the Auto Synchronize option to "Every Hour". The H.264 Full HD IP camera will synchronize its system timer with a time server every hour.

Note: Network Time Protocol feature requires Internet connection.

Chapter 4-4 Video / audio settings

To transmit H.264 Full HD video over a low bandwidth network such as the Internet, set the bitrate close to the networks upload bandwidth. H.264 Full HDIP cameras can encode frames based on the bitrate setting.

Basic >> Video / Audio >> General

Profile : Profile 1 ▾
 TV Out : NTSC , PAL

H.264 :1920 x 1080
 Profile Name : H2641080P
 Output Frame Rate : 15 ▾
 GOP (Group of Pictures) : 15 ▾
 VBR/CBR Mode : CBR ▾
 Bit Rate : 3 Mbps ▾
 Alarm Weighted Mode : Enable Disable


JPEG :720 x 480
 Profile Name : JPEG480P
 Output Frame Rate : 5 ▾
 Image Quality : 60 ▾
 Alarm Weighted Mode : Enable Disable

H.264 :720 x 480
 Profile Name : H264480P
 Output Frame Rate : 15 ▾
 GOP (Group of Pictures) : 15 ▾
 VBR/CBR Mode : CBR ▾
 Bit Rate : 1 Mbps ▾
 Alarm Weighted Mode : Enable Disable

- Profiles: select streaming combination
- Profile Name: description of the profile
- Compression: compression type of the profile
- Resolution: the resolution of the compression
- VBR/CBR: VBR: video quality encoding mode/constant bitrate encoding mode.
- Bitrate: the maximum bit rate available for a network connection
- Output frame rate: the frame rate of the profile
- GOP: 1 frame period per second
- TV Output: NTSC/PAL video system
- Power line frequency: 60Hz/50Hz lighting power frequency

Chapter 4-4-1 Weighted Mode

Weighted mode is activated when an alarm is triggered. When triggered the stream rate increases to the maximum speed, i.e. 30 FPS. If there is no alarm activity, the streaming remains low at 1 FPS saving bandwidth and storage.

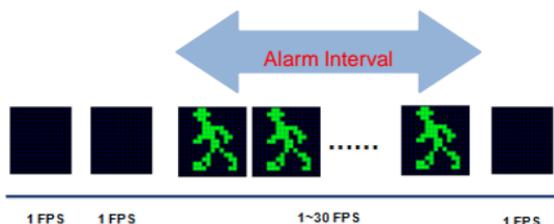


Chapter 4-5 Basic Quality

To determine the video quality, adjust the brightness, contrast, hue, saturation, and sharpness accordingly. The IP camera can be set to day and/or night for optimum video quality.

Day or Night Video Mode

The day or night video quality can be adjusted separately; the quality setting is scheduled based on the IR cut scheduling table.

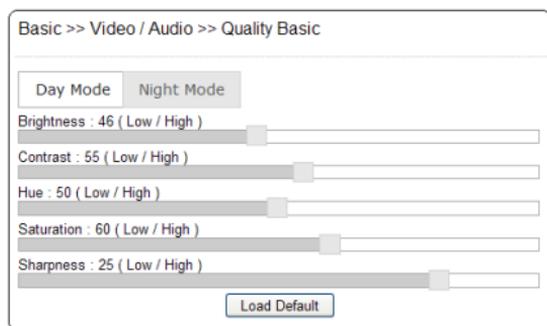

Chapter 4-6 Network Settings

Network settings are the basic settings that connect H.264 Full HD IP cameras to the network. The default IP address is 192.168.0.200. A user can use this IP address to verify the network connection between a local PC and H.264 Full HD IP camera using the Internet browser.

For a local area network configuration, enter the IP address, subnet mask, and gateway IP. Click “Submit” to update the settings.

Basic >> Network >> General

Network Static DHCP PPPoE

IP Address

Subnet Mask

Gateway

Default DNS

Second DNS

Account

Password

For Internet access configuration, contact your local Internet Service Provider (ISP) for a global IP address. Once the Internet connection is installed, enter the IP address (global), subnet mask, and gateway IP from the ISP.

- **Default DNS IP Address**—First Domain Name Server, the IP address of the domain name server
- **Second DNS IP Address**—Second Domain Name Server, the IP address of the domain name server, a backup DNS server for default DNS
- **PPPoE Account**—Account name of PPPoE service
- **PPPoE Password**—Password of PPPoE service

Chapter 4-6-1 DHCP Setting

A router, gateway, or other DHCP software server can remotely assign an IP address to the H.264 Full HD IP camera. There is no need to configure the IP address, subnet mask, and gateway. Since the DHCP may assign a different IP address to the IP camera after power off, a user can use the IP scan utility to launch the Internet browser and search for the IP camera. To enable DHCP, click the DHCP option and click “Submit”.

Note: Once the DHCP option is enabled, the IP camera is assigned an IP address by the DHCP server. This feature is only permitted in LAN environments.

Chapter 4-7 HTTP & RTSP Service

HTTP protocol is a reliable protocol that sends video streams. Port forwarding technology can be used to send video over the Internet. Details are described in the appendix. To change the HTTP service’s port number, consult your network administrator. Change the port number at the port field and click “Submit”.

Basic >> Network >> HTTP/RTSP Service

HTTP Port

RTSP Port

RTCP Check On Off

Video Port HTTP Port RTSP/UDP Port

Chapter 4-8 DDNS Settings

DNS stands for Domain Name Server. It provides a domain name translation service for a device's IP. The domain name can be easier to remember than numeric values (IP). The DNS service requires service registration and subscription. DynDNS (DDNS) provides a domain name service without subscription.

Basic >> Network >> DDNS

DynDNS

DDNS Enable Disable

Account

Password

New Password


Host name
<http://27fff0.ddnsipcam.com>

Note: The DDNS feature requires an Internet connection.


To use DDNS, go to www.ddnsipcam.com. If the IP camera is on Internet with a global IP address, use the last 6 digits of the MAC address as the host name with default account and the default password, (pass). The IP camera will automatically register to www.ddnsipcam.com without further registering. For example, if the IP camera is on the Internet, type “27fff0.ddnsipcam.com” into a browser with login name “27fff0” and password “pass” to log in.

Chapter 4-9 UPnP Settings

The UPnP service is a network protocol that allows Windows PC users to explore IP cameras within a LAN. In Windows, click on the Network of File Explorer to see the IP cameras via the UPnP protocol.

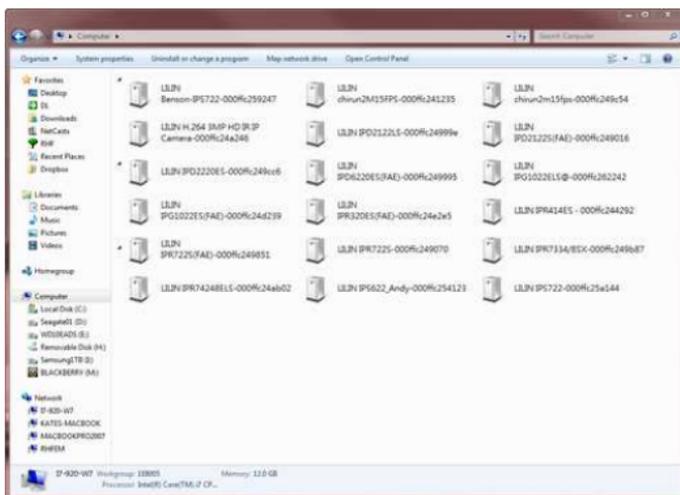

To enable the UPnP service, visit Basic->Network->UPnP.

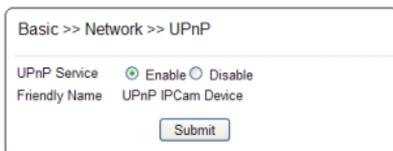

Chapter 4-10 Maintenance

The load default feature allows you to restore the factory settings. There are certain settings such as IP addresses and video systems that are not affected by this operation. To reboot the H.264 Full HD IP camera, click the Reboot System hyperlink.

To update the firmware for the IP camera, click the Firmware Update hyper link. Locate "flasham32.bin" in your computer by clicking "Browse". Click "Submit" to finish the firmware upgrade.

Basic >> Maintenance >> Firmware Update

Please do not turn off power and wait until this web page shows up automatically. Fail to update firmware correctly due to network communication issue that it may damage this machine and is required to ship back to your vender for repair.

File System(flashm32.bin/flashmk32.bin/flashml32.bin)

flashm32.bin:Application Firmware

flashmk32.bin:Linux OS

Load Default

Reboot System

Note:If you forget the password, please return the device to us. See appendix for emergency default.

Chapter 5 Advance Settings

Live | Basic Mode | Advance Mode | Language | Logout

System

Video / Audio

Network

Event

Notification

Maintenance

Chapter 5-1 System Settings

Chapter 5-1-1 User Setting

There are ten user accounts allowed for the system. Each account can be configured for access rights. To add/edit a user, click “Add/Edit” user. To access an IP camera without authentication, set the Bypass “Logon” radio to ON.

Advance >> System >> User

Bypass Logon On Off

User admin

Account

New Password

Confirm Password

User Group Administrator, Operator, Viewer

Administrator

Panel Control

Streaming 1 (H2641080P)

Streaming 2 (JPEG480P)

Streaming 3 (H264480P)

To change the account name, type the new account name in the “Account” box. To change the password, type the new password in the “New Password” box. Click “Submit” to update the user settings. To delete a user, click “Remove User”.


Administrator: Enable or disable setup mode for a user

Panel Control: Enable or disable control panel for a user

Streaming: Enable or disable a streaming for a user

Chapter 5-1-2 System Log


The IP camera documents can be accessed as operational logs. The operational log can be found at Advance->System-System Log link. Click “Save” to save the log as a text file. To erase the log, click "Clean All".

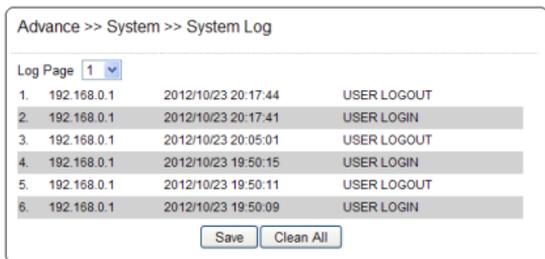

Chapter 5-2 Advance Video and Audio Settings

Chapter 5-2-1 Advance Video Setting

To setup Exposure Control, Automatic Gain Control, White Balance Control, adjust the values accordingly.

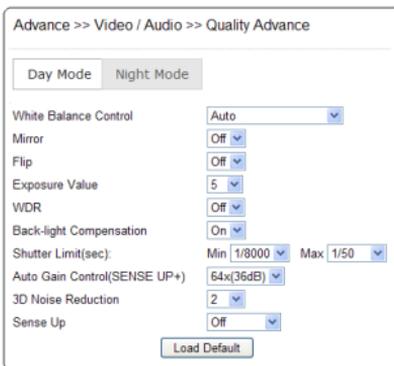

To increase, the sensitivity at night, adjust the Sense Up feature.

- Exposure Value: adjust the value of the image exposure
- WDR: enable or disable the Wide Dynamic Range feature
- Black-light Compensation: increase the exposure to the darker object
- Shutter limited: min and max shutter range
- White Balance Control: automatically adjusts depending on the ambient light conditions including tungsten, indoor, fluorescents, or outdoor environments
- Mirror: video mirroring
- Flip: video flipping

Sense Up+

- Auto Gain Control, AGC (Sense Up+): increase the gain of the video signal. If AGC cannot gain enough light, set the Sense Up feature. However, the Sense Up feature may cause motion blur at night
- 3D Noise Reduction: reduces noise at night
- Sense Up: slow shutter feature for increasing CMOS sensitivity at night

No Sense Up




3 Frame Sense Up



Chapter 5-2-2 Sense Up+

The Sense Up+ feature is for low-light and high sensitivity DSP control that enables outstanding video quality in low-light environments. Sense Up+ technology can be used for both black-and-white and/or color video modes. To enable Sense Up+, first enable the Auto Gain Control (AGC) setting. The combinational use of 3D noise reduction (3D DNR) can reduce noise in low light environments. AGC and 3D DNR do not cause motion blur. If the sensitivity is not good for the environment, the Sense Up feature can instead be used, however, this may cause motion blur in low light conditions.

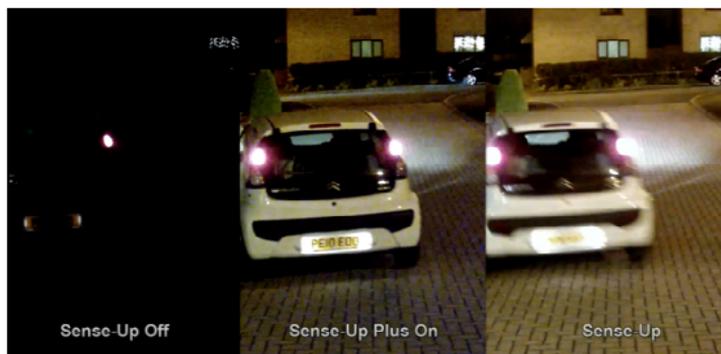

Chapter 5-2-3 IR Cut Removable

The IR cut removable filter allows the user to schedule IR activation by (1) auto, (2) day, (3) night, or (4) schedule. When the setting is set to "Auto", the IR activation is determined by the light sensor. The "Night" setting means that the IR cut filter is removed. "Day" setting means that the IR cut filter is always on. When the activation schedule is enabled, the IR cut filter can be scheduled based on specific time frames. For example, a user can set the IR cut activation time starting from 19:00 pm (day to night time) until 6:00 am (night to day time).

Advance >> Video / Audio >> IR Cut Removable

Auto , Switch Delay Time

Day Mode

Night Mode

Schedule

Day to Night Time :

Night to Day Time :

Chapter 5-2-4 Video Privacy Mask

Each IP camera has four privacy masks. Select the mask number and drag the mask onto the video area.


Advance >> Video / Audio >> Privacy Mask



Chapter 5-2-5 Audio Setting

Audio setting is based on the following:

- MIC Volume: MIC or line input volume
- Audio Input Mode: choose MIC input or Line input.
- Audio Input Gain: voice input gain control
- Audio Output Volume: line output volume adjustment
- Audio Coding Type: G.711 u-Law
- Sample Rate: audio sample rate
- Bit Rate: audio bitrate.

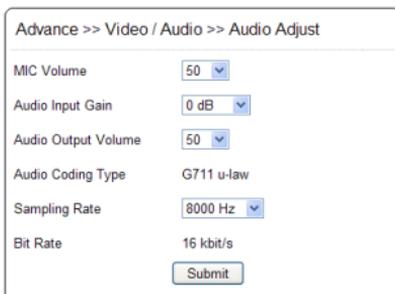


Advance >> Video / Audio >> Audio Adjust

MIC Volume	50
Audio Input Gain	0 dB
Audio Output Volume	50
Audio Coding Type	G711 u-law
Sampling Rate	8000 Hz
Bit Rate	16 kbit/s

Submit

Chapter 5-3 IP Network Advance

To block unauthorized IP addresses, click Advance->Network->IP Address Filtering. Enter the IP address and click “Add”. To delete the filtered IP address, click “Delete”.

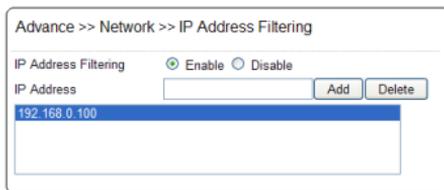

Advance >> Network >> IP Address Filtering

IP Address Filtering Enable Disable

IP Address Add Delete

192.168.0.100

Chapter 5-4 Event

For motion, audio, and network detection configuration, visit Advance->System->Event for summary report. To edit an event, click “Edit Event”.

Advance >> System >> Event

Event Name Motion Detection Edit Event

Event	Status	FTP	SMTP	SD Card	Alarm Output	Schedule
Motion Detection	Disable	V			V	Auto
Audio Detection	Disable			V	V	Auto
Alarm Detection	Disable		V		V	Auto
Network Detection	Disable					Auto

Chapter 5-4-1 Motion Alarm, or Audio Detection Event

For motion, digital input, or audio alarm notifications, users can configure event actions to send JPEGs to an FTP server, to send JPEGs to an email account, and/or trigger SD card recording for video. To schedule the event task, click “Schedule”. A weekly schedule box will appear. Edit as appropriate.

Advance >> System >> Event

Event Motion Detection

Enable

Action

FTP Service Dwell Time 1

SMTP Service Dwell Time 5

SD Card Service Dwell Time 60

Alarm Output Dwell Time 5

Schedule

Always

Schedule


	0:00	6:00	12:00	18:00
Sun	Event Schedule	Event Schedule	Event Schedule	Event Schedule
Mon	Event Schedule	Event Schedule	Event Schedule	Event Schedule
Tue	Event Schedule	Event Schedule	Event Schedule	Event Schedule
Wed	Event Schedule	Event Schedule	Event Schedule	Event Schedule
Thu	Event Schedule	Event Schedule	Event Schedule	Event Schedule
Fri	Event Schedule	Event Schedule	Event Schedule	Event Schedule
Sat	Event Schedule	Event Schedule	Event Schedule	Event Schedule

Event Schedule
Not Scheduled

Submit Cancel


Chapter 5-4-2 Motion Area

Once the above information is set, configure the motion area of the monitored environment. To configure a motion area, click on the video area.

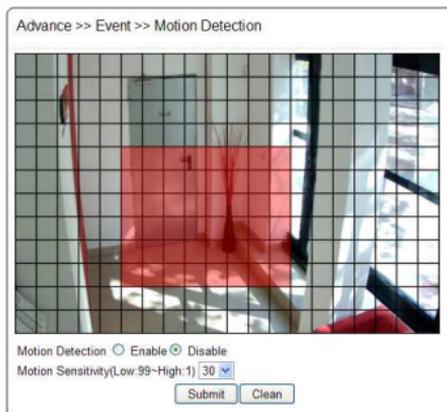

Chapter 5-4-3 Audio Detection Event

For audio supported models, the IP camera will have an audio detector that will detect the acoustic level. If the volume exceeds the audio sensitivity value, the audio detector will trigger an alarm and send a notification.

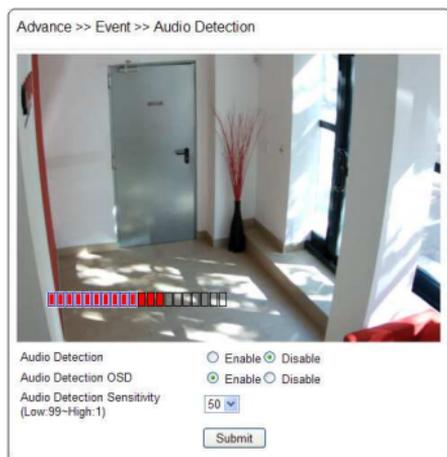

Chapter 5-4-4 Alarm Input Detection Event

To enable external alarm digital input via an IP camera, visit Advance->Event->Alarm Detection. Select NO/NC for the digital input.

- **Alarm Notification**—Enable alarm notification
- **Alarm Input Mode**—Normal open/normal close for detecting alarm inputs

Advance >> Event >> Alarm Detection

Alarm Notification Enable Disable

Alarm Input Mode NO NC

Chapter 5-4-5 Network Loss Detection Event

Advance >> Event >> Network Detection

No Network Activity Enable Disable

Chapter 5-5 Notification

The alarm or motion notification feature can be triggered to send snapshots to an FTP account or an email account. For alarm notification configuration, follow the instructions below:

Chapter 5-5-1 FTP Notification

To enable the alarm or motion sending FTP feature, setup the following FTP account information.

Advance >> Event >> FTP Service

FTP Server IP/DNS	<input type="text" value="ftp_server.com"/>
Account	<input type="text" value="Account"/>
Password	<input type="password" value="••••••"/>
Directory	<input type="text" value="/alarm_jpeg/"/>
Prefix	<input type="text"/>
Date Format	<input type="text" value="YYMMDD_hhmmss"/> <input type="button" value="v"/>
Posfix	<input type="text"/>

- **FTP server IP/DNS**— IP address or domain name of the FTP server
- **Account**— account of the FTP server

- Password— password of the account
- Directory—file path for storing the JPEG snapshots
- Prefix—prefix of the JPEG filename
- Date format—date format string for the JPEG filename
- Postfix—postfix of the JPEG filename

Chapter 5-5-2 SMTP Email Notification

Alarm or motion notifications can be set to send a snapshot to an email account. To enable alarm or motion sending email snapshots, setup an email account.

Advance >> Event >> SMTP Service

E-mail Sender Setting

E-mail Address1

E-mail Address2

E-mail Address3

E-mail Address4

E-mail Address5

E-mail Receiver Setting

E-mail Address

SMTP Server

SMTP Authentication AUTH LOGIN AUTH SSL

SMTP Port

Authentication Enable Disable

Auth Account

Auth Password

- **Email receiver settings**
Email address— email address of the recipient
- **Email sender setting**
Email address— email address of the sender
- **SMTP server— sender's SMTP server**
Authorization— SMTP server's authorization option if applicable
Authorization account— account of the SMTP server
Authorization password— password of the account

Chapter 5-5-3 Event Triggering SD Card Recording

To record video onto an SD Card, insert an SD card into the SD card slot. Enable the SD card recording feature. The IP camera will start to record video to the SD card.

Chapter 5-5-4 SD Card Recording Setting

For SD card recording settings, see the below:

Advance >> System >> SD Card Service

SD Recording	<input type="radio"/> On <input checked="" type="radio"/> Off
Recording Format	H2641080P
SD Card Status	NORMAL
SD Card State	SD Card No Plug In
SD Card Total Bytes	0 MBytes
SD Card Free Bytes	0 MBytes

- SD Recording: enable SD card recording
- Recording Format: recording resolution
- SD System Status: SD Linux mounting status
- SD Card State: SD card inserting status
- SD Card Total Space: SD card total capacity
- SD Card Free Space: SD card free space

To un-mount the SD card, click “un-mount SD Card”. The system may crash if the SD card is a not un-mounted properly.

To download the SD card AVI recoding clips, click Advance->System->SD Card Backup File. Right mouse click the required files and save the AVI them to a local PC.


Advance >> System >> SD Card Backup File

- 20120927
 - 09
 - 11
 - 12
 - 2012/09/27 12:00:20
 - 2012/09/27 12:02:20
- 20121005
- 20121008
- 20121027

Appendix

Advance Network DDNS and PPPoE Technologies

The advantage of using DDNS and PPPoE is to remove the costs associated with paying for a static IP address. H.264 AVC IP camera's PPPoE service will provide a dynamic global IP address after the system reboot has been carried out. This is the address needed to access the video server over Internet. The IP address may get changed periodically. When ISP re-assigns a new IP address to the H.264 AVC IP camera, the IP camera notifies the DDNS service. A remote PC can access the H.264 AVC IP camera by typing the domain name in a browser. The domain name gets resolved by the DDNS service and gets translated to its dynamic global IP address. The dynamic global IP address can now be accessed by the remote PC.

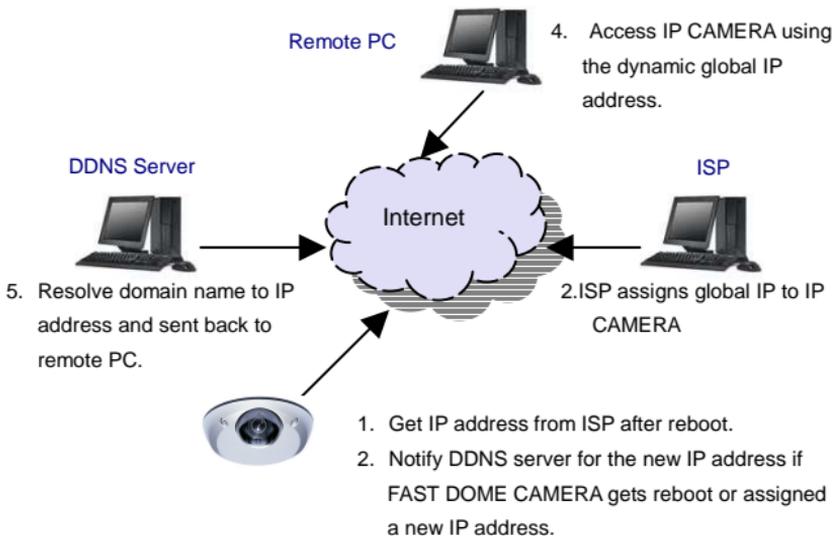

SD Card Compatibility List

Manufacturer	Size	SDHC/SDSC
Sandisk	8 / 16 / 32 GB	SDHC
Transcend	8 / 16 / 32 GB	SDHC

Specification

Video compression	H.264 and Motion JPEG, dual codec
Resolution	1080P(1920 x 1080), 720P(1280 x 720), D1(720 x 480), CIF(352 x 240)
Maximum frame rate	H.264 : up to 15 fps @ 1920 x 1080 , 30fps @ 1280 x 720 , 30fps @ 720 x 480 Motion JPEG : up to 15 fps @ 1920 x 1080 , 30 fps @ 720 x 480 , 30 fps @ 352 x 240
Streaming	Triple Streaming
Video streaming	RTSP: RTP/HTTP, RTP/TCP, RTP/UDP
Video bitrate	5Mbps to 128Kbps Change frame rate and bitrate on-the-fly CBR/VBR/GOP supported
Security	Base64 HTTP encryption Multiple user access levels with password protection 10 user accounts available
Users	8 simultaneous users
OSD	Text overlay for camera name, date and time
Privacy mask	Four masks
Alarm/motion	Audio detection Motion detection External digital input alarm (applicable for only digital input models) Image upload over FTP and email by above alarm signals
CPU, memory	Embedded SoCARM11 CPU at 528Mhz, 256 MB DDR, 256 MB flash memory
IR cut removable	Auto, day , night, scheduling, day & night models only
Alarm input	TTL input +3VDC to +5VDC, alarm input models only
Alarm output	DC 24V 1A, dry-contact (N.O.), alarm output models only
Maintenance	Firmware update via HTTP, Firmware available at web site
Network interface	10Mbps/100Mbps, RJ-45
Two-way audio	G.711 16Kbits u-Law, audio model only
PC requirement	OS: Windows 2000, Windows XP, Windows Vista, Windows 7 Browser: Windows Internet Explorer 6.0 or above CPU: Intel Pentium 4 1.8GHz or above RAM: 1GB or above
Network protocols	IP, TCP, UDP, HTTP, SMTP, NTP, DDNS, UPnP, FTP, ARP, DHCP, PPPoE, DNS, RTSP, RTCP, Telnet, ONVIF, ICMP
Mobile phone & PDA	Support iPhone, iPad, and Android
System integration	ONVIF and HTTPAPI
CMX	CMX HD 3.6 support
OS	Embedded Linux 2.6.32



MERIT LILIN ENT. CO., LTD
<http://www.meritlilin.com>

66-IP74LASCSE